aromamatic

wax melt electric warmer One Year Guarantee

Aromamatic® Products Pty Ltd guarantees for a period of one year from the date of purchase to replace or repair any electrical components of the Aromamatic® wax melt electric warmer found defective by the manufacturer or their approved agent. This Guarantee does not include replacement of a damaged or broken ceramic bowl or external damage to the electrical cable or plug. The Aromamatic® wax melt electric warmer must only be used with power supply indicated on the base plate. If the supply cord of this equipment is damaged it may only be replaced by a repair shop appointed by the manufacturer. If the base plate has been broken or forcefully removed this Guarantee is void.

Place of purchase:	Date of purchase:
Name:	Phone:

sales@aromamatic.com.au | www.aromamatic.com.au | P: 61 7 5591 5859 Aromamatic Products Pty Ltd PO Box 840 S.B.C. Southport QLD 4215 Australia

Product Features

- · Safe to handle when in use
- No ongoing cost of tea lights or light bulbs
- Eliminates the volatile naked flame
- Cost less than 9 cents a day when operated continuously
- Temperature does not vary when left on 24/7
- Only the recessed area of the warmer emits heat
- · Will not over heat and remains cool to the touch
- Fully insulated internal wiring system
- Rated at less than 10 watts of power
- Warmer does not require water to assist melting process
- Easy to clean and maintain after use
- One Year Guarantee on all electrical components
- Ideal for any location or environment





WAX MELT electric warmer

The safe and efficient way to enjoy the aroma of your favourite wax melts

Guarantee & Instruction Card

aromamatic

Wax Melt electric warmer

Your guarantee of a Safe, Reliable & Efficient product

The Aromamatic® Electric Wax Melt Warmer has been professionally designed to operate at a lower temperature than any similar apparatus which relies on either the naked flame or light bulb, eg: halogen lamps to provide its heat source. The safe operating temperature of the warmer, allows your Wax Melt to gently dissolve into liquid, revealing its delightful scent, and avoids the risk of burning your melts.

The self-regulating temperature of the Warmer does not vary when power is left on and remains constant at all time. The Warmer's gentle temperature is warm enough to melt but not hot enough to burn your wax melts.

Instructions

Plug the Wax Melt Warmer into a standard electrical outlet and turn the power on. Please allow up to 15 minutes for the warmer to reach full operating temperature. Then simply add your favourite wax melt tart to the bowl. Take care not to overfill the Warmer as spilled wax may damage some surfaces. Water is not required to assist with the melting of Wax Melts.

How to Use

Remove all labels and packaging from your favourite Wax Melt or Tart and add to the bowl - do not overfill the bowl. The dissolving time of individual wax melts will vary with different products.

To remove used wax melts, ensure the melt has cooled and hardened before gently dislodging it from the Vaporizer. Wipe clean with a damp cloth and replace with a fresh melt/tart as desired.

Visit the website for more details www.aromamatic.com.au

Customer Assistance Guide

- Q. Why don't I use water?
- A. Wax Melt/Tarts do not require water to assist the dissolving/melting process.
- Q. How long will the wax melt last?
- A. Please refer to the manufacturer's packing for details.

To establish whether the Wax Melt Warner is heating correctly please, do the touch test.

The Touch Test

Turn the warmer on and allow it to reach full operating temperature. This will take around fifteen minutes. Lightly touch the centre bowl with your fingers.

If it is warm to the touch and you cannot leave your fingers in the bowl, the warmer is heating and working correctly.