

# Instructions

Before you connect the power supply to the wall socket follow these steps:

1. Plug the power supply into the base of the diffuser, ensuring the cord is sitting flat.



2. Remove the top of the diffuser by holding the base of the diffuser and gently twist the top cover to detach from the base unit.



3. Place the base unit of the diffuser on a stable flat surface. Using the measuring cup provided, add up to 300ml of cold tap water to the mark indicated on the side of the water reservoir.



Do not exceed the water level when filling the water tank.

Use only cold tap water. Never use warm or hot water.

4. Add a few drops of your favourite pure essential oil or essential oil blend to the water tank.



Use only pure essential oils or blends as any other oils may contain impurities that will affect the diffuser operation and nullify any warranty claims for faulty operation.

5. Gently place the cover back on top of the base unit.



Do not move or open the diffuser during operation.

Once you have completed the above steps, connect the diffuser to the power supply and turn on at the power point. Ensure the diffuser is out of the reach of children and pets.

**General Warning: Do not operate the diffuser in any area in the home or office where the diffuser mist may directly contact valuable furniture or electrical devices, e.g. computers, TV, mobile phones, etc.**

## Mist Operation

To switch on the mist operation, press the “Mist” button.

### MIST TIMER SETTINGS

Press the “Mist” button once and you will hear a beep and the mist will run for 60 mins (1 hr)

Press the button a 2nd time for 120 mins (2 hrs) of mist operation

Press the button a 3rd time for 180 mins (3 hrs) of mist operation

Press a 4th time and the diffuser mist operation will go for up to 10 hrs.

When changing the mist timing mode, you will hear a single beep.

The diffuser will automatically shut off when the settings have timed out and a beep will sound.

When the water level is low in the water tank, the unit will immediately switch off, even when the power is connected.

At any time, if you press the mist switch for longer than one second, it will turn off.

**NOTE:** If the water tank is empty the diffuser will not start and you will hear a beep.

# AROMAMIST®

## ENRICH YOUR LIFE

Colour  
changing  
lights



## Light Operation....

The light operates independently to the mist and may be used together or separately.

To switch on the light operation, press the “Light” button.

**MULTI-LIGHT COLOUR MODE:** Press the “Light” button once you will hear a single beep.

The LED lights will rotate through their colour cycle, changing from soft tones to bright tones.

**SINGLE COLOUR MODE:** To choose a single colour, press the light button on the colour of your choice.

To change your choice, press the button again cycling through the colours to choose another option.

**WHITE COLOUR MODE:** Follow the single colour mode instructions until you reach the white colour.

To change from single mode to multi-light mode, you will need to turn off the light.

To turn OFF the light, press and hold the “Light” button, until you hear a beep.

*Colour changing lights*

## Cleaning & Maintenance....

**The diffuser MUST be cleaned at regular intervals to remove impurities and residue to ensure the correct operation of the unit.**

1. Turn off the power point and unplug the cord from the base of the unit.
2. Add a 1 teaspoon of Citric Acid to 100ml lukewarm water into the water tank and allow to stand for 5 minutes. (*Citric Acid is available in leading supermarkets*)
3. Empty the lukewarm water solution from the **Drain Side** of the tank.
4. Add 80ml of lukewarm water and lightly rinse, taking care not to splash the water.
5. If further cleaning is still required, repeat steps 2-4.
6. Set aside and allow the unit to dry before re-using.
7. To clean the top cover of the diffuser, simply rinse it with lukewarm water and dry with a soft cloth.

**NOTE:** Avoid using any cleansing agents with either the top or base unit. NEVER immerse base unit in water.

## Precautions

Do not switch on power when the tank is empty

Do not touch the Ultrasonic vibration plate

Always unplug from the power supply before any maintenance is performed

Keep away from direct sunlight and heat sources

Do not tip the Diffuser during operation as it may cause water to enter the mechanism and cause the unit to malfunction

The amount & intensity of mist produced will vary, this is not unusual and should not be considered as a fault. Factors that affect this include water type, humidity, temperature, air currents

Do not touch any part of the product with wet hands while in use

Do not fill water tank directly from the tap, always use the measuring cup supplied

In the event of the unit being knocked over or tipped during use, unplug the Diffuser, remove the top cover and pour out any remaining water. Shake gently to drain any remaining water and allow to dry completely before using again.

## Warranty

Aromamatic Products Pty Ltd guarantees the Mist Diffuser for a period of one year from the date of purchase if found defective by the manufacturer or their approved agent.

This Guarantee does not include replacement of a unit damaged or broken by internal or external damage, or to external damage to the power adaptor, electrical cable or power plug. Incorrect use of the Mist Diffuser will nullify any warranty claim.

Please return the Mist Diffuser to the place of purchase with your receipt to validate a warranty claim.

**www.aromamatic.com.au**  
**Aromamatic Products Pty Ltd**  
**P O Box 840 S.B.C. Southport Qld 4215, Australia**

Specifications	Contents
Dimensions: 16 cm W x 17.5 cm H	a) Power Supply
Unit Weight: 400gm + Plus Adaptor	b) Diffuser Cover
Power Input: 100/240V AC – 50/60Hz	c) Diffuser Unit Base
Power Output: 24V DC 2.4 MHz 13 Watts	d) Measuring Jug
Tank Capacity: 300mls	