

BLITZ


HAND MIXER

INSTRUCTION MANUAL




PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USE

FEATURES

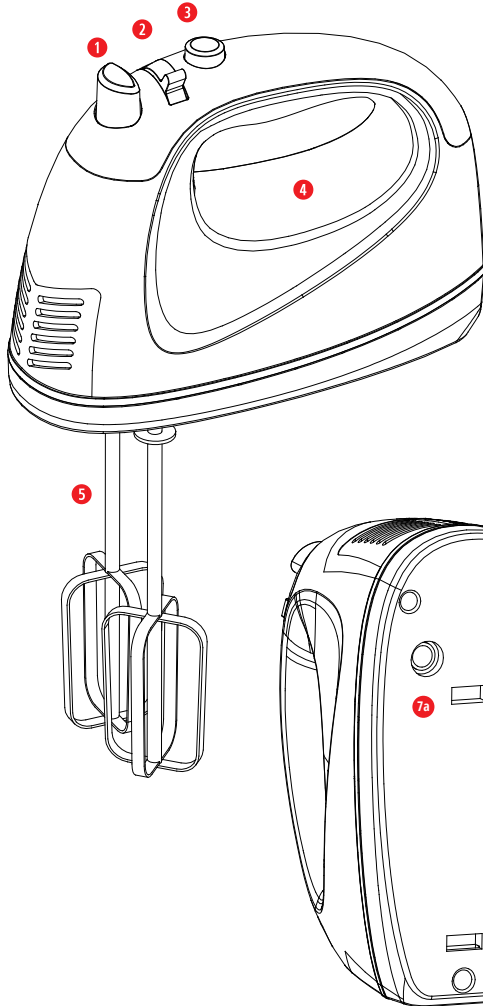

- 1 Release button
- 2 Speed selector
- 3 Turbo speed button
- 4 Motor unit
- 5 Beaters
- 6 Dough hooks:
 - 6a Right dough hook (with metal collar)
 - 6b Left dough hook
- 7 Attachment insertion openings:
 - 7a O-opening (right)
 - 7b D-opening (left)

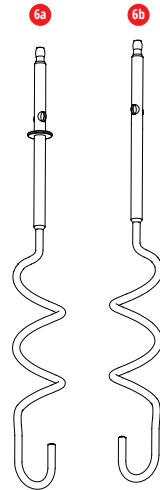

Due to sharp parts and potential hazards, this appliance should not be used by children under 16 years old unless supervised by an adult.

Please keep the appliance and mains cable out of the reach of children. This is not a toy!

If used by persons with reduced physical, sensory or mental capabilities, instruction and supervision must be given to understand the use of the appliance and the hazards involved.

Always disconnect the appliance from the power socket if it is left unattended and before assembling, disassembling or cleaning.

If the mains cable is damaged, it must be replaced by qualified persons in order to avoid any hazards.

IMPORTANT SAFEGUARDS

Do not use the appliance in a bathroom, near water, or outdoors. Do not operate the appliance with wet hands or bare feet.

Do not immerse any of the parts (appliance, mains cable, plug) in water or other liquids during use to protect from fire, electric shock and personal injury.

Do not use the appliance if it is damaged or malfunctioning.

Do not leave the appliance unattended whilst in use. Use and store it out of reach of children.

Keep hands, hair, clothing, and handheld spatulas and other utensils away from beaters 5 or dough hooks 6 during operation to reduce the risk of injury to persons and damage to the appliance.

- This appliance is intended for household use only.
- Ensure that the appliance is always placed on a firm and flat surface, away from any edges of the worktop. Do not place the appliance onto a metal tray or metal surface whilst in use. Do not place the appliance on, or near, a hot gas or electric burner or in a heated oven.
- Keep the appliance and mains cable away from the edges of worktops and out of reach of children. Route the mains cable so it does not overhang, and cannot be tripped over or caught.
- Do not let the mains cable run across an open space, such as between a low power socket and a table, or across any hot area, such as a cooker. Heat may damage the mains cable.
- The connections on both sides of the mains cable (the appliance and the power socket) should never be strained. If the mains cable is damaged it must be replaced by a qualified person or service to avoid any hazards.
- This appliance must not be operated by an external timer or a remote control system.
- Ensure the beaters 5 or dough hooks 6 are securely locked in place before operating the appliance.
- Switch off the appliance and unplug from the electrical outlet before changing attachments or approaching parts that move while in use. Unplug the appliance when not in use.
- Ensure that the appliance has come to a complete stop before cleaning and storing away. Keep the attachments, motor unit 4, mains cable, and plug away from sources of heat. Store in a dry place.

- Do not use this appliance for any other purpose than its intended use.
- Only use the attachments supplied with this appliance to prevent injury or damage.
- Read all operating instructions before using the appliance.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

BEFORE FIRST USE

All parts that come in touch with food are to be thoroughly cleaned before being used for the first time (see section on Cleaning).

ASSEMBLY

- Turn the speed selector 2 to 0 then insert the beaters 5 into openings 7 on the motor unit 4 and gently push until they click in place.
- To insert the dough hooks 6 ensure that they are inserted in their respective openings - the right dough hook 6a (with a metal collar) must be inserted into the right opening 7a and the left dough hook 6b into the left opening 7b.

USING THE HAND MIXER

- Assemble the hand mixer according to the ingredients you intend to use (see the table). Ensure the speed selector 2 is in the 0 position and plug the cord into the electrical outlet.
- Lower the beaters 5 or dough hooks 6 into the ingredients and switch the appliance on by turning the speed selector 2 to position 1 and gradually increase speed by turning the Speed Selector 2.
- For extra power, press and hold the turbo speed button 3 and release it to return to previously selected speed.
- To temporarily stop mixing, switch the appliance off by turning the speed selector 2 to 0 position and place it on its heel rest.
- When mixing is finished, turn the speed selector 2 to 0 position to switch the appliance off and unplug the mains cable from the power socket.
- To remove or change attachments, position the motor unit 4 over a bowl or sink, turn the speed selector 2 to 0 then firmly press the release button 1.

CLEANING

The attachments should be thoroughly cleaned and dried after every use. Always make sure that the appliance is unplugged before you attempt cleaning. Never immerse any part of the motor unit 4 in water or rinse it under the tap.

- Turn the speed selector 2 to 0 to switch the appliance off and unplug the cord from the electric outlet.
- Press the release button 1 to release the attachments from the motor unit 4.
- Wash the beaters 5 or dough hooks 6 with warm soapy water or in dishwasher. Dry thoroughly before storing.
- Wipe the motor unit 4 with a damp cloth and immediately dry with a soft dry cloth. To clean stubborn spots, wipe the surface with a cloth dampened in warm soapy water or a mild, non-abrasive detergent, then dry thoroughly.
- Do not use any abrasive cleaners or harsh brushes or sponges on any part of the Hand Mixer to prevent scratching of the surface.

SPECIFICATIONS

Rated Voltage:	220-240V~
Frequency:	50/60Hz
Rated Power:	300W

ELECTRICAL

The product must not be used without the fuse cover fitted.

Should the power cable or the power plug become damaged, arrange for these to be replaced by Customer Service or a qualified person before continuing to use the appliance. The appliance is fitted with a 3A fuse (BS1362) in a 3A plug (BS1363).

This appliance must be earthed.

ENVIRONMENTAL

To reduce environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with the symbol below must not be disposed of with unsorted municipal waste. Please repair, reuse or recycle appropriately.



SERVICE

The product is not user-serviceable. If it is not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it is still not working, consult your retailer.

If that does not solve the problem ring Customer Service – they may be able to offer technical advice. Please have the Model Number to hand, as they will not be able to help you without it.

If you are advised to return the product to us, pack it carefully, include a note with your name, address, day phone number, and description of the problem.

If under a guarantee, say where and when it was purchased and include a valid VAT receipt. Send it to SQ Professional Ltd.

GUARANTEE

The guarantee for this product is covered by SQ Professional Limited. Any faults with this product arising through a manufacturer defect will be covered for 1 year from the date of purchase, subject to a valid vat receipt being presented. This does not include faults or damage caused by misuse of general wear and tear. SQ Professional Ltd will not be held liable for general wear and tear, or eventual damages to persons, animals or objects caused by incorrect installation or deriving from improper, erroneous or unreasonable use.

Please contact customer services on 01992 716 070 or send an e-mail to info@sqprofessional.com, Monday to Friday from 09:30 - 17:30.

This does not affect your statutory rights.



SCAN THE QR CODE TO EXPLORE
OUR FULL PRODUCT RANGE.

Voltage Business Centre, Units 1 - 3
6 Mollison Avenue, Enfield, EN3 7XQ
T: 01992 716 070 | F: 01992 700 538 | info@sqprofessional.com

WWW.SQPROFESSIONAL.COM



All images are for illustration purposes only. Actual products may vary.