

INSTRUCTION MANUAL MEGARANGE



BLENDER &GRINDER

BEFORE OPERATING THIS UNIT, PLEASE CAREFULLY READ THE FOLLOWING INSTRUCTIONS. MGIM 9366-9367-9368 09-08/2022 V4

TABLE OF CONTENTS

GE 3 GE 4
or /
GE 4
ge 5
ge 5
ge 5
GE 6
GE 6
GE 6
GE 7
GE 7
GE 7
GE 7

IMPORTANT!

Due to hot parts and potential hazards, this appliance is not suitable for the use of children under 16 years old.


When off please keep the appliance and mains cable out of the reach of children.

Children under the age of 16 must be supervised by an adult at all times when using or cleaning the appliance. This is not a toy!

The appliance can be used by persons with reduced physical, sensory or mental capabilities if they have been given supervision and instruction and understand the use and hazards involved.

Always disconnect the appliance from the power socket if it is left unattended and before assembling, disassembling or cleaning.

If the mains cable is damaged, it must be replaced by qualified persons in order to avoid any hazards.

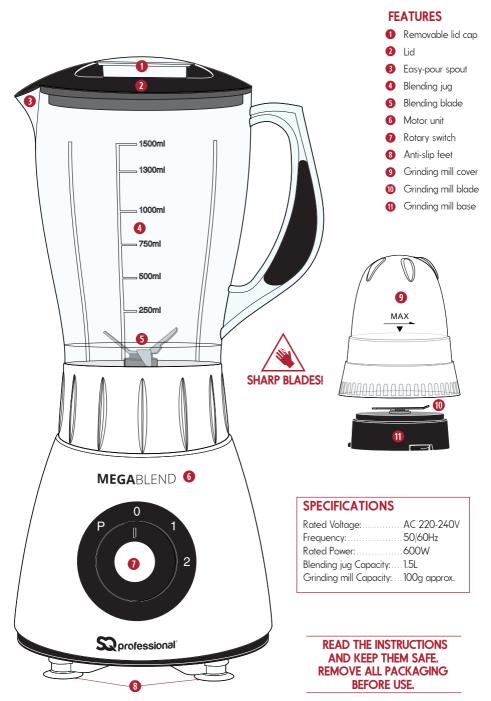

IMPORTANT SAFEGUARDS

WHEN USING ANY ELECTRICAL APPLIANCE, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

- Read all instructions carefully before using the appliance.
- 2 This appliance is intended for household use only. It is not suitable for commercial use such as staff kitchen areas and other working environments.
- 3 Ensure that the appliance is always placed on a firm and flat surface, away from the edge of the worktop. Do not place the appliance onto a metal tray or metal surface whilst in use. Do not place the appliance on, or near, a hot gas or electric burner or in a heated oven. Do not operate the appliance with wet hands or bare feet.
- 4 Keep the appliance and mains cable away from the edges of worktops and out of reach of children. Route the mains cable so it does not overhang, and cannot be tripped over or caught.
- 5 Do not let the mains cable run across an open space, such as between a low power socket and a table, or across any hot area, such as a cooker. Heat may damage the mains cable.
- 6 The connections on both sides of the mains cable (the appliance and power socket) should never be strained. If the mains cable is damaged it must be replaced by a qualified person or service to avoid any hazards.
- 7 Do not use the appliance in a bathroom, near water, or outdoors. Do not immerse any of the parts (appliance, mains cable, plug) in water or other liquids to protect against fire, electric shock and personal injury.
- 8 Do not use the appliance if it is damaged or malfunctioning. Do not leave the appliance unattended whilst in use. Use and store it out of reach of children.
- 9 This appliance must not be operated by an external timer or a remote control system.
- 10 SQ Professional Ltd will not be held liable for eventual damages to persons, animals or objects caused by incorrect installation or deriving from improper, erroneous or unreasonable use.
- The connector (on the bottom of the blending jug or grinding mill base (0), and transmitter (on top of the motor unit (3) should always be kept dry.

- 12 Before washing and drying, disconnect the power supply; ensure that the connector and transmitter are completely dry before you reconnect the appliance to power supply.
- 13 Ensure the lid ② or the grinding mill cover ③ are securely in place and the blending jug ③ or the assembled grinding mill are correctly locked onto the motor unit ③ before operating the appliance.
- 14 Do not switch on the appliance when it is empty. Ensure there is the at least a minimum amount of liquid or solid ingredients in the blending jug or grinding mill.
- 15 Always ensure the lid *is* closed, or have the grinding mill securely placed and locked onto the motor unit *is* before you switch the appliance on.
 Do not open the lid *is* or attempt to open the grinding mill whilst the appliance is running.
- 16 Keep hands and utensils out of the blending jug while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but only when the blender is not running.
- 17 The blade () is extremely sharp. Handle carefully.
- 18 Always switch off the appliance and unplug the mains cable from the power socket before changing attachments or approaching parts that move while in use. Unplug the appliance when not in use.
- 19 Ensure that the appliance has come to a complete stop before cleaning and storing away. Keep the attachments, motor unit ⁽⁶⁾, mains cable, and plug away from sources of heat. Store in a dry place.

20 Do not use the appliance for any other purpose than its intended use.

21 Use the blending jug () or grinding mill only with the motor unit () supplied (and vice versa) and do not tamper with the connector in any way.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE!

BEFORE FIRST USE

ALL PARTS OF THE BLENDER OR THE GRINDING MILL ARE TO BE THOROUGHLY CLEANED BEFORE BEING USED FOR THE FIRST TIME (SEE SECTION ON CLEANING).


Ensure that the rotary switch **1** is turned to **0** and mains cable unplugged from the power socket.

ASSEMBLY OF THE BLENDER

- A Mount the blending jug 4 on the motor unit.
- B Align the triangle ▼ on the blending jug ④ with the open lock symbol on the side of the motor unit ⑤.
- C Turn the blending jug ④ anti-clockwise to align the triangle ▼ with the closed lock symbol ⓓ on the motor unit ❻.
- D Place the lid 2 on top and push down firmly. To insert the lid cap 1, align its protrusions with the


groves on top of the lid **Q**, push down and turn clockwise until it locks in place. To remove the lid cap **1** turn it counter-clockwise and lift it.

E Once finished blending, switch the appliance off and unplug the mains cable from the power socket. Turn the blending jug **4** anticlockwise to unlock it and carefully lift it from the motor unit **6**.

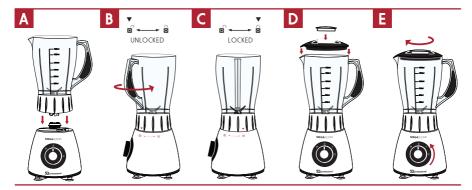

ASSEMBLY OF THE GRINDING MILL

- F Turn the grinding mill cover ⁽¹⁾ upside-down and fill it with the dry ingredients. Do not fill above the **MAX** mark.
- G Turn the grinding mill base ① upside-down and insert it into the grinding mill cover ④, aligning the groves and protrusions on the grinding mill base ① with those on the inside of the grinding mill cover ④. Holding the grinding mill cover ④ firmly, turn the grinding mill base ① clockwise until it locks in place. Ensure the grinding mill cover ④ is securely fit.
- H Mount the assembled grinding mill aligning the triangle ▼ under the MAX mark on the grinding mill cover ③ with the open lock symbol ⑤ on the side of the motor unit ⑥.
- I Turn the assembled grinding mill counter-clockwise until it clicks and the triangle ▼ under the MAX mark is aligned with the closed lock symbol on the motor unit o.
- J After grinding is finished, switch the appliance off and unplug the mains cable from the power socket. Detach the grinding mill from the motor unit 6 by turning it anti-clockwise.

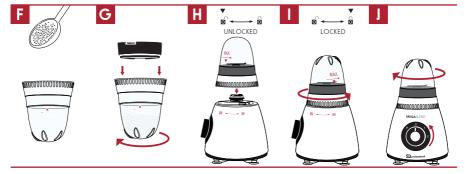

USING THE BLENDER OR GRINDING MILL

Ensure that the rotary switch **0** is turned to **0** and mains cable unplugged from the power socket.

BLENDER

- 1 Assemble the blender and remove the lid 2.
- Place the ingredients into the blending jug () and attach the lid ().
- 3 Remove the lid cap 1 to pour the liquids through the opening then place it back before you start blending.
- 4 Plug the mains cable into the power socket and turn the rotary switch 10 to desired speed to switch the appliance on.
- 5 If blending warm liquids or ingredients always ensure that they are cooled down before blending. Do not fill the glass jug over 1000ml mark.
- 6 Always stabilise the blender or grinding mill by placing your hand on top of the lid when operating the appliance.
- 7 For stirring solids or very thick liquid ingredients we recommend that you use the blender in **PULSE** mode to prevent the blades from becoming stuck.

GRINDING MILL

- 1 Assemble the grinding mill and mount it onto the motor unit **6**.
- Place one hand on top of the grinding mill to stabilise it and turn the rotary switch 10 to desired speed.
- 3 Grind until the desired consistency has been reached. Do not exceed 1 minute of grinding at one time.
- 4 Once the grinding process is finished, detach the grinding mill from the motor unit **3**. Hold it upside down, carefully detach the grinding mill base **1** and scoop the ground ingredients out.

USEFUL TIPS

- To achieve the best results when pureeing solid ingredients, cut them into small pieces first (2-3cm). Place small portions into the blending jug
 then add one by one. DO NOT OVERLOAD.
- When mixing solid ingredients, start off with a small amount of liquid. Gradually add more of the liquid through the opening in the lid **2**.
- Grind in intervals of 30 seconds with a 1 minute pause in between. Repeat the grinding process until you are happy with the grind consistency.
- Experimenting with the length of grinding will enable you to get your preferred grind.
- To yield the best flavour and aroma always grind fresh ingredients. To prolong the freshness store

SPEED SETTINGS

- 1 LOW SPEED for light blending of liquid ingredients.
- HIGH SPEED for heavy blending with solid ingredients and thicker liquids.
- P PULSE (SHORT BURSTS OF VERY HIGH SPEED) for rough blending of solid ingredients and thick liquids, grinding and short, powerful pulse movements (the dial does not permanently engage in the PULSE setting. You have to hold the rotary switch or turn it repeatedly to the PULSE setting).

After using the blender or the grinding mill, always turn the switch to the **0** setting and unplug the appliance from the mains socket.

CLEANING

MOTOR UNIT

NEVER IMMERSE THE MOTOR UNIT IN WATER.

Wipe the motor unit **6** clean with a damp cloth and dry immediately with a soft cloth to avoid scratches and water marks on the surface.

LIGHT CLEANING

BLENDER - empty the blending jug ^① and fill it half way with tepid soapy water. Place the blending jug ^③ on the motor unit ^③ and turn the rotary switch ^② to **PULSE** setting several times, each time holding for a few seconds. Empty the blending jug ^③ and rinse until clean. Dry with a soft, lint free cloth.

GRINDING MILL - wipe the grinding mill base 10 with a damp cloth or sponge, using tepid soapy water, if necessary. Remove any stuck food remnants with a small dish-washing brush. Dry immediately with a soft, lint free cloth. Wash the grinding mill cover 9 with warm soapy water and dry thoroughly.

the coffee beans and the ground coffee in an airtight container in a cool, dry place.

- Freshly ground spices have more flavour and are best when ground just before use. Only grind spice seeds that do not contain moisture or oil such as peppercorn, coriander seeds, mustard seeds and similar.
- Grinding extremely hard, oily, moist or sticky ingredients may damage the appliance. Grains such as corn, wheat, rye and similar may cause damage to the grinding mill cover **9**.
- Nuts contain a lot of oil which will release during the grinding process and clog the grinding mill blades 10.
- NEVER ADD OILS OR LIQUIDS WHILE GRINDING.

THOROUGH CLEANING

BE VERY CAREFUL WHEN HANDLING THE BLENDING BLADE INSIDE THE BLENDING JUG. THE BLADES ARE VERY SHARP.

Ensure that the blending jug **()**, grinding mill base **()** and grinding mill cover **()** are completely empty before cleaning. Use a small dish-washing brush to remove the stuck food around the blades and wash with tepid soapy water.


All parts **except the motor unit (**) can be washed by hand or in a dishwasher. Do not use harsh scourers and aggressive or abrasive detergents.

Ensure that all parts are completely dry before assembling and operating the appliance.

WIRING

THE APPLIANCE MUST NOT BE USED WITHOUT A FUSE COVER FITTED.

Should the mains cable or the power plug become damaged, arrange for these to be replaced by Customer Service or a qualified person before continuing to use the appliance. The appliance is fitted with an ASTA approved 5A fuse (BS1362) in a 5A plug (BS1363).

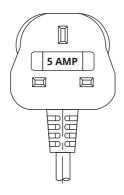

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



SERVICE

The product is not user-serviceable. If it is not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it is still not working, consult your retailer.

If that does not solve the problem ring Customer Service - they may be able to offer technical advice.

Please have the **Model Number** to hand, as they will not be able to help you without it. The model number is stated on the rating label, which is usually found on the bottom of the appliance. If you are advised to return the product to us, pack it carefully, include a note with your name, address, day phone number, and description of the problem.

If under a guarantee, say where and when it was purchased and include a valid VAT receipt. Send it to SQ Professional Ltd.

GUARANTEE

THE GUARANTEE FOR THIS PRODUCT IS COVERED BY SQ PROFESSIONAL LIMITED. ANY FAULTS WITH THIS PRODUCT ARISING THROUGH A MANUFACTURER DEFECT WILL BE COVERED FOR 1 YEAR FROM THE DATE OF PURCHASE, SUBJECT TO A VALID VAT RECEIPT BEING PRESENTED.

THIS DOES NOT INCLUDE FAULTS OR DAMAGE CAUSED BY MISUSE OF GENERAL WEAR AND TEAR.

PLEASE CONTACT CUSTOMER SERVICES BY PHONE ON **01992 716 070** OR SEND AN E-MAIL TO **INFO@SQPROFESSIONAL.COM**, MONDAY TO FRIDAY FROM 09:30 - 17:30.

THIS DOES NOT AFFECT YOUR STATUTORY RIGHTS.



ALL IMAGES ARE FOR ILLUSTRATION PURPOSES ONLY. ACTUAL PRODUCTS MAY VARY.

MEGARANGE



SCAN THE QR CODE TO EXPLORE OUR FULL PRODUCT RANGE.

WWW.SQPROFESSIONAL.COM



VOLTAGE BUSINESS CENTRE, UNITS 1 - 3 • 6 MOLLISON AVENUE • ENFIELD • EN3 7XQ T 01992 716 070 • F 01992 700 538 • E INFO@SQPROFESSIONAL.COM