




ELECTRIC HOT PLATE

INSTRUCTION MANUAL



PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USE.

SQIM 4010-4011 10-01-2024 V9 | © 2024 SQ Professional Ltd

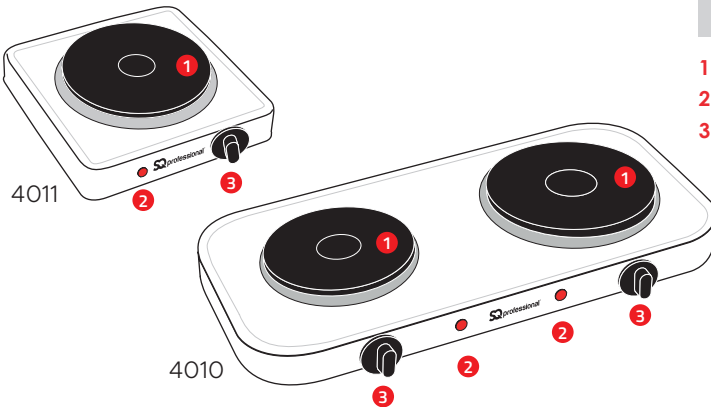

FEATURES

- 1 Hot plate
- 2 Indicator lights
- 3 Heat controller



HOT SURFACE!

Due to hot parts and potential hazards, this appliance should not be used by children under 16 years old unless supervised by an adult.

Please keep the appliance and mains cable out of the reach of children. This is not a toy!

If used by persons with reduced physical, sensory or mental capabilities, instruction and supervision must be given to understand the use of the appliance and the hazards involved.

Always disconnect the appliance from the power socket if it is left unattended and before assembling, disassembling or cleaning.

If the mains cable is damaged, it must be replaced by qualified persons in order to avoid any hazards.

IMPORTANT SAFEGUARDS

Do not use the appliance in a bathroom, near water, or outdoors. Do not operate the appliance with wet hands or bare feet.

Do not immerse any of the parts (appliance, mains cable, plug) in water or other liquids during use to protect from fire, electric shock and personal injury.

Do not use the appliance if damaged or malfunctioning.

Do not leave the appliance unattended whilst in use. Use and store it out of reach of children.

Do not leave the appliance unattended when heating oil.

- This appliance is intended for household use only.
- Ensure that the appliance is always placed on a firm and flat surface, away from any edges of the worktop. Do not place the appliance onto a metal tray or metal surface whilst in use. Do not place the appliance on, or near, a hot gas or electric burner or in a heated oven.
- Keep the appliance and mains cable away from the edges of worktops and out of reach of children. Route the mains cable so it does not overhang, and cannot be tripped over or caught.
- Do not let the mains cable run across an open space, such as between a low power socket and a table, or across any hot area, such as a cooker. Heat may damage the mains cable.
- The connections on both sides of the mains cable (the appliance and the power socket) should never be strained. If the mains cable is damaged it must be replaced by a qualified person or service to avoid any hazards.
- This appliance must not be operated by an external timer or a remote control system.
- If a crack appears on the hot plate ❶, switch off the power supply immediately and do not use the appliance.
- Do not use the hot plate ❶ near or under cupboards, curtains or combustible materials.
- The appliance is designed only for heating and cooking food and must be used only when cookware is placed on the hot plates ❶. The diameter of the cookware should be the same as the diameter of the hot plate ❶.
- Do not touch the surface of the hot plate ❶ when the appliance is in use.
- Read all operating instructions before using the appliance.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

BEFORE FIRST USE

Before using the appliance make sure the mains cable is plugged from the socket and heat controller e is in the 'O' position.

- Cure the hot plates ❶ by turning the heat controller ❸ to the highest setting (position 5) for 5 minutes to burn off their protective coating
- Ensure the room is well ventilated. Switch the appliance off and let it cool completely before wiping any residues from the hot plates ❶.

OPERATING INSTRUCTIONS

- Place cookware on the hot plate ❶ then switch the appliance on by turning the heat controller ❸ clockwise to desired position. The indicator light ❷ will glow while the hot plate ❶ is heating up.
- Turn the heat controller ❸ to the required position (1-lowest temperature, 5-maximum temperature, OFF-switched off), to achieve the desired temperature. The indicator light ❷ will go off when the set temperature is reached.
- When not in use, ensure that the heat controller ❸ is in the **OFF** position and disconnected from the power outlet.
- Use cookware with flat, heavy base to ensure good contact with the hot plates ❶.
- Always place the cookware centrally on the hot plates ❶ and position the handles safely out of the way. Oversized pots which cover both hot plates ❶ will overheat the hob and reduce its working life.

CARE AND MAINTENANCE

- Switch the appliance off, unplug the mains cable from the socket and let the hot plates ❶ cool down completely.
- Mop up any spillage as soon as possible and do not leave it to harden. Wipe all surfaces with a damp cloth and a mild detergent.
- Do not use harsh or abrasive detergents or scourers to avoid scratching the surface.

SPECIFICATIONS

Rated Voltage: AC 220-240V~
Frequency: 50Hz
Rated Power: 4011.....1000W
4010.....2500W (1000W + 1500W)



ELECTRICAL

The product must not be used without the fuse cover fitted.

Should the power cable or the power plug become damaged, arrange for these to be replaced by Customer Service or a qualified person before continuing to use the appliance.

The appliance is fitted with a 13A fuse (BS1362) in a 13A plug (BS1363).

ENVIRONMENTAL



To reduce environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with the symbol below must not be disposed of with unsorted municipal waste. Please repair, reuse or recycle appropriately.

SERVICE

The product is not user-serviceable. If it is not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it is still not working, consult your retailer. If that does not solve the problem ring Customer Service – they may be able to offer technical advice.

Please have the **Model Number** to hand, as they will not be able to help you without it. If you are advised to return the product to us, pack it carefully, include a note with your name, address, day phone number, and description of the problem. If under a guarantee, say where and when it was purchased and include a valid VAT receipt. Send it to SQ Professional Ltd.

GUARANTEE

The guarantee for this product is covered by SQ Professional Limited. Any faults with this product arising through a manufacturer defect will be covered for 1 year from the date of purchase, subject to a valid VAT receipt being presented. This does not include faults or damage caused by misuse of general wear and tear.

SQ Professional Ltd will not be held liable for general wear and tear, or eventual damages to persons, animals or objects caused by incorrect installation or deriving from improper, erroneous or unreasonable use.

Please contact customer services on 01992 716 070 or send an e-mail to info@sqprofessional.com, Monday to Friday from 09:30 - 17:30.

This does not affect your statutory rights.

Images are for illustration purposes only. Actual products may vary.



**SCAN THE QR CODE TO EXPLORE
OUR FULL PRODUCT RANGE.**

Voltage Business Centre, Unit 1
6 Mollison Avenue, Enfield, EN3 7XQ
T: 01992 716 070 | F: 01992 700 538 | E: info@sqprofessional.com

WWW.SQPROFESSIONAL.COM