

SQ[®]
professional



MILK FROTHER

INSTRUCTION MANUAL

PARTS



Balloon Whisk



Frothing Whisk



Brush Head



USB Cable



Motor Base

Battery Power

Speed Indicator

ON/OFF Switch

INSTRUCTIONS

- One button switch control - press the ON/OFF Switch to start the Milk Frother. Press once for low speed, twice for medium speed, and three times for high speed.
- To switch the Milk Frother off, press and hold the ON/OFF Switch for about 2 seconds. The Milk Frother will also switch off if the button is pressed while operating in high speed.
- Use the Balloon Whisk for thicker consistency, such as cream, egg, etc. or Frothing Whisk for liquids. The Brush Head can be used to clean bottles.
- The Milk Frother can be used for frothing hot or cold liquids. Adjust the frothing speed according to achieve ideal froth effect for liquids of different consistencies (milk, coffee chocolate, juice, egg, etc.).

CHARGING

- Built-in lithium battery is easily chargeable with supplied USB cable.
- To charge the Milk Frother use the mobile phone charger, computer or power bank. Output voltage is DC4.5V-DC5.5V.
- Light indicators: red - charging, green - fully charged. The Milk frother can be fully charged in 3-6 hours.
- For safety reasons, this product has multiple protections such as overcharge, over discharge, overload, etc.

PLEASE KEEP THE APPLIANCE AND MAINS CABLE OUT OF THE REACH OF CHILDREN. THIS IS NOT A TOY!
IF USED BY PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, INSTRUCTION AND SUPERVISION MUST BE GIVEN TO UNDERSTAND THE USE OF THE APPLIANCE AND THE HAZARDS INVOLVED.

WHISK REPLACEMENT

Firmly hold the Milk Frother's Motor Base with one hand and the plastic end of the whisk/brush with another hand. Lightly pull the whisk/brush away from the Motor Base to detach it. To replace the whisk/brush, insert the plastic part at the end of the whisk/brush into the Milk Frother Motor Base and press lightly until it clicks.

To avoid bending the whisk's stem, do not use excessive force.

USE & CARE

- Before first use charge the Milk Frother for about 1-2 hours.
- Wash the whisk/brush under running water and air-dry.
- When whisking, use a container with suitable height to prevent splashing of the liquid.
- To clean the Milk Frother Motor Base, wipe it with a damp cloth and dry with a soft, lint-free cloth or kitchen paper. Do not immerse the Motor Base into any liquids.
- Store the Milk Frother in a dry and cool place.
- To extend the life of the lithium battery, always charge it at room temperature. Let the battery fully discharge once monthly, and keep it charged 50% to 100%.

SPECIFICATIONS

Battery Type: 1200mAh rechargeable 18650 lithium battery

Charging voltage: 4.5V-5.5V

Charging current: 0.5A

Charging time: 3-6 hours

ENVIRONMENTAL

To reduce environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with the symbol below must not be disposed of with unsorted municipal waste. Please repair, reuse or recycle appropriately.



All images are for illustration purposes only. Actual products may vary.





Voltage Business Centre • Units 1 - 3 • 6 Mollison Avenue • Enfield EN3 7XQ

T: 01992 716 070 | F: 01992 700 538 | E: info@sqprofessional.com

SGIM 10410 2022-11-17 V1 |
© 2023 SQ Professional Ltd