

7. Make sure the outer surface of the pot and the heater is clean and dry before plugging in.
8. Make sure the pot is level , resting in the middle of the heater and touching the heating plate before cooking.
9. Do not place objects covering, touching or near to the hot steam vent on the glass lid while cooking.
10. The appliance is only used for the purpose it was designed for.
11. Do not put the pot on any other stove to heat.
12. Do not touch any surfaces when hot.
13. Not for outdoor use.
14. Do not place on or near a hot gas or electric burner, or in a heated oven.
15. Close supervision is required when this appliance is used by children.
16. Do not operate the appliance with a damaged cord or plug after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination and repair.
17. Do not let the power cord hang over the edge of table or counter where it can cause people to trip over.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
19. Children should be supervised to ensure that they do not play with the appliance.
20. It is normal for smoke or smell to be emitted during first use.


Limited Warranty

This unit is warranted against defective materials or workmanship for one year from the date of purchase (warranty is only valid with a dated proof of purchase). The warranty is valid for any manufacturing defects only. This warranty covers operational defects incurred in normal use and does not apply in the case of damage, abuse, mishandling, accident, or failure to follow operation instructions. During the one year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option). Any return of defective merchandise to the manufacturer must be processed accordingly by contacting customer service first to obtain the Return Authorization Number and freight prepaid with proof of purchase. We will not accept any returns of merchandise without an applicable RMA#.

NARITA®

Electric Shabu Shabu and Grill (Multi-Functional Hot Pot)

INSTRUCTION MANUAL

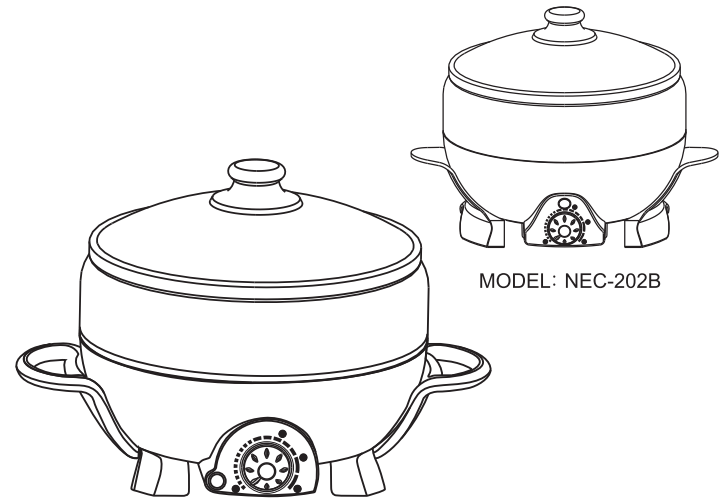

MODEL: NEC-402W


MODEL: NEC-202B

For correct operation, please read the instruction manual carefully before using.

TECHNICAL PARAMETERS

MODEL NO.	VOLTAGE	FREQUENCY	POWER	CAPACITY
NEC-202B	120V~	60Hz	800W	2.0Qt
NEC-402W	120V~	60Hz	1200W	4.0Qt

COMPONENTS

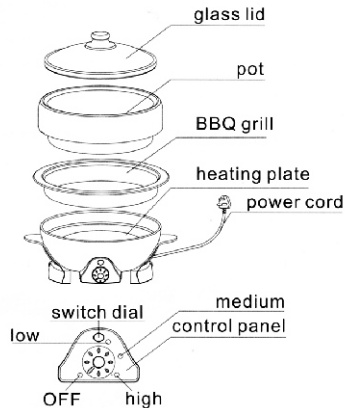

PREPARATION FOR FIRST USE:

1. Check to make sure the appliance is not damaged. In case of any damage, contact your supplier immediately and do not use the appliance.
2. Remove all packaging material.
3. Clean the pot and glass lid with warm water and mild washing liquid. Rinse thoroughly.
4. Position the appliance in such a way that the plug is accessible at all times.

USAGE:

1. Before each operation, check if there are any articles on the surface of the heating plate. Remove if there are any. Ensure the surface of the heating plate is clean and dry.
2. Place the pot on the heating base. Turn right and left to ensure it is level and resting in the middle of the heater. Add soup (water) into the pot and cover the lid.

3. Turn the switch dial to the "OFF" position, and then insert the plug fully into the socket.
4. Turn the dial to the "HIGH" position, the light is on to indicate that the appliance is working with full power. NOTE: After the water or soup is boiling, turn the dial counter-clockwise to the position from "MEDIUM" to "LOW". The indicating light will be off once the water temperature reaches the preset degree. The light will be on again to indicate resumption of the heating process when the water temperature falls below the preset level.
5. Add the food to the pot as soon as the water or soup starts to boil.
6. After using, turn the dial counter-clockwise to the end position "OFF" to ensure the power is off.

CLEANING AND MAINTENANCE:

- a) Before cleaning the appliance, make sure you remove the plug from the main socket. ATTENTION: Never immerse the appliance in water or any other liquid.
- b) Clean the pot and glass lid with water and sponge.
- c) Wipe clean the heating base with a damp cloth. Do not wash the heating base in water.
- d) Dry well before storage.

SAFETY INSTRUCTIONS

Dear Customer:

Please read these instructions carefully before connecting the appliance in order to prevent damage due to incorrect use. Read the below instructions carefully.

1. Ensure that the local voltage fits to the appliance and the socket must be earthed.
2. Make sure the appliance and the plug do not come into contact with water or any other liquid. Should the appliance be dropped in water accidentally, remove the plug from the electrical socket immediately and have the appliance checked by a certified professional. Non-compliance with this may result in peril to life.
3. To prevent electrical shock, do not immerse the appliance, plug or power cord into water or any other liquids.
4. Never switch on the appliance with an empty pan on top of it as this may result in serious damage to the appliance.
5. Operate the appliance on a flat and dry place.
6. Always insert power inlet into the appliance first, then plug in the wall outlet. Unplug from outlet completely when not in use or before cleaning.