




# MULTI-FUNCTIONAL COOKER

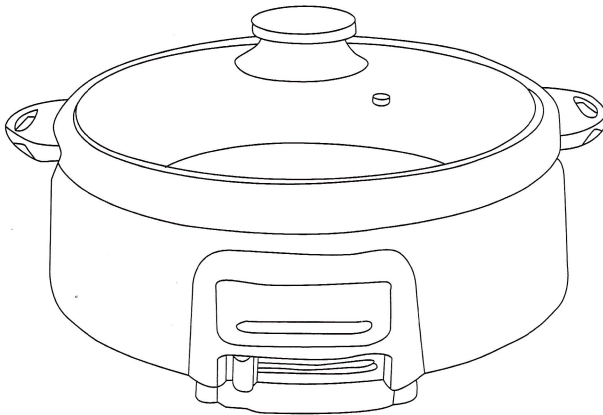

## Instruction Booklet

Model No.: NEC-4000

## A. BEFORE USE

\*Carefully read this instruction manual before use.

1.Place pan into the body.

\*\*When re-using this pan, please remove all leftovers that may be attached to the surface of the hot plate or on the bottom of the pan .Any leftovers not removed will cause the thmperature control to not perform properly.

\*\*Unit must be placed on a flat and even surface.

2.Make sure the switch knob is turned to OFF position.

3.Plug the AC power plug into a wall outlet.

\*\*Unit will not turn on if pan is not placed into body.

## B. USAGE

1.Fill pan with water or soup and turn the switch knob to the suitable position. Cover lid  
(Caution: pan will not work if empty)

2.Indicating light will blink when in use.

3.Adjust temperature accordingly.

## C. AFTER USE

Turn witch knob to OFF position, unplug AC power plug from outlet.

## PRECAUTIONS

1.Do not use a metallic spatula or any sharp edge tools. Because the cooking surface of the pan is treated with a non-stick fluorine coating, if scratched, the coating may peel off.

2.Do not place unit on low heat resistant surface.

3.When cooking and removing the lid, be careful of hot steam

4.Do not place unit on the following:

- Uneven surface

- Unstable surface

- Next to , or nearby, anything producing high heat, such as the gas range

5.When in use, do not let the body plastic or pan fall and collide.

6.After use, wait until the unit cools down before removing the pans and cleaning.

7.Pan can be used and cooked separately on a gas range. NOTE:do not place empty pan on a burning gas range, this will destroy the pan.

8.Do not place and use any other equipment on the body, including pans from other brands or kettles.

9.When in use,dedicate only one outlet for the electric multi cooker. Do not use extension cord with multiple outlets or share one outlet with other appliances or devices.

10.Do not bend or manipulate the power cord, which may damage the wires inside.

11.When unplugging the power cord, pull by the plug.

12.If the AC power cord included with this unit is damaged,do not use. And do not substitute with an unknown cord, please contact the manufacturer for a replacement cord.

NOTE: when using this product for the first time ,please be advised that some smoke and odor will be produced, This is normal and not a defect in the unit.

## IMPORTANT SAFEGUARDS

- 1.Read all instructions.
- 2.Do not use the appliance for anything other than its intended use.
- 3.Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn the temperature control to "off" position, then remove plug from wall outlet.
- 4.Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- 5.Do not touch hot surfaces, Use oven gloves when removing the lid or handling the cooking pot or knobs.
- 6.Close supervision is necessary when any appliance is used by or near children.
- 7.To protect against electrical shock do not immerse cord, plugs in water or other liquid.
- 8.Do not place on or near hot gas or electric stoves or in a heated oven.
- 9.Do not use outdoors.
- 10.Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- 11.The use of accessory attachments not recommended by the appliance manufacture may cause injuries.
- 12.Do not let cord hang over edge of table or counter or touch hot surfaces.
- 13.Extreme caution must be used when moving an appliance containing soup or other hot liquids.
- 14.A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- 15.Longer extension cords are available and may be used if care is exercised in their use
- 16.If a longer extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance and the cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children tripped over unintentionally.
- 17.This appliance has a polarized plug(one blade is wider than the other).To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- 18.The temperature of accessible surfaces may be high when the appliance is operating. Do not touch hot surfaces.
- 19.Household Use Only.
- 20.CAUTION:TO REDUCE THE RISK OF ELECTRIC SHOCK, COOK ONLY IN REMOVABLE CONTAINER.
- 21.WARNING: this appliance should be operated according to this instruction manual, any other servicing should be performed by an authorized service representative.
- 22.Use extreme caution when removing hot pot.

**SAVE THESE INSTRUCTIONS!**

## LIMITED WARRANTY

This unit is warranted against defective materials or workmanship for 1 year from the date of purchase. The warranty is valid for any manufacturing defects. This warranty covers operational defects incurred in normal use and does not apply in the case of damage, abuse, mishandling, accident, or failure to follow operation instructions. Narita shall have no responsibility for any damages incidental to defective equipment and its sole responsibility shall be for the repair or replacement as indicated, except for shipping and handling costs. There are no implied or expressed warranties of fitness or merchantability which extend beyond the above warranty. Returns under this warranty must be accompanied with a check for \$ 10.00 to cover shipping & handling.

Note: Any unit for reimbursement or repairing should be send back with original complete box to the authorized service representative.

Webite: [www.naritausa.com](http://www.naritausa.com)