



ELECTRIC SINGLE BURNER

NHP-502

INSTRUCTION MANUAL

www.naritausa.com

IMPORTANT SAFEGUARDS

When using electrical appliance, basic safety precautions should always be followed including the following:

- 1. DO READ THESE INSTRUCTIONS BEFORE USING YOUR BURNER AND RETAIN THEM FOR FUTURE REFERENCE, ALWAYS FOLLOW THEM CAREFULLY.**
2. Check the voltage in your wall outlet is corresponding with that of your burner. And the wall outlet is properly grounded.
3. Do not touch hot surface, Use handles or knobs. As the hotplate is liable to get hot very quickly after start.
4. To protect against electrical shock, do not immerse cord, plug, or the whole unit in water or other liquid.
5. Close supervision is necessary when the appliance is used by or near children.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
7. Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, electrical repair, mechanical or adjustment.
8. The containers used for the heating on the burner must be a flat bottom. It is recommended the bottom of pan with the similar size of burner.
9. Use extreme caution when removing tray or disposing of hot grease.
10. The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electrical shock or injury.
11. Do not use outdoors.
12. Do not let cord hang over edge of table or counter or touch hot surface.
13. Do not attempt to move the burner neither until completely cooled down nor whilst pan(s) are stood on them.
14. Do not place on or near a hot gas or electric burner or in a heated oven.
15. Do not place the unit near the cloth such as curtain in order to prevent fire.
16. To disconnect, turn any control to "OFF", then remove the plug from wall outlet.
17. Do not use the appliance for other than intended use.
18. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
19. Always attach plug to appliance first, then plug cord into the wall outlet.

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

POWER CORD

1. This Appliance has polarized plug (one blade is wide then the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If still does not fit, contact a qualified electrician. Do not modify the plug in any way.
2. A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
3. Extension cords are available and may be used if care is exercised in their use.
4. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, the extension cord should be a grounding-type 3-wire cord, and the long cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

BEFORE USE

- 1.1 Position the appliance on the horizontal flat surface and ensure the controls are in the "OFF" position. The work surface must be heat resistant, dry and approximately 30(75cm) high. A gap of at least 2(5cm) must be left around the sides of the appliance, since the sides of the appliance may become hot during use.
- 1.2 When using the burner for the first time, the invisible protective coating may still not be removed. It may or may not be have come smoke, but it is normal reaction.
- 1.3 Ensure there are not foreign articles such as water, foot on the heating plates before switch on.
- 1.4 The cooking plate are now ready for use.

USAGE

2. 1 Always use flat-bottomed saucepans/containers which make good contact with the burners.
2. 2 The electric stove(s) have a range of temperatures, use the lower heat setting (0 to 3) for simmering and gentle heating and the high settings 4 to MAX for boiling.
2. 3 Due to the electric stove(s) construction, a certain amount of residual heat will remain after switching off. This may be used to keep some foods warm for a short period, eg. Dry off rice or potatoes.
2. 4 Close supervisory is required when the hotplate is in operation during cooking. As the water in the container may boil over substance in the container may burn.
2. 5 Once the cooking is over, turn the witch to "OFF" position.

CAUTION

SWITCH ON THE BURNER WITHOUT CONTAINER ON TOP WILL DAMAGE THE PRODUCT.

MAINTENANCE & CARE

4. 1 BEFORE ATTEMPTING ANY CLEANING-FIRST ENSURE THE PLUG IS REMOVED FORM THE MAINS SOCKET.
4. 2 DO NOT IMMERSE THIS APLLIANCE IN WATER.
4. 3 All the surfaces may be cleaned simply by wiping over with a soft, damp cloth, for hand stains, we recommend using a non-scratch cream cleanser.
4. 4 DO NOT USE HARSH ABRASIVE CLEANSERS.
4. 5 The steel surround to the burner may be cleaned using a metal cleaning agent. For ease of cleaning it is recommended that food spillage be removed with a damp Cloth while the burner is still warm, but not hot, TAKE CARE DO NOT TO BURN YOURSELF WHEN CLEANING.
4. 6 The burner should have a cleaner/protector applied ever month.
4. 7 If any problem has been found to the appliance, never disassemble it for self-repairing. No user serviceable parts inside .Contact the authorized service facility for examination and repair.
4. 8 Any other servicing should be performed by an authorized service representative.

LIMITED WARRANTY

This unit is warranted against defective materials or workmanship for 1 year from the date of purchase. The warranty is valid for any manufacturing defects. This warranty covers operational defects incurred in normal use and does not apply in the case of damage, abuse, mishandling, accident, or failure to follow operation instructions. Narita shall have no responsibility for any damages incidental to defective equipment and its sole responsibility shall be for the repair or replacement as indicated, except for shipping and handling costs. There are no implied or expressed warranties of fitness or merchantability which extend beyond the above warranty.

Any return of defective merchandise to the manufacturer must be processed accordingly by contacting customer service first to obtain the return authorization number.

This warranty valid only in the United States, excluding Alaska, Hawaii and Puerto Rico.

Website: www.naritausa.com