



Instruction Manual



Electric Hot Pot with Steamer

NPC-1801W

Please read this manual thoroughly before operating this unit.

This unit must only be serviced by the authorized center.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to Narita USA for examination repair or adjustment. See Warranty.
7. The use of accessories or attachments not recommended by Narita USA may cause hazards.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "OFF", then remove plug from wall outlet.
13. CAUTION: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires or other damages to persons or property.
14. This appliance generates steam. Do not operate uncovered.
15. Do not leave unit unattended while in use.
16. This appliance is for Household Use Only. Do not use appliance for other than intended use.
17. Do not place the hot pot on other heat sources (e.g. cooking stove). It may become deformed.
18. Do not block steam vent holes.
19. During or immediately after cooking, the area near the Steam Vent Hole is kept at high temperature. To avoid burns, do not touch this area.

SAVE THESE INSTRUCTIONS / HOUSEHOLD USE ONLY

BEFORE FIRST USE

Before using for the first time, it is recommended to clean the interior of the hot pot thoroughly. Please follow the procedures below before using the hot pot:

1. Read all instructions and important safeguards.
2. Remove all packing materials and make sure that the product has been received in good condition.
3. Take care to keep the electrical components on the exterior of the hot pot dry, wipe the interior of the hot pot with a damp cloth. If your hand will not fit inside the hot pot, swish warm, soapy water around in the interior of the hot pot with the lid closed.
4. Rinse out the inside of the hot pot thoroughly with water.
5. With a damp cloth, gently wipe off the exterior of the hot pot. Do not wipe off electrical components as this may cause damage to the unit.
6. Dry all parts completely.
7. It is recommended to run your hot pot through one boiling cycle before using it to consume beverages. Following the instructions in Boiling Water on page 8, boil one hot pot of water. When water has boiled, pour it out and rinse the inside of the hot pot once more. The hot pot is now ready for use.

HOW TO CLEAN

1. Wipe the exterior of the hot pot with a damp cloth, taking care to avoid the electrical components.
2. Clean the interior of the hot pot with a soft sponge and warm, soapy water. If your hand does not fit in the lid opening, swish warm, soapy water around inside the hot pot with the lid closed.
3. Rinse any remaining soapy water from the hot pot.
4. Drain.


BRIEF INTRODUCTIONS:

Thank you for purchasing the Narita Electric Hot Pot with Steamer. Please follow these simple tips to get the maximum performance and satisfaction from this appliance. Use according to our instructions and it will give you years of trouble-free enjoyment.

SPECIFICATION

MODEL	RATED VOLTAGE	RATED FREQUENCY	POWER CONSUMPTION	CAPACITY
NPC-1801W	120V	60Hz	600W	1800mL


PARTS IDENTIFICATION

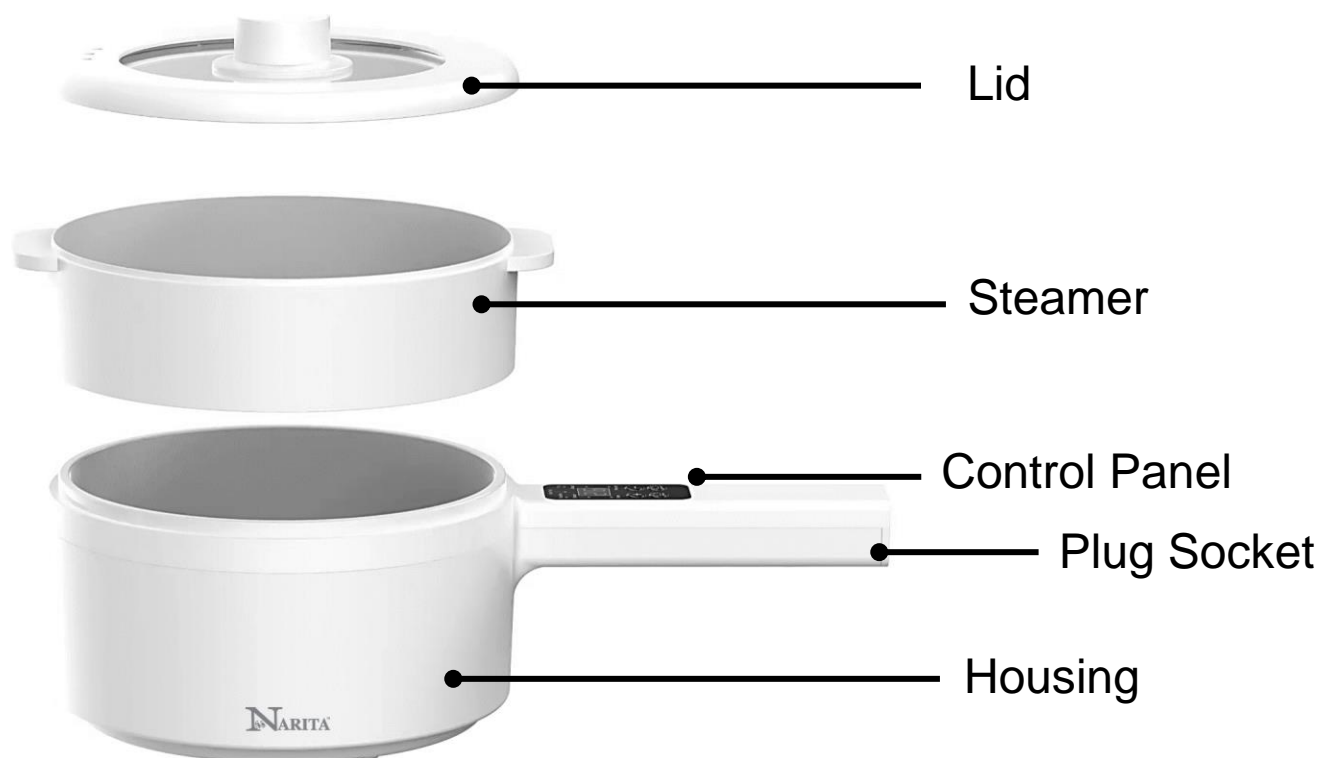

CONTROL PANEL

FUNCTION Button enables users to select the cooking function: “Noodles”, “Hot Pot”, “Fry”, “Steam”, “Soup”, “Stew”

For intended cooking mode with default cooking settings:

	COOKING FUNCTION	DEFAULT	SETTING	PER-SET
	Noodles	20 Mins	PRESS "⊕" or "⊖" ONCE TO INCREASE or DECREASE 1 MIN, MAX. 99 MINS	—
	Hot Pot	2 Hours	PRESS "⊕" or "⊖" ONCE TO INCREASE or DECREASE POWER: P1-P5	—
	Fry	2 Hours	PRESS "⊕" or "⊖" ONCE TO INCREASE or DECREASE POWER: P1-P5	—
	Steam	30 Mins	PRESS "⊕" or "⊖" ONCE TO INCREASE or DECREASE 1 MIN, MAX. 99 MINS	Up to 12 Hours
	Soup	60 Mins	PRESS "⊕" or "⊖" ONCE TO INCREASE or DECREASE 1 MIN, MAX. 99 MINS	Up to 12 Hours
	Stew	60 Mins	PRESS "⊕" or "⊖" ONCE TO INCREASE or DECREASE 1 MIN, MAX. 99 MINS	Up to 12 Hours

- **Function**

Select a function, the hot pot will begin the function.

- **Cancel**

When the function begins, selecting  will cancel the function.

- **Pre-set Timer**

Use “PRE-SET” button and “⊕” or “⊖” to set the delay timer by hour. Pre-set timer up to 12 hours in 1 hour increments.

★ Pre-set Timer works for the ‘Soup’, ‘Stew’ and ‘Steam’ functions.

HOW TO USE

❖ Plug the power cord into an available 120V AC wall outlet.

❖ Press the Function/Cancel  button to turn the unit on.

❖ Press the FUNCTION  button. The unit will begin to heat.

❖ Press the Function/Cancel  button again to cancel the function.

Noodles



- Press the Function to select 'Noodles', the indicator light will turn on, default cooking time is 20 minutes
- Press + or – once to increase or decrease 1 minute intervals
- When the function is finished cooking, it will switch to keep warm automatically up to 24 hours

Hot Pot



- Press the Function button to select 'Hotpot', indicator light will turn on, default power settings is P5 and default cooking time is 2 hours
- Press + or - once to increase or decrease power from P1 - P5
- After 2 hours cooking time, the unit will automatically turn off

Fry



- Press the Function button to select 'Fry', indicator light will turn on, default power setting is P5 and default time is 2 hours
- Press + or - once to increase or decrease power from P1 - P5
- After 2 hours cooking time, the unit will automatically turn off

HOW TO USE

Steam



- Press the Function button to select 'Steam', the indicator light will turn on, default cooking time is 30 minutes
- Press + or – once to increase or decrease 1 minute intervals
- When the function is finished cooking, it will switch to keep warm automatically up to 24 hours

Soup



- Press the Function button to select 'Soup', indicator light will turn on, default power setting is P5 and default time is 60 minutes
- Press + or – once to increase or decrease 1 minute intervals
- When the function is finished cooking, it will switch to keep warm automatically up to 24 hours

Stew



- Press the Function button to select 'Stew', indicator light will turn on, default power setting is P5 and default time is 60 minutes
- Press + or – once to increase or decrease 1 minute intervals
- When the function is finished cooking, it will switch to keep warm automatically up to 24 hours

Warm



- Press and hold the 'Warm' button for 5 seconds to start the Keep Warm function indicator light will turn on, power output is 60 watts
- Keeps warm automatically up to 24 hours

LIMITED WARRANTY

This unit is warranted against defective materials or workmanship for one year from the date of purchase (warranty is only valid with a dated proof of purchase). The warranty is valid for any manufacturing defects only. This warranty covers operational defects incurred in normal use and does not apply in the case of damage, abuse, mishandling, accident, or failure to follow operation instructions. During the one year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option). Any return of defective merchandise to the manufacturer must be processed accordingly by contacting customer service first to obtain the Return Merchandise Authorization Number and **freight prepaid with proof of purchase**. (Please pack your product well; we will not be responsible for damages incurred as a result of improper packing.) We will not accept any returns of merchandise without an applicable RMA#.

Narita will pay the shipping charges to ship the repaired or replacement product back to you.