



MULTI-FUNCTION ELECTRIC STEW COOKER

OPERATION INSTRUCTION

ITEM: NSQ-800C (8.0L)



Please read this manual thoroughly before operating this unit.
This unit must only be serviced by the authorized center.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to Narita USA for examination, repair or adjustment. See Warranty.
7. The use of accessories or attachments not recommended by Narita USA may cause hazards.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "OFF", then remove plug from wall outlet.
13. CAUTION: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires or other damages to persons or property.
14. This appliance generates steam. Do not operate uncovered.
15. Do not leave unit unattended while in use.
16. This appliance is for Household Use Only. Do not use appliance for other than intended use.
17. Do not place the ceramic stew pot on other heat sources (e.g. cooking stove). It may become deformed.
18. Do not block steam vent holes.
19. During or immediately after cooking, the area near the Steam Vent Hole is kept at high temperature. To avoid burns, do not touch this area.
20. To reduce the risk of electric shock, cook only in the removable container.

SAVE THESE INSTRUCTIONS / HOUSEHOLD USE ONLY

BEFORE FIRST USE

Before using for the first time, it is recommended to clean the interior of the ceramic stew pot thoroughly. Please follow the procedures below before using the ceramic stew pot:

1. Read all instructions and important safeguards.
2. Remove all packing materials and make sure that the product has been received in good condition.
3. Take care to keep the electrical components on the exterior of the ceramic stew pot dry, wipe out the interior of the ceramic stew pot with a damp cloth. If your hand will not fit inside the ceramic stew pot, swish warm, soapy water around in the interior of the ceramic stew pot with the lid closed.
4. Rinse out the inside of the ceramic stew pot thoroughly with water.
5. With a damp cloth, gently wipe off the exterior of the ceramic stew pot. Do not wipe off electrical components as this may cause damage to the unit.
6. Dry all parts completely.

HOW TO CLEAN

1. Wipe the exterior of the ceramic stew pot with a damp cloth, taking care to avoid the electrical components.
2. Clean the interior of the ceramic stew pot with a soft sponge and warm, soapy water.
3. Rinse any remaining soapy water from the ceramic stew pot.
4. Drain.

BRIEF INTRODUCTIONS:

Thank you for purchasing the Narita Multi-Function Ceramic Stew Cooker. Please follow these simple tips to get the maximum performance and satisfaction from this appliance. Use according to our instructions and it will give you years of trouble-free enjoyment.

 
SPECIFICATION:

MODEL	RATED VOLTAGE	RATED FREQUENCY	POWER CONSUMPTION	CAPACITY
NSQ-800C	120V	60Hz	900W	8.0L/2.5L Black ceramic stew pot / Ceramic inner pot

FEATURES:

- High Quality Black Ceramic Detachable Stew Pot and Lid Keeps the Original Taste of Food and Nutrition
- Ceramic Inner Pot Set with 2.5L Capacity Included
- 6 Cooking Presets
- Timer with Adjustable Duration Setting and Delayed Preset Timer Function
- Automatic Keep-Warm Function after Finished Cooking
- Automatic Shut-Off Function to Prevent Overheating


PARTS IDENTIFICATION

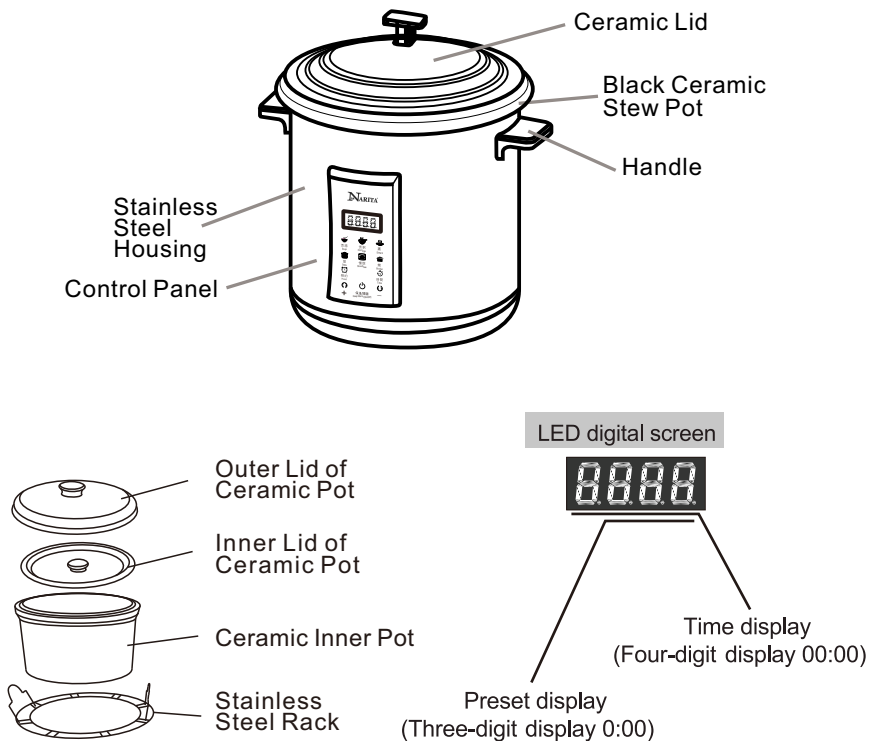

CONTROL PANEL:

FUNCTION button enables users to select the cooking function: “SOUP”, “PORRIDGE”, “SLOW STEW”, “STEW”, “STEAM” and “BRAISE”.

For intended cooking mode with default cooking time settings:

	COOKING FUNCTION	DEFAULT TIMER (HOUR)	TIMER SETTING
	TURN ON	-OFF	—
TURN OFF	----	—	
KEEP WARM	b000	—	
SOUP	2.5 Hour	PRESS 'TIMER' ONCE TO INCREASE 0.5 HOUR, MAX. 4 HOURS	
PORRIDGE	2.0 Hour	PRESS 'TIMER' ONCE TO INCREASE 0.5 HOUR, MAX. 4 HOURS	
SLOW STEW	6.0 Hour	PRESS 'TIMER' ONCE TO INCREASE 0.5 HOUR, MAX. 12 HOURS	
STEW	4.0 Hour	PRESS 'TIMER' ONCE TO INCREASE 0.5 HOUR, MAX. 8 HOURS	
STEAM	20 MINS	PRESS 'TIMER' ONCE TO INCREASE 5 MINS, MAX. 1 HOURS	
BRAISE	2.0 Hour	PRESS 'TIMER' ONCE TO INCREASE 0.5 HOUR, MAX. 4 HOURS	

TIMER AND “ – or +”

“TIMER” button and “ – or + ” enables users to adjust the desired length of cooking time by minutes.

PRESET TIME:

Use “PRESET” button and “ – or + ” to set the time of the delay by hour duration before cooking, max. 9 hours.

COOKING OPERATION:

Please read all instructions carefully before using this cooker.

1. PREPARATION

- 1) DO NOT plug into power outlet before all cooking ingredients have been prepared and ready.
- 2) Before using for the first time, clean the ceramic pot in and out thoroughly by wiping with a damp sponge or cloth with mild washing detergent.
- 3) Wash and rinse the ceramic lid and ceramic stew pot. Make sure to dry well.
- 4) Place the ceramic inner pot into the multi-cooker while slightly turning the ceramic inner pot to ensure proper contact and connection. The inner pot must be leveled and sitting in the middle of the cooker making sufficient contact with the heating element.
- 5) Use for soup, porridge or braise: Make sure the amount of water is not more than 'MAX' level.
- 6) Use for steam: Make sure the amount of water is not more than 1000ML.
- 7) Use for stewing: Put the cooking ingredients into the ceramic stew pot and add the necessary amount of water. Cover inner pot with the ceramic inner and outer lids. Add water to the black ceramic pot no more than 1500ML, then insert the ceramic inner pot with the rack into the black ceramic pot and cover with the lid.

*** To save time, boiling water can be added into the black ceramic pot.**

*** Before putting the ceramic inner pot into the black ceramic stew pot, add water into the black ceramic stew pot first.**

- 8) Use for cooking soup, porridge, braise or slow cooking: Put the cooking ingredients into the ceramic pot, add the proper amount of water, then cover with the lid.

* CAUTION: The max amount of water and food should not be more than 80% of the capacity of the ceramic inner pot when cooking.

2. CONNECT POWER:

Plug power cord into the grounded socket. There is a “beep” sound and the digital screen display will show “----”. Press the ON/OFF button and all the function indicators will turn on. The digital screen display will show “-OFF”. The appliance is now in standby mode.

3. SELECT FUNCTION

Press the respective button to select the function of “SOUP”, “PORRIDGE”, “STEW”, “STEAM”, “SLOW STEW”, or “BRAISE”.

The corresponding indicator light is on. The digital screen displays the default time settings. The selected function indicator will blink for 5 seconds and then remain on. The appliance starts cooking with full power.

4. ADJUSTMENT OF COOKING TIME

For any function selected, the default cooking time can be adjusted as desired. After setting, cooking will start and the timer will start counting down. Pressing “Timer” then pressing “– or +” button once will adjust cooking time by 1 minute. Pressing and holding “– or +” button will adjust cooking time by 10 minute intervals. Continuing to hold the button down when the timer reads “1.0” will increase intervals by 1 hour.

Or only pressing “Timer” button once will adjust cooking time by 30 minutes

5. ADJUSTMENT OF PRESET / DELAY COOKING TIME

PRESET TIMER enables delay in cooking by 1 hour and up to 9 hours. After selecting function and cooking time (during the display cooking time is blinking), press PRESET and “– or +” to adjust the delay time (the first display number will be the preset time). For instance, before going to bed at 10:00 PM, you may select PORRIDGE (default cooking timer 2.0 hours) and set the delay timer at 6 hours to instruct the cooker to start cooking at 4:00 AM the next morning and complete cooking at 6:00 AM.

6. FINISH COOKING

When cooking is completed, the appliance will automatically turn to keep warm mode. The indicator of “KEEP WARM” turns on with 5 beeping sounds and the digital display will show “b000”.

Clean & Maintenance

- Do not use lacquer thinner, gasoline, decontamination powder, hard brush etc. to clean parts of this product.
- Do not let the water inside the appliance. Cannot fill in the electric parts with water.
- To avoid the risk of deformation and explosion, do not use dishwasher to clean this product.
- Before cleaning and maintenance, make sure the product has been unplugged and the product has been completely cooled.
- Ceramic pot and lid are fragile material, please handle it gently when cleaning. Those accessories can be immersed in water for cleaning. If necessary, use a neutral detergent.

1. Clean the main body and control panel.
Slightly dirty: Please wipe with a soft, dry cloth that is soft and free of any chemicals. Please note that the fabrics containing chemical substances may discolor the body.
2. Clean oil stain.
Clean housing with cloth and a little tooth paste or neutral detergent, wipe it again with a clean wet cloth. Do not wash by water directly to avoid electric shock and damage.
3. Storage
Please clean the machine according to the above method, and then use the original packaging (plastic bag, polyfoam, color box) to prevent small insects and dust from getting inside.

ATTENTION:

Always keep the bottom of the ceramic stew pot and the heating plate CLEAN and DRY, any foreign substance between them will cause the stew cooker to malfunction.

Do not damage or dent housing to avoid the stew cooker burning out.

WARNING:

Beware of the hot surface while the appliance is in operation or just finished. Do not touch it directly.

People with limited physical, sensorial or mental capabilities, or uninformed or inexperienced persons (including children) are not permitted to use this appliance, except when supervised by a person responsible for their safety or are instructed by this person on exactly how to use this appliance.

TROUBLESHOOTING:

Code	Problem	Solution
E1	Object on base and/or heating element	Power off, clear the object after heating element cools down
	Inner pot misplaced and not connected to heating element properly	Power off, check the pot to make sure it is secured into position after heating element cools down
	Temperature probe or circuit board failure	Send to authorized service center
E2	Temperature probe or circuit board failure	Send to authorized service center

SOLUTION FOR MALFUNCTIONS

If you choose other functions or mal-operation while the cooker is in operation, please restart the cooker by pressing 'KEEP WARM/OFF' button.

LIMITED WARRANTY

This unit is warranted against defective materials or workmanship for one year from the date of purchase (warranty is only valid with a dated proof of purchase). The warranty is valid for any manufacturing defects only. This warranty covers operational defects incurred in normal use and does not apply in the case of damage, abuse, mishandling, accident, or failure to follow operation instructions. During the one year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option). Any return of defective merchandise to the manufacturer must be processed accordingly by contacting customer service first to obtain the Return Authorization Number and freight prepaid with proof of purchase. (Please pack your product well; we will not be responsible for damages incurred as a result of improper packing.) We will not accept any returns of merchandise without an applicable RMA#.

NARITA®

多功能電燉鍋 (8.0L)

MULTI-FUNCTION ELECTRIC STEW COOKER

使用說明書

型號 : NSQ-800C



使用產品前請仔細閱讀本說明書，並妥善保管。

使用前說明

使用產品之前，請仔細閱讀本說明書，並妥善保管以備日後參考

1. 閱讀所有說明和重要的防護措施
2. 請在拆除包裝後檢查產品是否有損傷，核對配件是否齊全
3. 請勿使用未經許可的其他配件，若因此造成機器故障，保修將自行終止
4. 如果電源線損壞，為了避免危險必須由製造商維修部的專業人員來更換
5. 當本產品使用第一次時，可能會產生輕微的異味或白煙，只要把產品放在通風處，異味及白煙很快便會消散
6. 兒童及無行為能力的人請在監護人監督下使用本產品
7. 倘若發生故障，應立即拔掉電源插頭，切勿將有缺陷的產品置於工作狀態。本產品只夠在授權的維修中心維修，非授權維修中心維修時，易引發其它不安全因素
8. 食物加熱時間不宜過長
9. 陶瓷煲膽注水過滿，可能有沸水噴出的危險
10. 煲膽在清洗前必須與煲體分開，煲膽再次使用前必須把煲底擦乾
11. 產品必須與配套的連接器一起使用
12. 蓋好蓋子以防蒸氣噴到手上，當水沸騰時請勿移動上蓋和煲體



警告: 未按使用說明書操作可能會有危險

1. 勿進行改造，非專業維修人員禁止拆卸和修理，否則易發生火災、觸電事故
2. 請勿將煲體浸入水中或其他液體中，也不要潮濕的手接觸機器，否則易發生漏電事故
3. 本產品僅限於家用，請勿在戶外使用本產品
4. 勿使電源線接近熱源
5. 請勿將本產品至於高溫的表面
6. 產品的表面在使用時會變得非常熱，切勿觸摸

注意事項

產品安全注意事項

 一般禁止
Ordinary Prohibition

 拆分禁止
Disassemble Prohibition

 濕手觸摸禁止
Wet Hand Prohibition

 濕水禁止
Wet Water Prohibition

 觸摸禁止
Contact Prohibition

 強制禁止
Compulsory Prohibition

· 請勿讓兒童使用本產品
和放置在兒童不能接觸
的地方使用。



· 請勿用濕手直接接觸
電源插座或電源線，
以免發生觸電危險。



· 請將此產品存放在通
風乾燥處，不可置於
潮濕處使用，產品煲
身不可浸放水中清洗。



· 不可用力拉扯電源線
或使用電源提攜、移
動產品，以免損壞產
品。



· 本產品在工作時，切
勿以任何物品覆蓋機
身，以免產品過熱產
生危險。



· 請將本產品放置在水平
的檯面上使用，不可放
置於傾斜角大於5度的
平面上使用。



· 本產品限於家庭範
圍內使用，不可用
於商業用途。



· 請勿自行拆卸或改裝機
內任何零件，以免產生
危險。如若自行拆卸后，
保修期將作廢。



· 此產品不要置於火爐
上燃燒，不宜置於易
燃易爆物品附近使用。



· 如產品電源線損壞，必須
立即停止使用，並送與有
資質的維修部或本公司售
後維修部維修后方可使用。



· 請使用與本機銘牌標識
相符並帶有良好接地的
電源插座。
(120V/60Hz)



· 如果長期不使用本產
品，請將其電源插頭
從電源插座上拔下。



使用前的清潔步驟

❖ 清潔前請確認本產品沒有接通電源

❖ 煲膽和蓋子皆為陶瓷易碎品，清潔時請輕拿輕放；此配件可浸入水中清洗，如有需要可使用中性清潔劑清洗

❖ 不鏽鋼機體為機電部分，切勿浸至任何液體中。必要時可使用抹布擦拭乾淨並晾乾再使用

產品規格

 
 
型號	電壓	頻率	功率	容器容量
NSQ-800C	120V	60Hz	900W	8L/2.5L 黑陶瓷煲膽/陶瓷燉盅

產品特點


- 不鏽鋼外殼，時尚美觀，經久耐用
- 分體式結構黑陶瓷煲膽，方便清洗
- 陶瓷燉盅，按照傳統的烹調方法，完美的保留食物的營養成分，保持原汁原味
- 數碼顯示，採用微電腦全自動控制系統，可定時和預約烹飪時間，使用方便
- 具有煲湯、煲粥、慢燉、燉、蒸、炆，一煲多用
- 設有雙重安全保障，防止乾燒、防超溫保護，以確保使用安全

產品結構

部分配件名稱

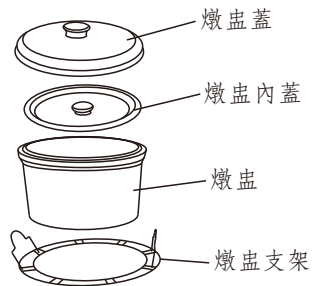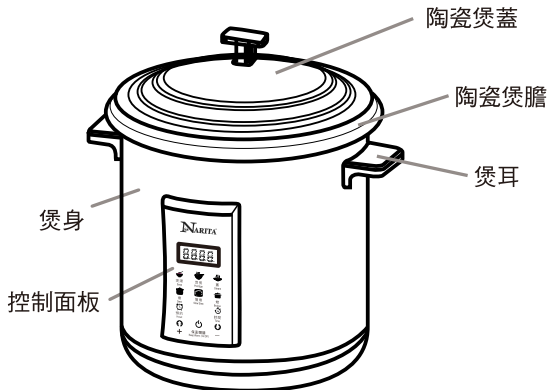

數碼管顯示

 


預約時間顯示 (三位數顯示, 0:00) 定時時間顯示 (四位數顯示, 00:00)

(湯、粥、燉、蒸、炆功能均以時間顯示)

★提示: 請勿將陶瓷煲膽、燉盅直接放置瓦斯爐或電爐上加熱，以免陶瓷損壞。

按鍵說明

按功能鍵選擇烹調方式，湯、煲粥、慢燉、燉、蒸、炆六個功能

	烹飪功能	屏幕顯示	定時
	開機	-OFF	—
	關機	----	—
	保溫	b000	—
	煲湯	2.5小時	按一次定時鍵增加0.5小時，最少0.5小時/最長4小時
	煲粥	2.0小時	按一次定時鍵增加0.5小時，最少0.5小時/最長4小時
	慢燉	6.0小時	按一次定時鍵增加0.5小時，最少4小時/最長12小時
	燉	4.0小時	按一次定時鍵增加0.5小時，最少0.5小時/最長6小時
	蒸	20分鐘	按一次定時鍵增加5分鐘，最少20分鐘/最長1小時
	炆	2.0小時	按一次定時鍵增加0.5小時，最少0.5小時/最長4小時

定時與加減鍵

在定時狀態下单按加鍵每次增加一分鐘，加鍵按住不放可快速遞增；單按減鍵每次減一分鐘，減鍵按住不放可快速遞減

預約

先設定烹飪功能，預約鍵每按一次增加1小時，第一碼數碼螢幕顯示 1 · 2 · 3 以此類推為預約時間，最短1小時，最長9小時

注意:

1. 預約時間以3位數1:00形式顯示。定時時間以4位數01:00形式顯示。
2. 當預約後，定時時間和預約時間將會將替顯示。

使用說明

使用前請詳細閱讀本說明書

1. 開機前的準備工作

- 1) 在尚未準備好烹調食物前，請不要將電源接通
- 2) 用洗潔精和布將黑陶瓷煲膽的內外徹底擦乾淨。為求達到最佳的清潔效果，用熱水浸泡幾分鐘，然後將內外的殘留清水完全擦乾
- 3) 小心輕清洗陶瓷蓋和陶瓷燉盅，並擦乾淨
- 4) 將黑陶瓷煲膽放進煲體內，輕輕的左右轉動煲膽，使煲膽的鍋底和加熱板密切的接觸到，並盡量將其放正中間
- 5) 在黑陶瓷煲膽中注入適量清水與材料，煲湯、煲粥、炆 加水量不能超過最高水位線(MAX)
- 6) 燉 加水量不可超過1500ML
- 7) 蒸 加水量不可超過1000ML
- 8) 用燉盅燉湯的使用方式：將黑陶瓷內膽中注入清水不可超過2000ML。把備好的湯料放入陶瓷燉盅內注入適量水，蓋好燉盅內外蓋，然後將陶瓷燉盅套進燉盅提架放入黑陶瓷煲膽裏，蓋上陶瓷煲蓋

★由於燉是低功率燉煮，為節省時間可加入熱水

- 9) 湯、煲粥、炆的使用方式：將調理好的食物直接放入黑陶瓷煲膽中，按需要加入適當的水，蓋上陶瓷蓋。

2. 接通電源

響一聲提示音，數碼螢幕顯示”----”

按保溫/開關鍵開機，所有功能鍵指示燈亮綠色，數碼螢幕顯示”-OFF”

此時可進行功能選擇。

3. 選擇功能操作

按所需功能鍵選擇需要的烹調方式。選擇功能後相對應的功能指示燈閃爍，並且該功能默認設置的烹飪時間會在數碼螢幕上顯示，選擇的功能指示燈一直閃動5秒後，所選烹飪功能亮紅色開始烹飪

4. 調整烹飪時間

如果你需要加長或縮短烹飪的時間，請按功能鍵選擇烹飪的功能後，再按”⊖或⊕”鍵調整烹調的時間長短。

5. 設定預約烹飪時間

如果不想馬上進行烹飪，可在選擇烹飪方式後(數碼螢幕顯示的烹調時間還在閃動時)按預約再按”⊖或⊕”鍵設定預約烹飪的時間，第一個數碼螢幕顯示的數字為設置的預約時間。當預約時間到計時結束後才開始正式加熱烹飪，並在數碼螢幕顯示預約時間變成電腦預設烹飪時間。

舉例：如果想要早上六點起床就有滾燙的粥喝，晚上十點睡覺前，可選擇煲粥的功能之後，按”預約”和”⊖或⊕”鍵設置預約時間6小時即可。

6. 烹飪完成

各種功能都是智能化自動進行。當烹飪結束後，功能烹飪完成響5聲提示信號並自動進入保溫狀態，保溫指示燈亮綠色，數碼螢幕顯示”b000”

清潔及保養

- 請勿使用帶有腐蝕性的藥水及堅硬物品對其產品內外進行清潔(例如: 香蕉水、汽油、去污粉、硬質刷等)
- 電器內部嚴禁進水，請不要將本產品電器部分浸入水中清洗
- 禁止使用洗碗機或烘碗機清洗，以免變形或爆炸等危險
- 清潔前，必須把插頭從插座中拔下，帶本產品完全冷卻後方可進行清潔
- 陶瓷煲膽和煲蓋均為易碎品，清潔時請輕拿輕放，如有需要可使用中性清潔劑清洗

1. 清潔控制面板及機身

輕微汙垢，請用柔軟沒有任何化學物質的擰乾濕抹布擦拭，請注意含化學物質的布料可能會使機身變色

2. 清除油垢

請用柔軟的濕抹布沾上少量牙膏或中性清潔劑清理，再用乾淨及擰乾的濕抹布擦拭乾淨，不可用水直接沖洗機身，以免導致觸電及損壞

3. 存放

無需使用本產品時，請先依以上清潔方式把本機清潔乾淨，再用原本的包裝來存放，以防止蟑螂及小昆蟲進入機身造成故障

常見故障及處理方法

序號	產生原因	解決辦法
E1	1. 煲膽底部或發熱板表面有異物 2. 煲膽沒有放好與發熱盤接觸不良 測溫頭短路或電路板故障	1. 拔下插頭，待發熱板冷卻下來後 清除異物 2. 待發熱板冷卻下來後再放平煲膽使用 3. 請將本產品送回我司維修部進行維修
E2	測溫頭短路或電路板故障	請將本產品送回我司維修部進行維修

錯誤操作處理

當您操作過程錯誤或產品已進入工作後須改變使用功能時，可按”保溫／開關”鍵，讓機體關機後重新開始設定即可。