Fitting Instructions:

Vertical Blinds

YOU SHOULD HAVE:



Control End bracket: x1



Plunger End bracket: x1



Safety hook



Wood screws

TOOLS NEEDED:



Metal tape



Pencil



Drill




blind/sty

Crossheaded screwdriver

INSTRUCTIONS

1.

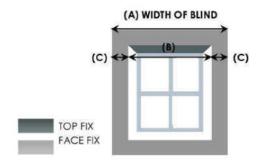


Outside Recess

If the blind is to be fitted outside the window ensure that measurement C is the same. C is simply equal to A minus B, divided by two. Follow instructions for FACE FIXING.

Inside Recess


If TOP FIXING, fix to the lintel if the window frame is uPVC or if there are no obstructions. If FACE FIXING, fit bracket to the window frame.

 2.



Position brackets approx 5cm from the ends of the headrail. Mark fixing holes and screw brackets into place.

 
Top Fixing



Measure and mark the distance (D), allowing for obstructions like handles that protrude into the recess area. Hold the blind in the recess and find the bracket fixing position. Drill brackets into position 5cm from the recess side walls.


3.

Face Fixing

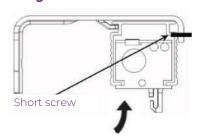


Hook the back of the headrail into the bracket and rotate the headrail into position. Secure headrail by tightening the short screw in the front of the bracket.

Top Fixing

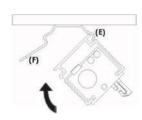

Tilt and hook headrail into bracket at point (E). Rotate the headrail into position until it clicks. To release the headrail push the bracket at point (F).

 4.



With the headrail fitted hook each hanger into the louvres ensuring the louvres are in open position.

Fitting Instructions:

Vertical Blinds



CHILD SAFFTY DEVICES

Warning

Blinds can be potentially dangerous to small children. Please be aware that swallowing small parts can cause internal asphyxiation. Looped or low hanging cords, chains or tapes can create hazardous loops which could lead to the risk of strangulation. We do everything we can to ensure your chosen product is child safe. As a minimum all of our blinds meet the European Standard BS EN 13120 for safety. Our instructions and the supplied Child Safety device(s) are intended for you to ensure that your blind is as safe as possible.

The information below gives guidance for fitting the provided child safety devices. All safety devices must be correctly installed for the protection from strangulation of young children and the proper use of the blind. Please read the instructions carefully and keep safe for future reference.

Only use the devices and cords provided with your blind. Videos showing how to fit and reconnect child safety devices are available, along with replacements at **www.makeitchildsafe.co.uk.**

Sidewinder Roller

Fitting the safety hook

- **1.** Put the control chain into the hook at the maximum distance from the control mechanism. Ensure that the chain is taut and that the hook is at the bottom of the loop.
- **2.** Screw the hook to a wall adjacent to the blind. If the hook has a slot, ensure the screw is placed at the bottom of the slot and that the chain is taut before screwing in place. This will prevent the hook from moving up and down during operation and ensure that the correct tension is mantained. See right picture.



WARNING

WHERE POSSIBLE BLIND CHAIN SHOULD BE OPERATED FROM JUST ABOVE THE CHAIN CONNECTOR AS THIS PUTS LESS PRESSURE ON THIS COMPONENT, REDUCING THE RISK OF SNAPPING OR PULLING APART.

YOUNG CHILDREN CAN BE STRANGLED BY LOOPS IN PULL CORDS, CHAINS, TAPES AND INNER CORDS THAT OPERATE THE PRODUCT. TO AVOID STRANGULATION AND ENTANGLEMENT, KEEP CORDS OUT OF THE REACH OF YOUNG CHILDREN. CORDS MAY BECOME WRAPPED AROUND A CHILD'S NECK. MOVE BEDS, COTS AND FURNITURE AWAY FROM WINDOW COVERING CORDS. DO NOT TIE CORDS TOGETHER. MAKE SURE CORDS DO NOT TWIST AND CREATE A LOOP.