Back

Front

Safety Information

Prevent debris, dust and other foreign matter from entering the socket and USB hole.

Avoid contact with water, corrosive liquids, flammable and explosive materials during the use of this product.

Do not allow any collissions or drops.

This product cannot be exposed to temperatures below -10°C or above 40°C and high levels of humidity.

Pop Up Socket User Manual




VORSPRUNG



Page 1

Page 2

Product Features

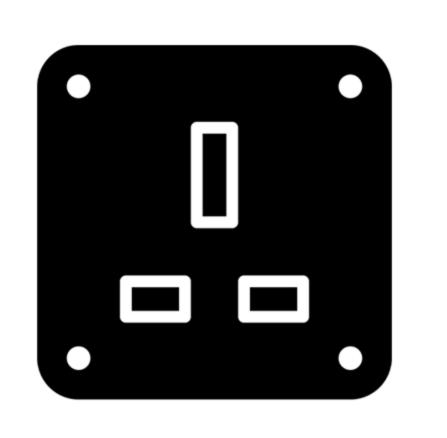

4 x UK 3-Pin Sockets



1 x USB Port




1 x Wireless Charger

Recommended Usage:


- Kitchen Worktops
- Office Desks
- Dressing Tables
- Reception Desks
- Any Other Work Surfaces

Installation Guide


1) Cut a 120mm hole through the surface allowing a minimum of 140mm depth underneath.

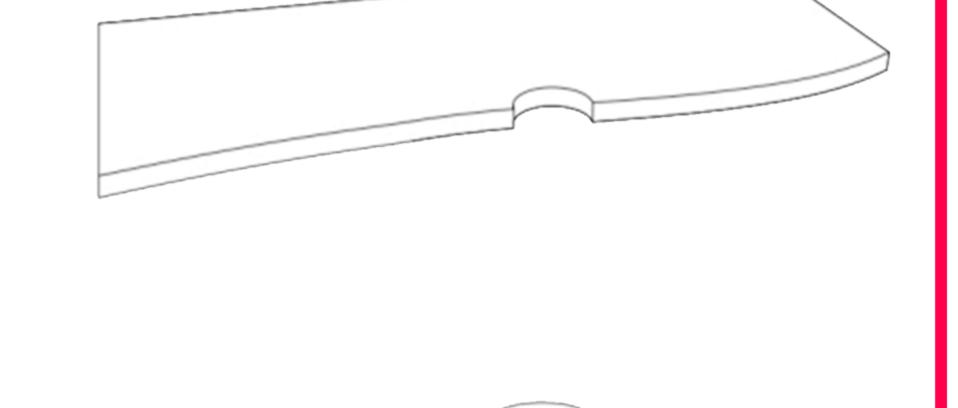

2) Remove the lock ring from socket and insert socket into hole.

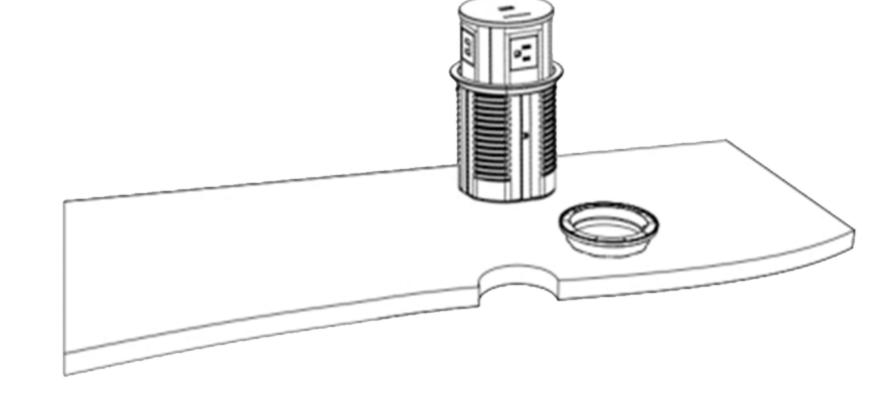

3) Replace the lock ring and turn it to secure the socket in place.

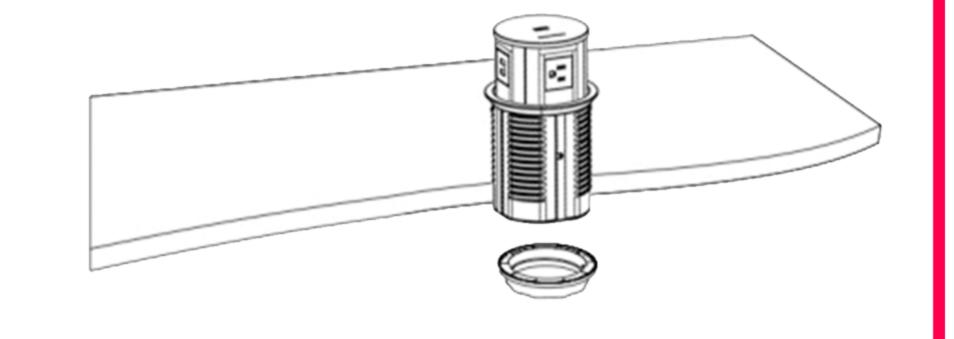

4) Installation complete.

