VORSPRUNG



USER MANUAL

11.9 INCH

13.3 INCH

Item No: 20112


Item No: 20113

WARNING


Please handle the tri-screen with care and do not press the screens to avoid damage. Do not exceed its maximum turning angle showing as below:

Turning angle of screens

Left screen(0° - 235°)

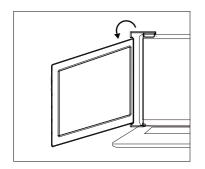

Right screen(0° - 180°)

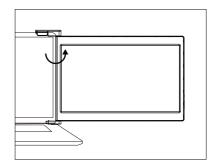


Contents

- 1 | Parts Overview
- 2 | Inputs and Buttons
- 3 | Choose your cables
- 4 | Set It Up
- 5-8 | Connection Methods
- 9-10 | Laptop Display Configuration
 - 11 | OSD Function Introduction
- 12-14 | OSD Setting
 - 15 | Tech Specs

Parts Overview

 Tri-Screen





2*MINI HDMI to HDMI cables VIDEO ONLY



Velcro Cable Tie (Magic Tape)








POWER ONLY



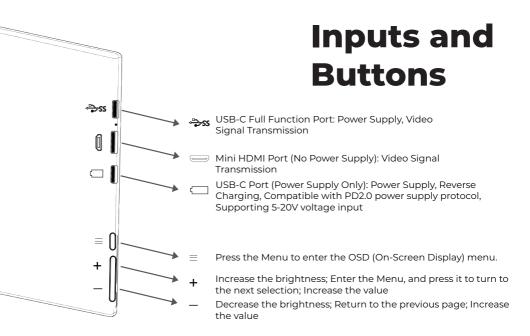

^{*} It only displays the interfaces and buttons function. Please check the actual machine for the specific position of interfaces and buttons.

Choose your cables

To determine which cables you will use, first identify your laptop's ports using the pictures to the right or reference your laptop's user manual.

If your laptop has two Thunderbolt3 / USB-C with DP ports, the simplest way to use the tri-screen is with the two USB-C to USB-C cables provided.

If your laptop does not have any Thunderbolt3 / USB-C with DP ports, you will need to use one USB-A to USB-C cable and one HDMI to Mini-HDMI cable for each screen

If your laptop does not have an HDMI port, then you can use any other video out ports shown to the right along with a simple HDMI adapter.

VIDEO ONLY





HDMI





Mini-Displayport



VGA

USB 3.0 (with HDMI adapter)

POWER ONLY

VIDEO & POWER






USB-A

Thunderbolt 3 / USB-C with DP*

^{*}Some laptops have USB-C ports that do not support DisplayPort over USB-C. Please reference your laptop's user manual.

Set It Up


- 1. Unpack the triple monitor.
- 2. Open two screens in the directions as shown in Fig. 2.
- Place the bracket at the back of the laptop screen and install it well with the bracket clamping the screen.
- 4. Lift up the stand and stretch to its end. Press and hold the button to retract the stand. (The stand is embedded at the back of the triple monitor, which can offer extra support to the triple monitor.)
- Using the necessary cables, plug one end of the cable into the triple monitor and the other into your laptop. (See "Inputs and Buttons" on page 2 for the input diagram.)

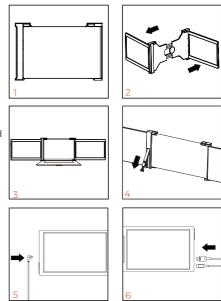

1. Two USB-C or Thunderbolt 3 Ports

Two Full Functioned Type-C/Thunderbolt-3 Ports Connection


If there are 2 full-functioned Type-C or 2 Thunderbolt 3 ports on the laptop, use two included Type-C cables to connect the laptop to the triple monitors. Pay attention to connect the monitor's Type-C port labeled with this logo

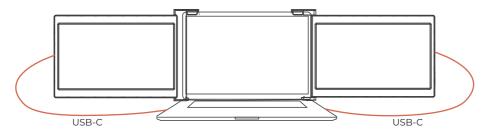

Notes:

Make sure that the laptop Type-C ports support power & data tranmission, and has enough power supply above 5V/2A.

 Some USB-C ports may not be able to transmit currents above 5V/2A, please connect an external power supply to better use the monitor.




Notes:

- ①Make sure the USB-C of your laptop is a Full-functioned USB-C port(support both video & data transmission).
- ②Make sure 5V/2A or above power can be supported through USB-C port. An external power supply of 5V/2A or above is needed for normal use (adjust brightness and volume above 50).

2. One Full Functioned Type-C and HDMI Port Connection

If there's one full functioned Type-C port and one HDMI port on the laptop:

 - 1) Use the included full functioned Type-C cable to connect one side of the monitor and the laptop.
- 2) Meanwhile, use the HDMI cable and an extra power supply (USB-C to USB-A cord) to connect the other side of the monitor and the laptop.



Notes:

The HDMI port does not provide power, so the monitor must be plugged into the power supply (5V/2A or Above).

 
3. Other Connection Type (Extra Adapter Needed)

If you lack enough HDMI port for connection

- (1) Find a suitable HDMI hub for your laptop.
- (2) You need to use 4 cables with an extra hub for connection:

First, connect one side of your monitor to laptop with a HDMI and a USB-C to USB-A cord. Second. connect the HDMI hub to your laptop.

Finally, connect the other side of your monitor with another HDMI and USB-C to USB-A cord




Notes:

The HDMI port does not provide power, so the monitor must be plugged into the power supply (5V/2A or Above).

Laptop Display Configuration

PC / WINDOWS

- 1. Go to your Display Settings (Start ♣ Settings ﴿ System > Display)
- 2. Click and drag screens to configuration shown
- 3. If you need to set different display modes for multiple screens, please click 1/2/3 (click the "Identify" button down the screen to find the corresponding screen) and select the one, then enter into the "Multiple displays" menu to set
- 4. If any of the screens are upside down, click on the screen in the display menu. Then click on the "Orientation" dropdown menu and select "Landscape (flipped)"
- To increase the zoom, click the "Change the size of text, apps, and other items" dropdown and select "150%"

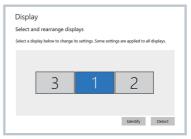




^{*} Please note the resolution of 10.1 inch is 1920*1200

^{*} Keeping three displays sync can be configured in setting of graphic card. If there is any issue please consult local distributor.

Laptop Display Configuration

MAC

 - 1. Open "System Preferences"
- 2. Select "Displays" from the menu
- 3. Click "Arrangement" from display menu
- 4. Click and drag screens to configuration shown
- 5. If any of the screens are upside down, click on the display menu on that screen and select "180 degrees" from the dropdown
- 6. To increase the zoom, click the "Scaled" radio button.





^{*} Please note the resolution of 101 inch is 1920*1200

OSD Function Introduction

- 2.Press "+" button to choose your settings
- 3. Press Menu " ≡" button to confirm
- 4.Press "-" button to return to previous page



OSD Setting

Brightness

Brightness:

The adjusting range is from 0 to 100.

Contrast:

The adjusting range is from 0 to 100.

Black Level:

The adjusting range is from 0 to 100.

Sharpness:

The adjusting range is from 0 to 100.





Image

ECO: Preset display settings for various modes (Standard/ Game/ Movie/ Text/ FPS/ RTS Modes) DCR: Select ON or OFF to enable or disable dynamic contrast ratio function Aspect: Adjusts the aspect ratio to 4:3/ WIDE

OSD Setting



Color Temp

Color Temp: Enables the adjustment of each individual RGB color, or select a Warm or Cool preset level

Red: The adjusting range is from 0 to 100 Green: The adjusting range is from 0 to 100 Blue: The adjusting range is from 0 to 100

OSD Setting

Language: Select OSD language. The selections are: English, French, German, Simplified Chinese, Italian, Spanish, Portuguese, Turkish, Polish, Nederlands, Japanese, Korean OSD Timer:

Sets time-out for monitor settings menu (10-60 seconds)

Transparency:

Sets transparency of monitor settings menus



OSD Setting


Reset

Reset:

Selects RESET to revert all settings to the factory default mode



* 10.1 inch : 1920 X 1200 60HZ

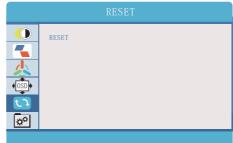

MISC

Signal Source:

Contains two signal sources Type C and HDMI

Low Blue Light:

Decreases blue light content in display

HDR MODE:

Enables HDR (High Dynamic Range) if connected to a compatible device

Contains three modes (off/ auto/ 2084)

Tech Specs

Screen size	10.1 inch	11.6 inch	11.9 inch	13.3 inch
Adaptive for laptop panel	Length 225 - 328mm Thickness < 7mm	Length 255 - 372mm Thickness < 7mm		Length 291 - 417mm Thickness < 7mm
Resolution	1920*1200	1920*1080		
Aspect ratio	16:10	16:9		
Backlight type	W-LED			
Power	5V 2A (Per screen)			
HDR	HDR 10			
Speaker	NA			
Mini HDMI	1920*1200@60HZ 1920*1080@60HZ			
Type-C 3.1/Thunderbolt 3	1920*1200@60HZ 1920*1080@60HZ			
Type-C	Only for power			
Language	English, French, German, Simplified Chinese, Italian, Spanish, Portuguese, Turkish, Polish, Nederlands, Japanese, Korean			
Dimension	286x182x25mm	318x215x25mm		357x233x25mm
Tri-screen weight	837g	1.15kg	1.17kg	1.3kg