 


HandFun | HF347

Multifunctional waist fan

Use manul

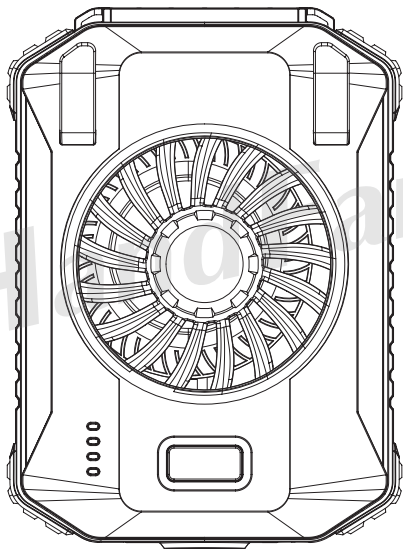

Features

- 1.Double clip design, can hang neck and waist;
- 2.10000mAh large-capacity battery;
- 3.With mobile power function, mobile phone can be charged;
- 4.With flashlight function, divided into strong light and flashing modes;
- 5.The four-corner silicone anti-drop design prevents the fan from falling ;
- 6.Three gears of wind power, adapting to the needs of various scenarios.


Product parameter

Model	HF347
Power	10W
Input	5V/2A
Battery capacity	10000mAh
Charging time	6H
Fan usage time	3.5-18H
Flashlight usage time	28H
Mobile power bank usage time	3H
Product size	105*62*144mm
Product weight	425g

Packing list

Fan*1, Type-c charging cable*1, use manual*1, lanyard*1

 Product components

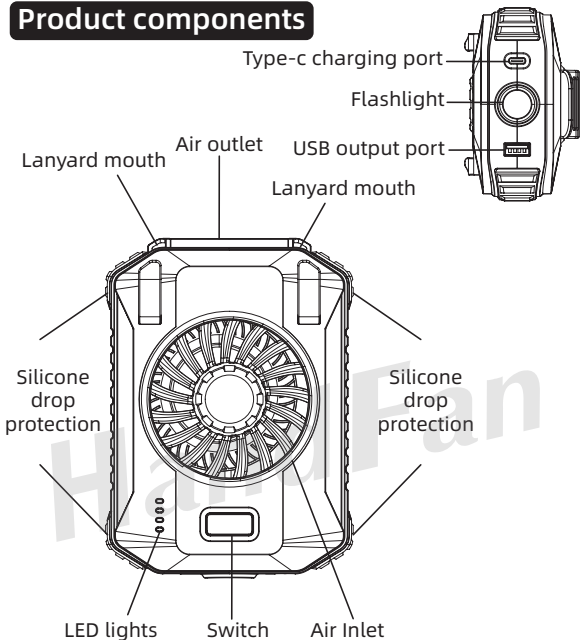


Product operation instructions

1. Short press the power switch to turn on the air outlet mode, and cycle shutdown.
2. Long press the power switch to turn on the flashlight strong light mode;
3. Long press the power switch again to turn on the flashlight flashing mode;
4. Long press the power switch for the third time to turn off the flashlight mode.


Charging instructions

 1. Connect the included Type-C charging port to the fan charging port.
2. In order to charge the fan normally, please use a 5V/2A charger.




Instructions for use of the fan

 1. Schematic diagram of double clips instructions:

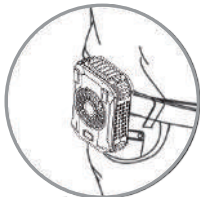

Large clip to hold the belt/trousers

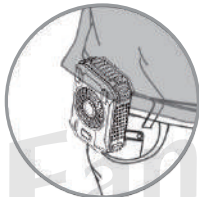 

Small clip to hold clothes

 
2. Schematic diagram of the use of the hanging neck



①. Untie the lanyard buckle



②. Pass the lanyard through the lanyard hole

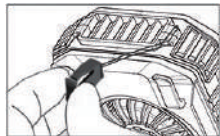


③. Tighten the lanyard



④. Use of lanyard

 3.The use of mobile power:

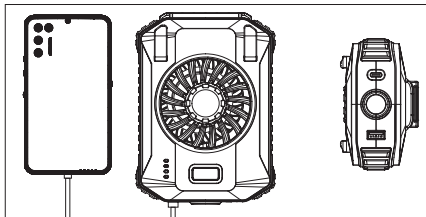

*Connect the mobile phone charging cable to the fan's USB output port, the fan can be used as a mobile power bank.

Indicator status description

● The indicator light is always on / ◎ Light flashing state / ○ Light off state	
Power charging	◎ ○ ○ ○ ○ 1% < Battery capacity < 33%
	● ◎ ○ ○ ○ 34% < Battery capacity < 66%
	● ● ◎ ○ ○ 67% < Battery capacity < 99%
	● ● ● ● ● Battery capacity = 100%
Power in use	● ● ● ● ● Battery capacity = 100%
	○ ● ● ● ● 67% < Battery capacity < 99%
	○ ○ ● ● ● 34% < Battery capacity < 66%
	○ ○ ○ ◎ 1% < Battery capacity < 33%
	○ ○ ○ ○ ○ Battery capacity = 0%
Work indicator	White
battery indicator	White

Precautions

1. This product uses lithium-ion battery, no memory function, overcharge or overdischarge will affect the life of the product, please charge in time and disconnect the power after fully charged.
2. When the fan is working, the fan blade rotates at a high speed. Please do not touch the rotating fan blade with your fingers. Children under 10 should use this fan under the supervision of an adult.
3. Do not squeeze or disassemble the battery or leave the battery in a high temperature environment (60°C and above) for a long time, otherwise there may be a risk of leakage or explosion.
4. If you store it for a long time, please keep 80% of the electricity and store it in a dry and ventilated place.
5. Please use the fan properly, any squeeze, drop, or impact may damage the fan and affect the use effect.

Warranty Information

In order to provide you with a better service and shopping experience, for products purchased by consumers through legal channels, from the date of purchase, if there is a failure caused by non-human causes, we will provide a one-year warranty (the warranty does not include man-made damage, disassembly Burning, water ingress, breakage, etc.).