



Original-User Manual

Folding Wagon CTL900



WARNING: Before starting work, please read the operating manual carefully, as it contains all the important information and safety instructions that must be followed in order to use this equipment properly.

FUXTEC GmbH
KAPPSTR.69 , 71083 HERRENBERG - GÜLTSTEIN , GERMANY

Content

1. Scope of delivery:	4
2. Assembly instruction	5
2.1 Mounting the front wheels/swivel wheels.....	5
2.2 Mounting the rear wheel axle	6
2.3 Fixing the rear wheels	6
2.4 Assembly of the roofing	6
2.5 Attaching the rear bag.....	8
3. Intended use.....	8
3.1. Removing and attaching the protective cover	8
3.2 Unfolding the wagon	9
3.3 Folding the wagon	10
3.4 Adjusting the push handle and pull bar	11
3.5 Moving the wagon.....	11
3.6 Operating and releasing the parking brake	12
3.7 Use of the roofing.....	12
3.8 Use of safety belts	13
3.9 Removing the fabric cover.....	13
3.10 Maintenance and care.....	14
4. Care instructions.....	15
5. Warranty.....	15
6. Warnings and safety instructions.....	16

Original FUXTEC CTL-900 Folding/Foldable Wagon

Congratulations on your original FUXTEC wagon.

To make you and your child feel safe when using the FUXTEC CTL-900 wagon, you have chosen a high-quality product from FUXTEC and thus created an excellent choice. High-quality manufacturing and continuous, strict quality controls assure you that you will enjoy your FUXTEC wagon for a long time.

After receiving: Please check immediately, that the wagon is delivered in full. Are parts missing? Also, please check all functions of the wagon carefully and report any problems within the reporting period. In this case, our customer service will be happy to help you.

You can contact us directly at info@fuxtec.co.uk.



1. Scope of delivery:



Aluminium frame + Fabric cover



Roof incl. carrying bag



Rear bag incl. shoe compartment



2 swivel front wheels



Rear axle incl. parking brake
+ 2 rear wheels



Protective cover



Transport bag - roof rack



Coolbox - closed



Coolbox - open

2. Assembly instruction

2.1 Mounting the front wheels/swivel wheels



Step 1:

Place the front wheel on the bracket as shown.

Step 2:

Press the safety button and keep it pressed.

Step 3:

With the safety button pressed down, place the front wheel onto the holder.



Step 4:

After the wheel is mounted, release the safety button.

5. step:

Repeat the process for the 2nd front wheel.

IMPORTANT NOTE

Please make sure that the wheels are properly locked before each use.

2.2 Mounting the rear wheel axle



- Step 1:**
Position the rear axle as shown
- Step 2:**
Press the rear wheel axle onto the frame until it engages.
- Step 3:**
Please check carefully that the rear wheel axle is engaged and then firmly connected to the frame.

2.3 Fixing the rear wheels




- Step 1:**
Pull the safety bolt as shown.
- Step 2:**
While holding the pulled out safety bolt, put the wheel on the rear axle. When the wheel is in the desired position, release the safety bolt.
- Step 3:**
Repeat the procedure for the 2nd rear wheel.

2.4 Assembly of the roofing



- Step 1:**
Remove the two pairs of roof bars from the transport bag.

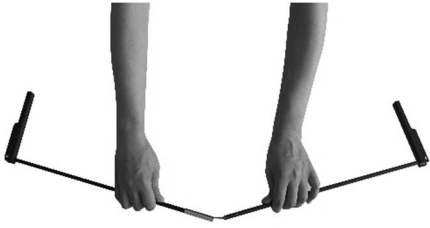

Step 2:
Join the bars of a pair along the middle retaining rubber band.



Step 3:
Please place the attachments of the holding rods diagonally on the telescopic rods - as shown in the picture on the left.



"Top view" of the correctly positioned roof bars.



Step 4:
Stretch the fabric roof over the wagon using the telescopic rods.

2.5 Attaching the rear bag



Hook the rear bag into the horizontal frame struts below the push handle as shown.

3. Intended use

3.1. Removing and attaching the protective cover



Step 1:

Place the wagon in front of you as shown.

Step 2:

Loosen the two safety clips on the lower part of the wagon

Step 3:

Open the velcro and pull the protective cover upwards.

To attach the protective cover, proceed in the reverse order.


3.2 Unfolding the wagon



Step 1:
Loosen the safety clip.



Step 2:
Pull the wagon apart and lay the fabric over
the frame.

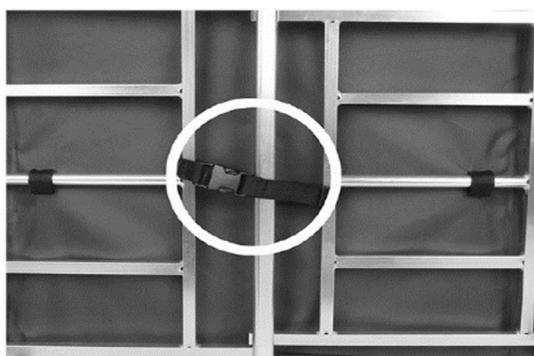


Fix the safety clip outside the aluminium
frame to prevent accidental folding of
the wagon during use.

Important note:
Before folding, the safety clip
must be fixed inside the frame.

3.3 Folding the wagon



Step 1:
Remove the roofing and retract the telescopic rods into the frame.

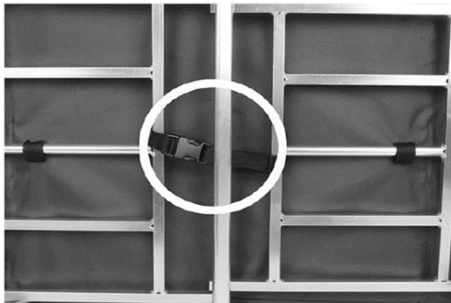

Step 2:
Fix the safety clip inside the frame as shown.



Step 3:
Pull on the fabric tab shown to pull the wagon together. Then press the wagon together by hand.



Step 4:
Close the safety clip. To reduce the size of the wagon, you can also easily pull the safety strap.

3.4 Adjusting the push handle and pull bar



Step 1:
Press both buttons on the push bar at the same time to adjust the angle. The handle can lock in different positions.

Step 2:
To use the telescopic pull bar, simply pull it out of the frame holder by the handle.

3.5 Moving the wagon



Use the rear push handle to push the wagon along paved paths. In more difficult terrain, please use the telescopic pull bar at the front end of the wagon.

3.6 Operating and releasing the parking brake



To lock the brake, press it down. Make sure that the brake rod engages with the gear wheels of the tyres when braking. To release the lock, lift the brake lever.

Important note:

Please make sure that you lock the parking brake when you put your child in or take it out of the wagon.

3.7 Use of the roofing

The roof has a built-in net, with which you can see inside the car at any time.

Step 1: To expose the net, open the zip.

Step 2: Once the cover is completely open, it can be attached to the other end of the wagon using the velcro fasteners at the corners.

3.8 Use of safety belts



Insert the combined shoulder belt/pelvis belt buckles into the buckle to close the 5-point safety belt.

Adjusting the belt:

Adjust the belt by moving the belt adjusters on the shoulder, lap and crotch straps to the required position.

CAUTION! Always adjust the 5-point safety belt when you change your child's sitting position.

Opening the belt:

Press the middle button on the buckle and pull the combined shoulder belt/pelvis belt buckle tabs out of the buckle.

IMPORTANT NOTE

Always use the safety belt system!

CAUTION! When the belt is on or open, its ends must not be within the reach of small children. These are small parts and there may be a risk of suffocation.

3.9 Removing the fabric cover




Step 1:

Open all plug connections on the fabric cover.



Step 2:
Loosen all velcro fasteners and press buttons at the front and back of the wagon.

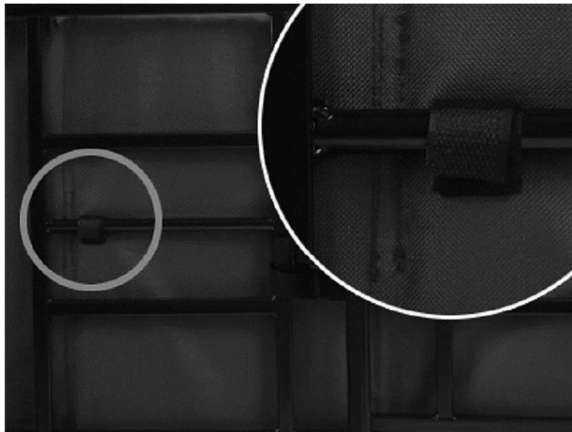

Step 3:
Open all velcro fasteners on the underside of the wagon. Afterwards, you can remove the loose fabric cover from the frame.

3.10 Maintenance and care

The product should be checked and cleaned regularly.

- Please regularly check all essential parts for damage. Make sure that the mechanical components are working correctly.
- Please regularly check that all screws, rivets, bolts and other fastenings are tight.
- Do not use grease or oil for lubrication, but a silicone-based spray.
- Too heavy a load, improper folding or the use of unauthorised accessories can damage or destroy the wagon.
- Never load more than 5 kg into the rear bag.
- Store the folded wagon only in a well-ventilated place to prevent mould growth.
- The textile parts may lose colour if exposed to heavy use over an extended period (e.g. intensive sunlight); however, this does not constitute a reason for complaint.
- Do not use the wagon if parts are bent, worn or broken.
- Do not use accessories that have not been approved by FUXTEC GmbH for use with the CTL 900.

4. Care instructions

The textiles of the wagon can be cleaned with a sponge and warm soapy water. Do not use any harsh or abrasive cleaning agents (chlorine, etc.) to clean the textile cover, but only a light soap solution or a special textile cleaning agent.

The plastic parts, as well as the chassis, should also be cleaned with a soap solution; after using the wagon in rain or wet, always clean and dry the frame. If the fabric upholstery is soaked, allow the wagon to dry in the upright or stretched state.

You should remove the wheels regularly and treat the axles and all articulated joints and suspension with a silicone-based spray (no grease or oil). In this way, you can ensure that your wagon runs smoothly and quietly and limit premature wear and tear. By taking care of your wagon, make sure that no rust film is formed, as this is not a reason for complaint.

5. Warranty

This product is manufactured to the highest quality standards. When purchasing a new product, the manufacturer grants the legal warranty of 24 months, beginning with the date of sale. The warranty only covers defects which are due to material or manufacturing faults and the non-fulfilment of guaranteed characteristics. When asserting the warranty, the original sales receipt with the date of sale must be enclosed. Warranty repairs are carried out exclusively by FUXTEC GmbH. A warranty claim exists only if the product is used as intended.

Excluded from the statutory warranty are all damages caused by the following events:

- Abuse, overloading or neglect.
- Commercial use (industry, trade, rental).
- Repairs by non-authorised services.
- Damage caused by external influences, foreign bodies, substances or accidents.

Wear parts are excluded from the warranty.

6. Warnings and safety instructions

IMPORTANT!

Please keep this manual in a safe place for future reference. Failure to follow these instructions may compromise your child's safety. It is essential that all persons using the wagon and its accessories know how to handle it, even if the person concerned only uses the wagon for a short time. Please note that this manual cannot exclude all possible risks that a child may be exposed to as a result of using this product. The user is responsible for the safety of the child. If you have any further questions, the FUXTEC customer service will be happy to help you.

IMPORTANT!

Please read the instructions carefully and familiarise yourself with the wagon before using it with your child.

If your wagon is used by other people who are not familiar with it (e.g. grandparents), always explain how to use it in advance.

The safety of your child may be compromised if you do not follow these instructions.

Keep the instructions carefully for future reference.

Do not use accessories that have not been approved by FUXTEC GmbH for use with the CTL-900.

Only original spare parts made or recommended by FUXTEC GmbH should be used with the CTL-900.

If you have any questions regarding the use of the CTL-900 or its accessories, please contact the customer service of FUXTEC GmbH.

IMPORTANT! The maximum load capacity of the wagon is 75kg (plus another 5kg on the attachable rear bag).

WARNING! This seating unit is not suitable for children under six months.

WARNING! This product is not suitable for jogging or skating.

WARNING! Before use, make sure that all locks are closed.

WARNING! Never lean on the push handle at the rear of the wagon or do not practice excessive pressure on the push handle. This handle is comfortable and is not compare the handling of a pram.

WARNING! When carrying the wagon, make sure that the safety locks are not accidentally opened.

WARNING! When folding up the stand, make sure that you and others do not get trapped.

WARNING! Do not fold the wagon when there are one or more children in it.

WARNING! Do not let your child play with the wagon.

WARNING! Make sure that your child is out of reach when folding and unfolding the wagon to avoid injury.

WARNING! Use a safety belt as soon as your child can sit independently.

WARNING! Never leave your child unattended.

WARNING! When parking the wagon, always apply the brake before inserting or removing the child.

WARNING! Loads attached to the push handle impair the stability of the wagon.

WARNING: Protect children from intense sunlight. The soft top does not provide complete protection against dangerous UV radiation.

WARNING! Always use the crotch strap in combination with the lap belt.

WARNING! Always adjust the belt to the correct position when you change the sitting position of your child.

WARNING! Use this wagon only for the intended number of children (2).

WARNING! Loads attached to the handle or the backrest or the sides of the wagon impair the stability of the wagon.

IMPORTANT! Park the wagon only with the brakes applied.

IMPORTANT! always check that the brake is correctly applied.