

Say hello to your Lucky Voice Party Box

Very many congratulations. You're on the verge of transforming your home computer into the ultimate karaoke machine. Within minutes you'll be able to sing thousands of songs from Frank Sinatra to Lady Gaga.

What you need



✕ A COMPUTER

PC, Mac or laptop, it doesn't matter. It just needs to have a broadband internet connection.



✕ AMPLIFIED SPEAKERS

You can use an iPod speaker dock, your Hi-Fi or TV speakers. You can even use external computer speakers.

✕ A HEALTHY LACK OF INHIBITION!

Just because it makes the singing a bit more fun. Try humming a little Elton or Beyonce now to get you in the mood.

What you get



Party Box



Microphone



Microphone cable



Power adaptor



3.5mm to phono cable



3.5mm to 3.5mm cable (x2)

Got all those? Good.
Then here's how you get singing.

1. GET SIGNED UP.

- ✕ On your computer go to www.luckyvoice.com/activate
- ✕ On this page, enter the voucher code below.

Voucher code:

- ✕ Now just fill in your details and you'll be singing in no time!

2. GET CONNECTED.


- ✕ Plug in the power adaptor and connect it to your Party Box (don't switch it on just yet!).
- ✕ Using one of the 3.5mm to 3.5mm cables, connect one end to your computer's headphone socket and the other end to 'music in' on your Party Box.
- ✕ Now you have a choice of how you want to play your music:

HI-FI / TV SPEAKERS – Using the 3.5mm to phono cable, plug the red and white connectors into the 'AUX In' red and white sockets on your HiFi or TV. Connect the other end (3.5mm jack) to 'audio out' on your Party Box. Check your TV settings to ensure audio is diverted via the RCA ports if necessary.


iPod SPEAKER DOCK – Using the other 3.5mm to 3.5mm cable, connect one end to the 'AUX In' socket on your iPod speaker dock. Connect the other end to 'audio out' on your Party Box. Check your iPod speaker dock is set to AUX mode.

PC SPEAKERS – If you have external amplified speakers you can simply plug their cable into the 'audio out' socket on your Party Box.

3. GET SINGING!

- ✕ Connect the microphone cable to the microphone and plug it into the 'mic one' socket on your Party Box. (You can add an additional microphone using the 'mic two' socket).
- ✕ Now switch on the microphone and press the  button on the front of the Party Box.
- ✕ Turn up the volume and echo, choose your song and get singing!

Setting up your lucky voice party box

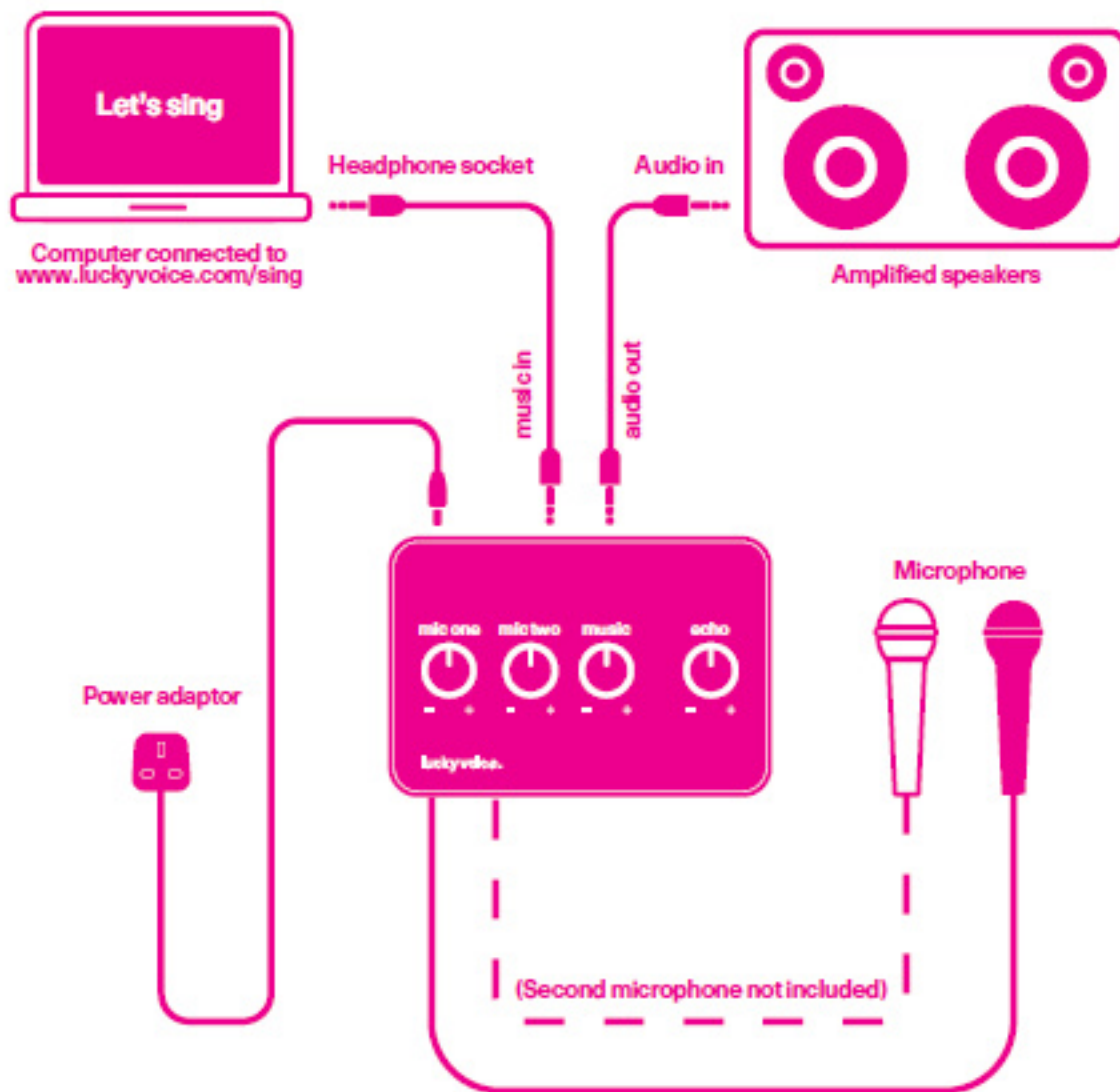

Warm up playlist

We hope that your Party Box will provide you with enough entertainment for a lifetime's worth of parties and to give you some inspiration we've compiled a little warm up playlist! You can ignore our suggestions entirely, of course – there are thousands of other songs to choose from!!

Title	Artist
Don't Stop Believin'	Journey
Bad Romance	Lady Gaga
Mamma Mia	ABBA
Mr. Brightside	The Killers
Gold	Spandau Ballet
I Gotta Feelin'	Black Eyed Peas
9 To 5	Dolly Parton
Bohemian Rhapsody	Queen
Man In The Mirror	Michael Jackson
Valerie	Mark Ronson Feat. Amy Winehouse
Fight For This Love	Cheryl Cole
Livin' On A Prayer	Bon Jovi
Don't Go Breaking My Heart	Elton John & Kiki Dee

www.luckyvoice.com/sing



Lucky Voice and Party Box are trade marks of Lucky Voice Group Ltd. We care about our environment. Please encourage recycling in your community.