VERY IMPORTANT

If you removed your keycard prior to sending your ECO Pro in for service, and it still had time remaining on it, please follow this procedure to prevent losing the minutes remaining on your keycard. ELM USA is not responsible for any damage or lost minutes to your keycard.

Because it requires using a keycard to test your machine while in service, we have inserted a 20 minute keycard. Run your machine as normal with this keycard until you use ALL of the minutes remaining on the keycard. You will know when its void of minutes when the display reads, "CHANGE KEYCARDS".



Caution! Be sure the unit is turned OFF before inserting or removing the KEY CARD.

Now, turn **OFF** the Main Power Switch and exchange the 20 minute keycard with your old keycard.

By not following these instructions exactly, you risk damage to your machine, and corrupting your keycard and losing the remaining minutes. **ELM USA is not responsible for any damage or lost minutes to your keycard.**

