


# HOW TO USE A GAMECUBE ADAPTER

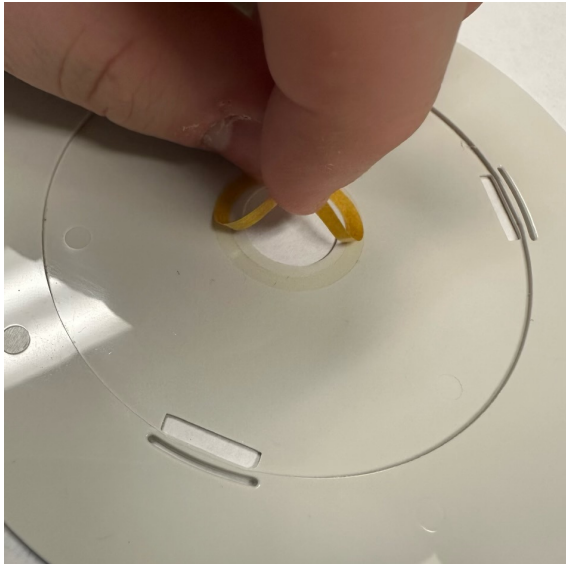

REMOVE PROTECTIVE WAX PAPER COVER  
FROM ADAPTER'S ADHESIVE RING.

PLACE GAMECUBE INTO ADAPTER WITH  
THE SIDE TO BE REPAIRED FACING UP.

PRESS AROUND THE CENTER OF THE ADAPTER  
WHERE THE ADHESIVE RING IS LOCATED. THIS  
ALLOWS THE GAMECUBE DISC AND ADAPTER  
TO AFFIX TO EACH OTHER.




# YOU ARE NOW READY TO REPAIR GAMECUBE DISCS

## NOTE:

ALWAYS REAPPLY PROTECTIVE WAX PAPER COVER OVER ADHESIVE RING WHEN ADAPTER IS NOT IN USE.

REPLACE ADHESIVE RING WHEN IT NO LONGER PROPERLY HOLDS THE GAMECUBE TO THE ADAPTER.

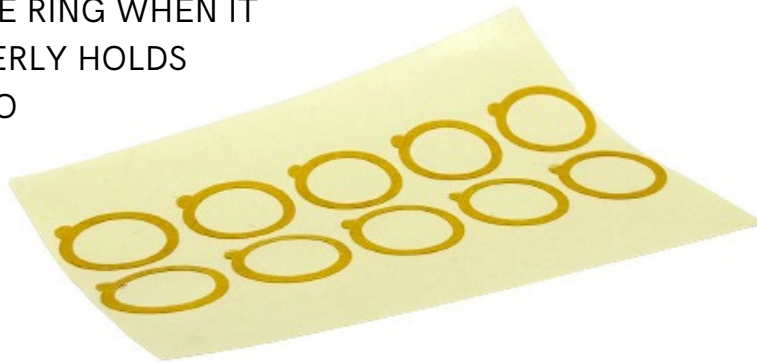

WHEN APPLYING, BE CERTAIN TO COMPLETELY REMOVE THE OLD ADHESIVE.

EACH STICKER IS GENERALLY GOOD FOR ABOUT 30 REPAIRS, BUT THIS CAN VARY.

REPLACE YOUR ADAPTER IF IT IS BROKEN, CRACKED OR DEFORMED IN ANY WAY.