

# How to clear an alert **AL** message

With the machine turned on and the door open, press and release the “MODE” button corresponding with the alert message (IE buttons 1-5). Then press and hold down the same button until the counter resets and goes to zero. (see below for details)

ST	TIME	COMMAND	ACTION
AL	01	<b>Replace Pad #1 (Black)</b>	Press 1, then let go. Press 1 again, but this time hold it down until it zeros out.
AL	02	<b>Replace Pad #2 (Yellow)</b>	Press 2, then let go. Press 2 again, but this time hold it down until it zeros out.
AL	03	<b>Replace Pad #3 (Green)</b>	Press 3, then let go. Press 3 again, but this time hold it down until it zeros out.
AL	04	<b>Replace Pad #4 (Red)</b>	Press 4, then let go. Press 4 again, but this time hold it down until it zeros out.
AL	05	<b>Replenish Compound</b>	Press 5, then let go. Press 5 again, but this time hold it down until it zeros out.
AL	06	<b>Replenish Water</b>	Press 5, then let go. Press 5 again. Press 5 a 3rd time, but this time hold it down until it zeros out compound.
AL	10	<b>Replace Blu-ray Pad (Purple)</b>	Enter "BD" mode by opening front door and pressing the RED button until you see BD flashing. Press 2, then let go. Press 2 again, but this time hold it down until it zeros out.
AL	11	<b>Front Door Open</b>	Close the front door and press any panel button.
AL	12	<b>No Pad Holder</b>	Check to be certain all pad holders are in place correctly.

**ELM USA**

1609 Barclay Blvd  
 Buffalo Grove, IL 60089  
 +1 847-243-4150  
 sales@elm-usa.com  
 www.elm-usa.com

