

-1805-

EARNSHAW

*London*

INSTRUCTION  
MANUAL



Vol. I.07A EN

-1805-

EARNSHAW

*London*

**Congratulations  
on your purchase of this finely  
crafted Earnshaw Timepiece.**

**You are now the owner of a  
timepiece that draws its roots from  
the renowned English horologist,  
clock and watch maker**

**Thomas Earnshaw  
1749 - 1829**

# AUTOMATIC 3 HANDS MULTIFUNCTION

This timepiece is equipped with a self-winding Mechanical Automatic movement.

It does not need a battery.


It is powered by the motions of the user's own wrist during the wear of the watch.

You may also choose to wind the watch manually.

For more details on operating this timepiece please refer to the enclosed booklet or visit :

**WWW.THOMAS-EARNSHAW.COM**

## A) DISPLAY

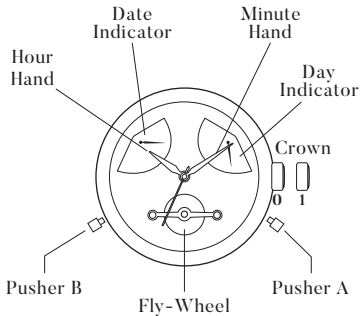

## B) WINDING THE MAINSPRING

Automatic winding watch can be hand wound by turning the crown in it's normal crown position.

Wind 5-10 times and it will start to move naturally after shaking slightly.

## NOTE:

This watch **MUST** be worn for at least 8 (Eight) hours each day to ensure it is fully wound.

 
 
 
An automatic watch will only wind when the watch is on your wrist and your arm moves.

Winding the watch by the crown will put power on the spring but not enough to allow the watch to function fully.



If your watch stops overnight or loses time it means it is not being fully wound.

## C) TIME SETTING

1. Pull the crown to position 1.
2. Turn the crown to set Hour and Minute hands.
3. Push the crown back to position 0.




## D) QUICK CHANGE CORRECT FOR DAY (Push "A" at 4 o'clock position)

  

1. Pull the crown to position 1.
2. Pressing pusher A for the day display to move forward by one day.
3. Push the crown back to position 0.


\* You should not use this quick change corrector between 11:30 p.m. and 5:30 a.m. because the automatic change mechanism is in operation between these times.

## E) QUICK CHANGE CORRECT FOR DATE (Push "B" at 8 o'clock position)

 


1. Pull the crown to position 1.
2. Pressing pusher B for the date to move forward by one date.
3. Push the crown back to position 0.

**Pusher B**

 

\* You should not use this quick change corrector between 11:30 p.m. and 5:30 a.m. because the automatic change mechanism is in operation between these times.

## F) SET DATE & DAY

 

1. Pull the crown to position 1.
2. Turn the crown clockwise to set time at 6:00am.
3. Use the quick-change correctors to set the day (pusher A) and date (pusher B).
4. Turn the crown to set the correct date and day.
5. Push the crown back to position 0.

## WATER RESISTANCE

The water resistance indicated on your timepiece serves only as a guide. Actual water resistance may vary depending on a number of important factors including temperature, water salinity, and actual use under water.

The water resistance of your timepiece may eventually be compromised over time with general wear and tear and the use of your watch under adverse conditions.

Always remember to employ the screw down crown (if available) to maintain the water resistance of your timepiece. Warranty may be voided if the screw down crown has not been properly employed.

Note that you should **NEVER** wear your watch in a jacuzzi, hot shower or steam room where steam may enter the case despite the watertight seals used to protect your watch.

The steam may cause condensation inside your watch, which may affect and damage the inner workings of your watch – which would also not be covered by the warranty.