

-1805-

EARNSHAW

London

INSTRUCTION
MANUAL



Vol.1.29 EN

-1805-

EARNSHAW

London

**Congratulations
on your purchase of this finely
crafted Earnshaw Timepiece.**

**You are now the owner of a
timepiece that draws its roots from
the renowned English horologist,
clock and watch maker**

**Thomas Earnshaw
1749 - 1829**


CHRONOGRAPH WATCH

This watch is equipped with a quartz powered chronograph movement. Besides the normal time read out, this movement enables split timing micro measurements of time at the push of a button, which can be utilized in a variety of applications.

For more details on operating this timepiece please refer to the enclosed booklet or visit :

IM.THOMAS-EARNSHAW.COM

A) DISPLAY

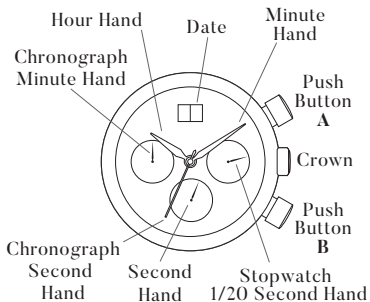

CLOSED:
PUSHED BACK
AND WATER RESISTANT

(1st click)




(2nd click)



OPENED:
NOT SECURED FOR
WATER RESISTANCE


B) HOW TO SET THE TIME

1. Pull the crown to position [2]-(2nd click).
2. Turn the crown clockwise to set the correct time.
3. Push the crown in.

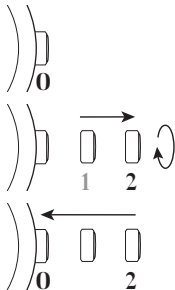

C) HOW TO SET THE DATE

1. Pull the crown to position [1]-(1st click).
2. Turn the crown to set the correct date.
3. Push the crown in.

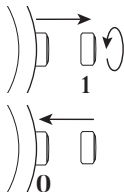


* If the date is set between the hours of around 9:00 P.M. and 3:00 A.M., the date may not change on the following day.

D) STOPWATCH FUNCTION


- This chronograph is able to measure and display time in 1/20 second united up to maximum of 59min 59sec.
- The chronograph 1/20 second hand moves continuously for 30 seconds after starting, and then stops at Zero position.

STANDARD MEASUREMENT

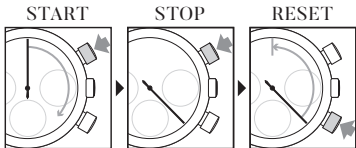

4

ACCUMULATED ELAPSED TIME MEASUREMENT

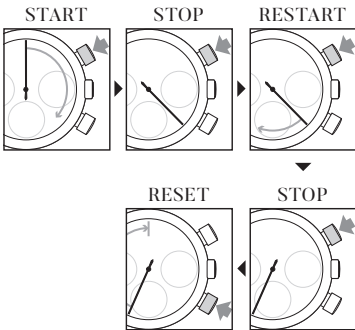

Restart and stop of the stopwatch can be repeated by pressing the button A.

5

E) CHRONOGRAPH RESET


(incl. after replacing battery)


This procedure should be performed when the chronograph second hand does not return to the Zero position.

1. Pull the crown out to the [2]-(2nd click).
2. Press the button "A" once to set the chronograph second hand to the Zero position.
3. Press the button "B" once to set the chronograph 1/20 second hand to the Zero position.

* The chronograph hands can be advanced rapidly by continuously pressing button "A" or "B".

4. Once the chronograph hands are set at Zero position, readjust the normal hour and minute hands to the correct time and return the crown to its normal position.

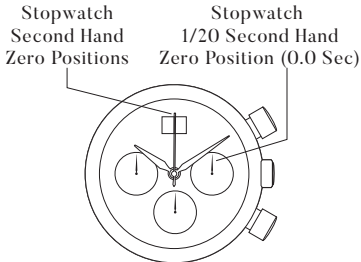

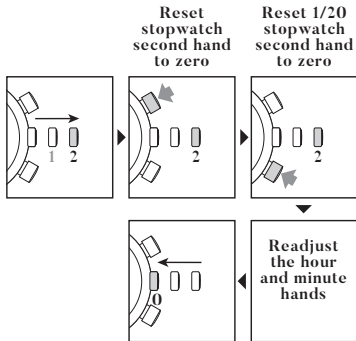

WATER RESISTANCE

The water resistance indicated on your timepiece serves only as a guide. Actual water resistance may vary depending on a number of important factors including temperature, water salinity, and actual use under water.

The water resistance of your timepiece may eventually be compromised over time with general wear and tear and the use of your watch under adverse conditions.

Always remember to employ the screw down crown (if available) to maintain the water resistance of your timepiece. Warranty may be voided if the screw down crown has not been properly employed.

Note that you should **NEVER** wear your watch in a jacuzzi, hot shower or steam room where steam may enter the case despite the watertight seals used to protect your watch.

The steam may cause condensation inside your watch, which may affect and damage the inner workings of your watch – which would also not be covered by the warranty.