

| Item# | Parts Number | Description | Remarks |
|-------|-------------------|-------------------------|----------------|
| 1 | A0100 | Top Housing | For AL-235/250 |
| 1 | P01020 | SP Top Housing | For SP ser. |
| 1 | A0100X | 99 Top Housing | For AL/CE-99 |
| 2 | A0100-01 | Bevel Gear Nut | |
| 3 | A0100-02A | Washer | |
| 4 | A0100-02B | Washer | |
| 5 | A0100-02C | Washer | |
| 6 | A-0100-02D | Washer | |
| 7 | A0100-04A | Washer | |
| 8 | A0100-04B | Washer | |
| 9 | A0100-04C | Washer | |
| 10 | A0100-04E | Washer | |
| 11 | A0100-07A | Washer | |
| 12 | A0101A | Needle Bearing | |
| 13 | A0101B | Inner Ring | |
| 14 | A0101C | Needle Bearing | |
| 15 | A0102 | Circuit Breaker | |
| 16 | A0102-01 | Cap of Circuit Breaker | |
| 17 | A0103 | Bushing Bearing | |
| 18 | A0106 | Drive Gear Shaft | For AL Ser. |
| 18 | P01022 | Drive Gear Shaft | For SP Ser. |
| 19 | A0106V | Drive Gear | For AL Ser. |
| 19 | P01021 | SP Drive Gear | For SP Ser. |
| 19 | A0106X | 99 Drive Gear | For AL/CE-99 |
| 20 | A0109 | Spacer | |
| 21 | A0110 | Light Transmitter | |
| 22 | A0111-01 | Hex-Seal Boot | |
| 23 | A0111-01A | Nut for Rapid Switch | |
| 24 | A0111-02 | Rapid Switch plunger | |
| 25 | A0111-03 | Spring for Rapid Switch | |
| 26 | A0111-04 | Rapid Switch Housing | |
| 27 | A0111-1-5 | Rapid Switch Button | |
| 28 | A0112 | Spring For Top Housing | |
| 29 | A0113 | Adaptor | |
| 30 | A0301-05 | Spring For Clutch | |
| 31 | A0301-06 | Washer T.r.a. | |
| 32 | A0301-07 | Washer Bearing N.t.a. | |
| 33 | A0301-08 | Bearing Cup | |
| 34 | A0301-09 | Lift Fork | |

| | | | |
|----|------------------|-----------------------|--------------|
| 35 | A0301-10 | Washer | |
| 36 | A0301-12A | Shaft Mount | |
| 37 | ALW-25-1 | Wire | |
| 38 | ALW-26 | Wire | |
| 39 | ALW-3 | Wire | |
| 40 | ALW-6 | Wire | |
| 41 | ALW-7 | Wire | |
| 42 | ALW-8 | Wire | |
| 43 | ALW-9 | Wire | |
| 44 | B00001 | Bearing | |
| 45 | B00006 | Bearing | |
| 46 | C0501 | Micro Switch Holder | |
| 47 | C0501-6V | Micro Switch Assembly | |
| 48 | C0502 | Switch Actuator | |
| 49 | C0504 | Micro Switch | |
| 50 | C0506 | Capacitor | |
| 51 | C0507 | Micro Switch Holder | |
| 52 | C0508 | Micro Switch Assembly | |
| 53 | C0508-01 | Mounting Plate | |
| 54 | C0508-02 | Micro Switch | |
| 55 | D0701V | Bottom Cover | For AL Ser. |
| 55 | D0701 | 99 Bottom Cover | For 99 Ser. |
| 55 | P01010 | SP Bottom Cover | For SP Ser. |
| 56 | P01941 | Bottom Housing | For AL/SP |
| 56 | P01942 | 99 Bottom Housing | For AL/CE-99 |
| 57 | E0902V | 250 Cam Assembly | For 250 Ser. |
| 57 | E0902P | 235 Cam Assembly | For 235 Ser. |
| 57 | E0902X | 99 Cam Assembly | For AL/CE-99 |
| 58 | E0904 | Carbon Brush Set | |
| 59 | E0905 | Brush | |
| 60 | E-0907 | On-Off Switch | |
| 61 | E0907-01 | Cap of On-Off Switch | |
| 62 | E0907-02 | Washer | |
| 63 | E0910 | Spring Washer | |
| 64 | E0911 | Set Screw | |
| 65 | E0912 | Speed Control Knob | For AL Ser. |
| 65 | P01024 | Speed Control Knob | For SP Ser. |
| 66 | E0913 | Handle Knob | |
| 67 | E0913-01 | 180' Control Handle | |
| 67 | E0913-02 | 90' Control Handle | |
| 68 | E0913A | Inner Ring | |

| | | | |
|-----|------------------|----------------------------|--------------|
| 69 | E0915V | Circuit Board Insulator | |
| 70 | E0916V | 250 Circuit Board Assembly | For 250 Ser. |
| 70 | JC2H | 235 Circuit Board Assembly | For 235 Ser. |
| 70 | JC5H | CE Circuit Board Assembly | For CE235/99 |
| 71 | E0917 | Strain Relief | |
| 72 | E0922 | Lift Fork Shaft | |
| 73 | E0925V | AL Armature Assembly | For AL Ser. |
| 73 | P01907 | SP Armature Assembly | For SP Ser. |
| 74 | E0926V | 250 Motor Field | For 250 Ser. |
| 74 | E0926P | 235 Motor Field | For 235 Ser. |
| 75 | E0927A | Bearing Mount | |
| 76 | E0928 | Bushing | |
| 77 | E0929-01 | Strain of Potentiometer | |
| 78 | E0929-02 | Ring of Potentiometer | |
| 79 | E0929-03 | Cap of Potentiometer | |
| 80 | E0929-04 | Washer of Potentiometer | |
| 81 | E0929-05 | Nut of Potentiometer | |
| 82 | E0929V | 250 Potentiometer | For 250 Ser. |
| 82 | E0929P | 235 Potentiometer | For 235/99 |
| 83 | E0930 | Power Cord | |
| 84 | E0934-01 | Crescent ring | |
| 85 | E0934-02 | Washer | |
| 86 | E0934-03 | Spring Washer | |
| 87 | E0934-04 | Hub of Zytel Gear | |
| 88 | F01001 | Crescent Ring | |
| 89 | F10040 | E-Ring | |
| 90 | F10050 | E-Ring | |
| 91 | F1104 | Micro Switch | |
| 92 | F1106A-2 | Control Cord | For AL/SP250 |
| 92 | F1106V | Control Cord | For 235/99 |
| 93 | G0100-011 | Travel Stop | |
| 94 | G0103 | Nut | |
| 95 | G0106 | Crescent Ring | |
| 96 | G0107 | Spring | |
| 97 | G0108 | Travel Stop Shaft | |
| 98 | N10020 | Nut | |
| 99 | N10030 | Nut | |
| 100 | N22001 | Nut | |
| 101 | E0906 | Carbon Brush Cap | |
| 102 | P01007 | Plastic Gear | |

| | | | |
|-----|-----------------|------------------------|---------------|
| 103 | P01012 | Bevel Gear | For AL Ser. |
| 103 | P01013 | Bevel Gear | For AL Ser. |
| 103 | P01014 | Bevel Gear | For Al Ser. |
| 103 | P01016 | Bevel Gear | For SP Ser. |
| 103 | P01025 | Bevel Gear | |
| 103 | P01026 | Bevel Gear | |
| 103 | P01039 | Bevel Gear | |
| 103 | P01017 | SP Bevel Gear | For SP Ser. |
| 103 | P01032 | SP Bevel Gear | |
| 103 | P01054 | SP Bevel Gear | |
| 104 | P01015 | Limit Switch Cover | |
| 105 | P01018 | Limit Switch Holder | |
| 106 | P01019 | Actuator | |
| 107 | P01028 | Lift Fork Ring | |
| 108 | P01040 | Hold Plate | |
| 109 | P01901 | Drive Gear Assy | For AL Ser. |
| 110 | P01903 | Lift Fork Assy | |
| 111 | P01904 | Micro Swith Assy | |
| 112 | P01905 | 250 Potentiometer Assy | For 250 Ser. |
| 112 | P01908 | 235 Potentiometer Assy | For 235/99 |
| 113 | P01909 | Zytel Gear Assy | |
| 114 | P01910 | Limit Switch Assy | For AL/SP-250 |
| 114 | P01924 | Limit Switch Assy | For AL-235 |
| 114 | P01925 | Limit Switch Assy | For CE-250 |
| 114 | P01926 | Limit Switch Assy | For CE-235 |
| 115 | P01916 | Travel Stop Set | |
| 115 | P01943 | Travel Stop Set | For AL/CE-99 |
| 116 | P01917 | Bevel Gear Set | |
| 117 | P01923 | Lift Fork Assy | |
| 118 | T12010 | Screw | |
| 119 | T13015 | Screw | |
| 120 | T13020 | Screw | |
| 121 | T13030 | Screw | |
| 122 | T14006 | Screw | |
| 123 | T14010 | Screw | |
| 124 | T14010-1 | Screw | |
| 125 | T14070 | Screw | |
| 126 | T20001 | Set Screw | |
| 127 | T20003 | Set Screw | |
| 128 | T55035 | Set Screw | |
| 129 | T60001 | Set Screw | |

| | | | |
|-----|------------------|----------------------|--------------|
| 130 | T74004 | Set Screw | |
| 131 | U32025 | Pin | |
| 132 | U32516 | Pin | |
| 133 | U33015 | Pin | |
| 134 | U35014 | Pin | |
| 135 | U42515 | Pin | |
| 136 | U43014 | Pin | |
| 137 | U43017 | Pin | |
| 138 | W04001 | Spring | |
| 139 | W10050 | Washer | |
| 140 | W10080 | Washer | |
| 141 | W10080-1 | Washer | |
| 142 | W20040 | Spring Washer | |
| 143 | D20014 | On-Off Brand | |
| 144 | P01919 | Limit Switch Fixture | |
| 144 | P01948 | Limit Switch Fixture | For AL/CE-99 |
| 145 | P01922 | Extension Shaft | Option |
| 145 | P01929 | Extension Shaft | Option |
| 146 | A0301-15A | T-Way Track | Option |
| 146 | A0301-15B | T-Way Track | Option |
| 146 | A0301-15E | T-Way Track | Option |
| 147 | PFB-01 | Alum Stand | Option |
| 147 | PFB-02 | Alum Stand | Option |
| 147 | PFB-18 | Stand | Option |
| 148 | PFB-06 | Extension Shaft | Option |
| 148 | PFB-07 | Extension Shaft | Option |
| 148 | PFB-07A | Extension Shaft | Option |
| 148 | PFB-08 | Extension Shaft | Option |
| 148 | PFB-15 | Extension Shaft | Option |
| 148 | PFB-16 | Extension Shaft | Option |
| 149 | PFB-03 | Extension Shaft Ring | Option |
| 149 | PFB-04 | Extension Shaft Ring | Option |
| 149 | PFB-05 | Extension Shaft Ring | Option |
| 149 | PFB-09 | Extension Shaft Ring | Option |
| 149 | PFB-10 | Extension Shaft Ring | Option |
| 149 | PFB-13 | Extension Shaft Ring | Option |
| 149 | PFB-14 | Extension Shaft Ring | Option |
| 150 | A011399A | Small Adaptor | For AL/CE-99 |
| 151 | A011399 | Big Adaptor | For AL/CE-99 |
| | | | |