 



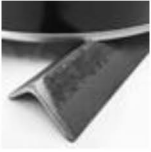
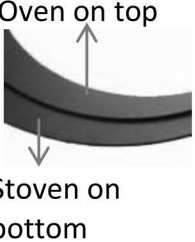


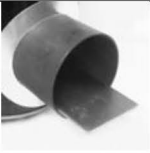
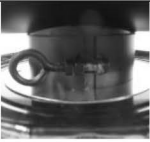




The Rocket Stoven

Assembly Instructions DeluxeCamping.com

	<p>Step 1 Remove the following pieces from the Rocket Stoven:</p> <ul style="list-style-type: none"> 2 angle-iron pieces 1 flat metal plate 1 pan support 		<p>Step 6 Place the pan support on the top of the burn chamber as shown. (Put a piece of wafer board/plywood 14"by 14" underneath the stove—not included)</p>
	<p>Step 2 Place the two pieces of angle iron as shown (About 6 inches apart). The cut grooves will be at a 45 degree angle with grooves at the top of the page both facing the center.</p>		<p>Step 7 If you ordered the oven you will need the Stoven collar.</p>
	<p>Step 3 Move each groove until all four grooves fit in bottom rim of the of the Rocket Stoven.</p>		<p>You will notice there is a ridge in the Stoven collar. The ridge faces down towards the Stoven.</p>
	<p>Step 4 If placed correctly, the Rocket Stoven will rest securely on the angle iron.</p>		<p>Step 8 Place the Stoven collar on the top of the stove pipe with the eye of the clamp screw on the front side for easy access.</p>
	<p>Step 5 Place the 4 inch wide flat steel piece in the burn chamber in the side pipe.</p>		<p>Step 9 Carefully place the oven in the Stoven collar and tighten the eye screw.</p>