

# USER GUIDE


**ALLSOP**<sup>®</sup>

## ADJUST HEIGHT

- Unfold the TriTilt Laptop Stand.
- Determine the height for your laptop screen.
- Position the stabilizer rung (A) into the desired set of clips (B) on the base (C).
- Make sure both clips are securely set around stabilizer rung.
- Prior to placing a laptop or other device on the stand, push back on the top (D) of the assembled stand to assure rung and base are engaged.

## TRITILT™ 4-WAY ADJUSTABLE LAPTOP STAND

Model #31660

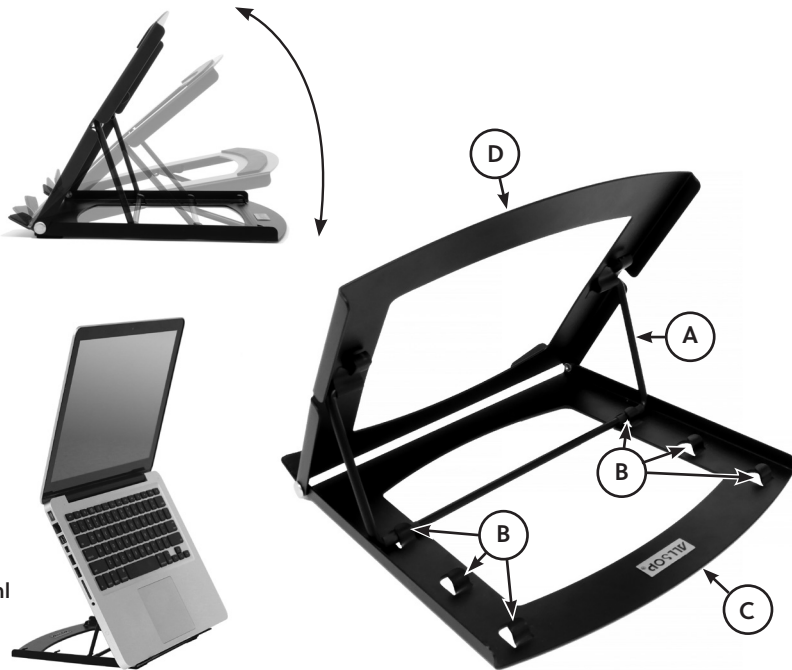

## NOTE

Select the best laptop screen height for your desk or workspace.

Fold flat for storage and transport.

For suggested workspace ergonomics, visit:  
[www.osha.gov/SLTC/etools/computerworkstation/positions.html](http://www.osha.gov/SLTC/etools/computerworkstation/positions.html)