G1

Golf Mode Quick Start Guide

 
For detailed information on the product, visit the website of Voice Caddie.

www.voicecaddie.com



How to Set-up Time

· Automatic setting (only available outdoors)





Automatic GPS reception when Golf Mode is selected

How to Set-up Time

· Automatic setting (only available outdoors)



Touch the Set-up menu on the menu screen



① Touch Time on the screen



2 Date Setting

- Swiping up or down to select year / date
- Touch the bottom V when setting is completed.

How to Set-up Time

· Automatic setting (only available outdoors)



Touch the Set-up menu on the menu screen



3 Set-up time format

* Touch to select between 12 or 24 hours



How to set-up time

* Set time and minutes by swiping up or down on your screen. * Push up or down to set AM or PM.

* Touch the bottom V when setting is completed.



S How to set up daylight saving time (DST)

* Touch ON or OFF.

Key Buttons

 Power On/Off: Press and hold the POWER button for at least 3 seconds

▶ Full Touch Screen



How to Move to Golf Mode

 Enter the Menu Screen by swiping the clock screen to left ←, and on Menu Screen, touch the 'Golf Mode' icon.



 
Detect Golf Course & Hole

When the 'Golf Mode' icon is touched, GPS is updated to detect the hole automatically.



Guide to 'Course View, Green View, and Distance Guide' Screen

- In 'Course View', swipe left (←) enter 'Green View"
- In 'Course View', swipe right (→) enter 'Distance Guide"



How to Use User IP

· Touch your target on the screen to get distance To that specific location on the course



Touch the target

Change the target

How to Use Pin Reload

· If you touch the screen where your desired pin is located, the pin location changes.



Touch the pin location to change it

Change pin location

* The image of Greenview golf course above can be different from the real one.

How to Use Smart Green View

• The angle of the green automatically changes based on the players location on the hole.



How to Download and Update the Mobile App

Swipe and select the menu screen



③ Activate Bluetooth by tapping 'Connect'



② Choose 'Bluetooth'



4 Check the unique serial # of your G1





How to Download and Update the Mobile App

Connect to the 'My Voice Caddie' App



Select Firmware Update for the most recent data



Select the Golf Course you wish to update



Expected time for update: about 5 minutes

- Quick GPS, latest firmware, and latest golf course information are updated.
- * Supported versions: iOS 11.0 or later / Android 5.0 or later / Bluetooth 4.2 or later. Some devices may not be supported.

How to Reset





Pressing both buttons simultaneously will reset and restart.



Δ

The small hole on the side of the watch is not reset button.

Pressing with a pointed object can cause damage and is not designed to be pressed.

- Notes -

- * The time required to capture GPS satellite signals while in golf mode may vary depending on the environment (weather, topography).
- * The battery's usage time may be reduced during rounds played in cold weather and in areas where satellite reception is poor. It is recommended that you turn the GPS power on once you are outside and ready to begin your round to extend usage time. Do not leave the device in vehicles as extremely hot temperatures may cause damage.
- * Do not leave the product in vehicles in hot temperatures or humid places as damage may occur.

 * Watch features will not be operational when the battery is
- * Watch features will not be operational when the battery is being charged.
 - * Operating Frequency: Bluetooth 2402~2480 MHz / GNSS 1559~1610 MHz
 - * Maximum Output Power: Bluetooth 0.11dBm (EIRP)
 - * Battery: Rechargeable-Lithium 3.7V / 340mAh

- Warranty Conditions -

Voice Caddie warrants this hardware product against defects

One Year Limited Warranty ———

in materials and workmanship for a period of one year from the date of original purchase. If a defect exists, at its option Voice Caddie will (1) repair the product at no charge, (2) exchange the product with a product that is new or like-new and is at least functionally equivalent to the original product, or (3) refund the purchase price of the product. Voice Caddie shall have no obligation to repair, replace or refund until the customer returns the defective product to Voice Caddie. This warranty does not apply: (1) to damage caused by accident. abuse, misuse, misapplication, or non-Voice Caddie products: (2) to damage caused by service performed by anyone who is not a Voice Caddie Authorized Service Provider; or (3) to a product or part that has been modified without the written per- mission of Voice Caddie. For more information on Voice Caddie's warranty and return policy, please visit www. Voicecaddie.com

- Caution -

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- This device complies with Part 15 of the FCC Rules.
 - Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's
- authority to operate this equipment.

 The device has been evaluated to meet the general RF
- exposure requirement.

 The device can be used in a portable exposure condition
 - without restriction.
 - * Risk of explosion if the battery is replaced with an incorrect type. Dispose of used batteries according to the instructions.

- Caution -

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reason able protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in acco rdance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the follow ing measures.

- Warranty Conditions -

Product	Voice Caddie Hybrid Golf Watch		
Model	G1		
Serial Number			
Date of Purchase		Full Name	
Purchase's Address		Telephone	
Warranty Period	One year after the date of purchase (other components are 6 months)		

- Warranty Conditions -

Responsible Party – U.S. Contact Information Street Address: 13951 Valley View Ave.

City, State : La Mirada, CA

Postal Code: 90638

Telephone number : 562-926-3978

Internet contact information : support@voicecaddie.com



www.voicecaddie.com