




TOWER FAN

Model: DDF-0BKDF3



➤ User Guide

 This symbol indicates the appliance is class II equipment, for which the power cord plug does not have the earth connection.

IMPORTANT SAFETY INSTRUCTIONS

- This device is intended for household use ONLY and not for commercial, industrial or outdoor use. Any other use is to be considered inappropriate and therefore dangerous. The manufacturer cannot be held responsible for eventual damage caused by inappropriate, improper or irresponsible use and/or for repairs made to the product by unauthorised personnel.
- Do not touch the appliance with wet hands or feet.
- Do not insert or allow any foreign objects or your fingers to enter grille openings.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance must be kept out of children's reach.
- Basic safety tips must always be observed when using electric appliances to avoid risks of fire, electric shocks and physical injuries.
- Do not use the appliance if it is not operating correctly or seems damaged; if in doubt, please contact professionally qualified personnel.
- Make sure that the appliance is working correctly. If not, turn the appliance off and have it checked by professionally qualified personnel.

- Always unplug the appliance before you assemble, disassemble or make adjustments to the appliance.
- Do not move the appliance when it is operating.
- Unplug the appliance when not in use.
- Do not use the device at room temperatures above 104°F/40 °C.
- Do not leave the device exposed to the weather (sun, rain, etc.).
- Do not pull the cord to disconnect the plug from the socket.
- If the power cord is damaged, it must be replaced by the manufacturer, its authorized service agent or professionally qualified personnel to avoid a hazard.

INSTALLATION

- After opening the package, check the integrity of the fan; if you are unsure, do not use it and contact Dr. Prepare Support Team for help. The packaging materials (plastic bags, polystyrene foam, nails, etc.) must be kept out the reach of children to avoid potential dangers.
- Before connecting the appliance, check that the voltage values shown on the data plate correspond to those of the electricity supply network. In the event of incompatibility between the electric outlet and the plug of the heater, have the outlet replaced with another more suitable type by professionally qualified personnel, who will make sure that the section of the wires of the outlet is appropriate for the absorbed power of the fan. In general, the use of adapters or extension cords is not recommended; if their use is indispensable, they must conform to existing safety standards and their current capacity (amperes) must not be less that the maximum of the appliance.

- The power socket must be easy to reach so the plug can be removed quickly in case of emergency.
- Do not place the appliance near sinks or other container of liquids (minimum distance of 6.56 feet/2 meters) to avoid the risk of it falling in.
- Keep the fan far away from fabrics (curtains, etc.) or unstable materials that could obstruct the air intake grille; make sure that the front is free of unstable materials (dust, etc.).
- Make sure that the electric cord is not touching rough, hot or moving surfaces and not twisted or wrapped around the appliance.
- Place the appliance on a horizontal, flat surface or table.
- In the event of a breakdown or poor operation, turn the fan off and ask for professionally qualified help.

IDENTIFYING PARTS



Figure 1



Figure 2

OPERATION

- Turn on the fan by sliding the switch to the desired speed setting (make the switch align with the corresponding number, as shown in the figure 1).
0 = Off 1 = Low 2 = Medium 3 = High
- To activate oscillation, slide the switch rightwards to make it align with the corresponding number that has the oscillation icon.(figure 2)
- To switch off the fan, slide the switch and make it align with "0".
- Turn off the fan and unplug the adapter from the wall outlet when not in use for long periods.

SPECIFICATIONS

Size	16.5 x 4.3 inch / 42 x 11 cm
Net weight	2.53 lbs / 1.15kg
Rated power	25W
Speed	Low, Medium, and High
Oscillation	60°

CLEANING AND MAINTENANCE

- Ensure the fan is turned off and unplugged.
- Clean the outer surfaces of the fan with soft, slightly damp cloth; do not use abrasive or corrosive cleanser.
- Do not immerse any part of the fan in water or other liquids.
- Clean the motor's air inlet to keep it from dust and lint.
- If the fan will not be used for long periods, we advise you to store the fan with this manual in its original packaging in a cool, dry place.

WARRANTY

- Dr.Prepare products are covered by a 12-month limited warranty from the original purchase date. If any problems occur, please contact our support team.
- We only provide after-sales services for products that are sold by Dr.Prepare or retailers and distributors authorized by Dr.Prepare. If you have purchased your unit from other channels, please contact your seller for more information about return and warranty.

CUSTOMER SUPPORT

- If you have any questions or concerns, please send us an email at support@drprepare.com