



bestchoiceproducts



INSTRUCTION MANUAL

Kids Toy Drum Set

TOOLS REQUIRED



















1 PERSON
ASSEMBLY




APPROXIMATELY
20 MIN.
ASSEMBLY

PARTS

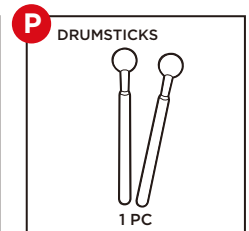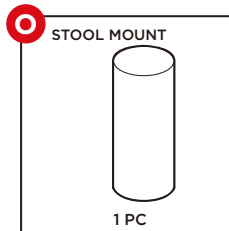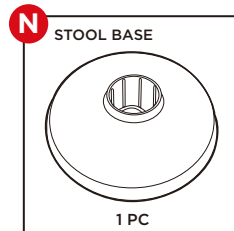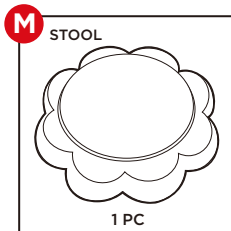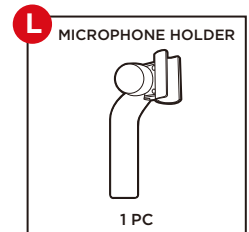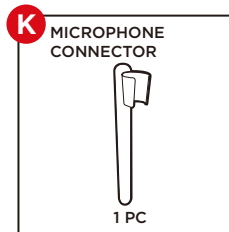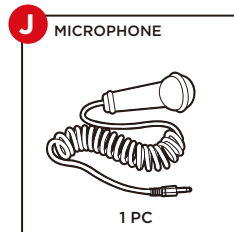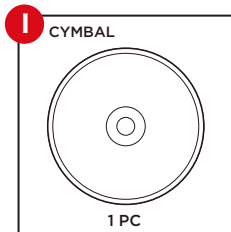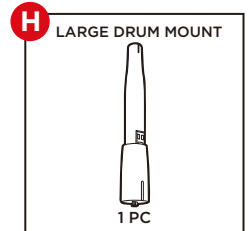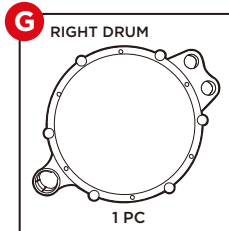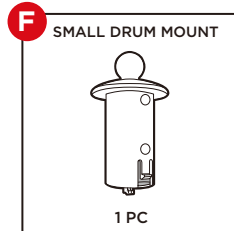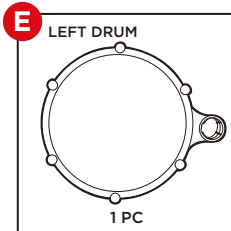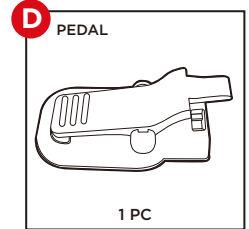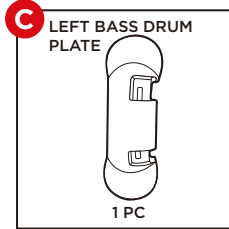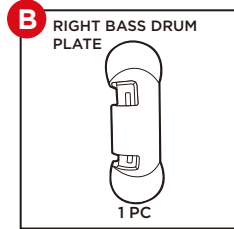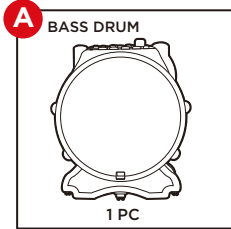


1

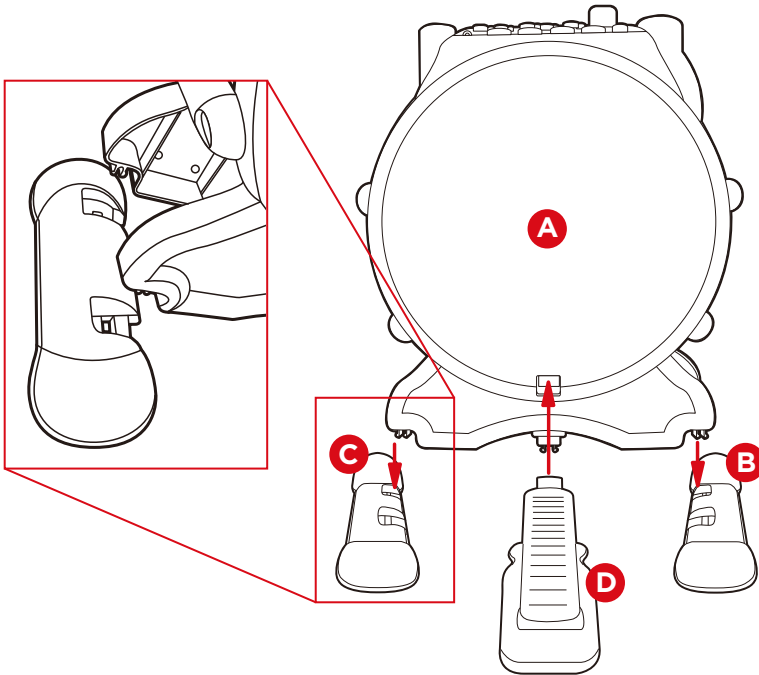

Snap the part C and B left/right bass drum plates onto the part A bass drum.

Attach the part D pedal to the center of the bass drum by inserting the top of the pedal into the designated socket and inserting the bottom of the pedal into the plug.

2


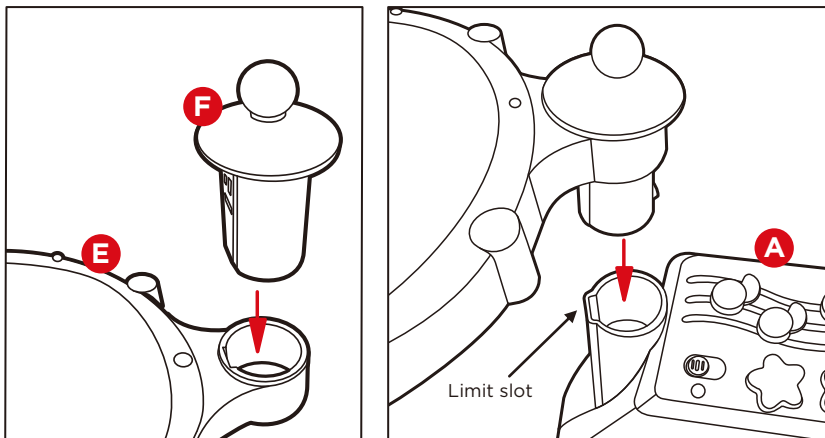


Insert the part F small drum mount into the part E left drum. Make sure that the electronic contact is oriented towards the drum.

Insert the small drum mount/left drum into the designated slot on the part A bass drum.



PRODUCT ASSEMBLY

3

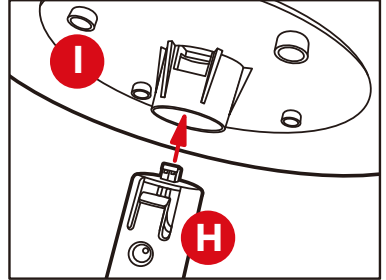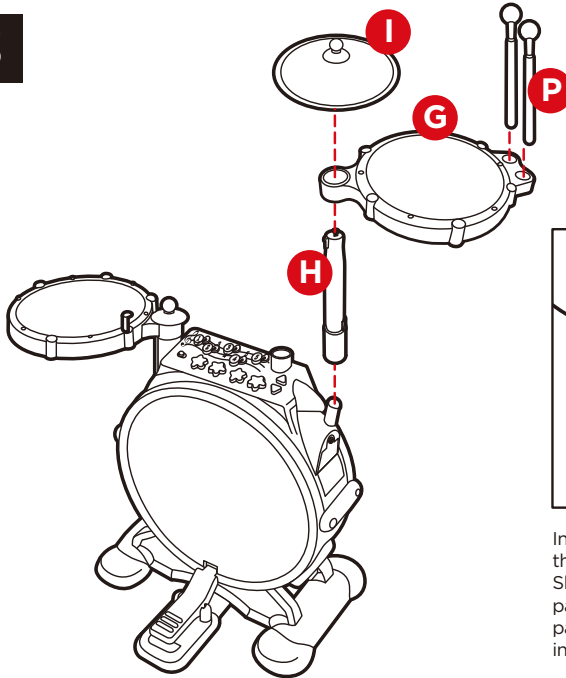

Insert the part H large drum mount into the designated slot on the bass drum. Slide the large drum mount through the part G right drum and insert it into the part I cymbal. Insert the part P drumsticks into the slots on the right drum.

4

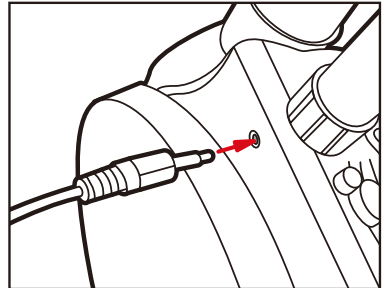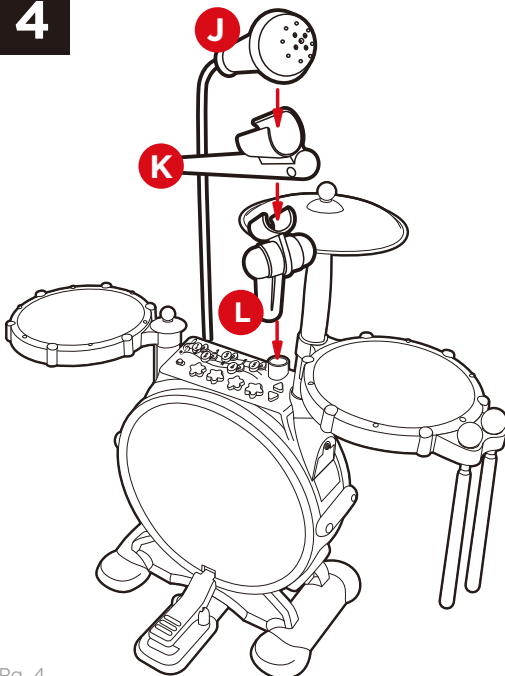


Insert the part J microphone into the part K microphone connector. Insert the microphone connector into the part L microphone holder. Then, insert the microphone holder into the designated slot on the bass drum.

Plug the output from the microphone into the input jack on the back of the drum set.

NOTE: You can adjust the angle and height of the microphone as needed.


PRODUCT ASSEMBLY

5

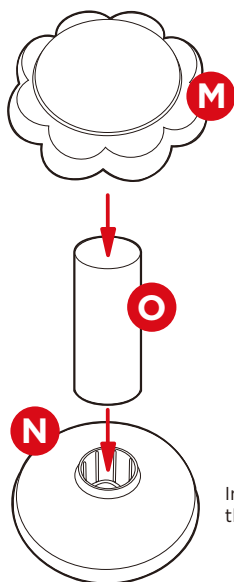


Insert the part O stool mount into the part N stool base. Insert the part M stool into the stool mount.


ASSEMBLY COMPLETE!

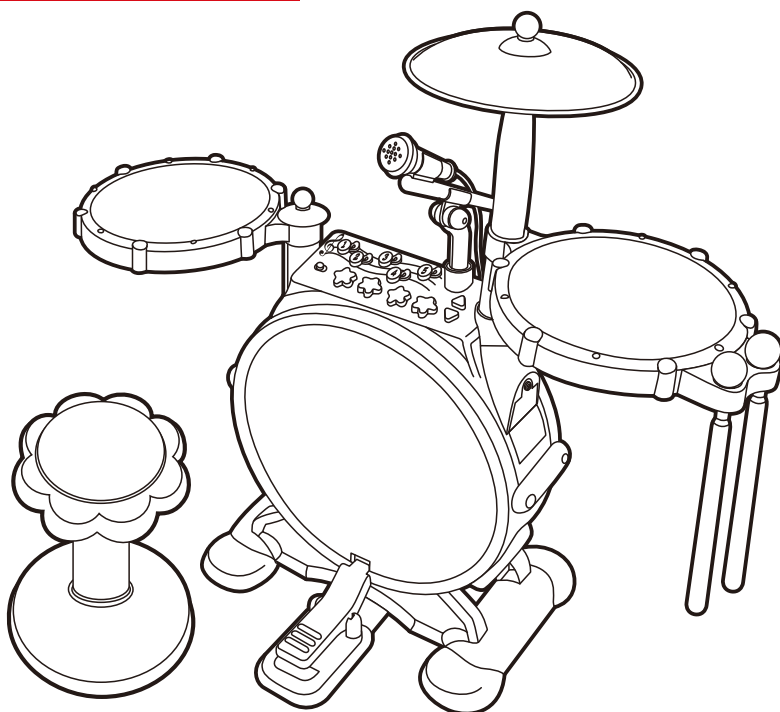

BATTERY INSTALLATION

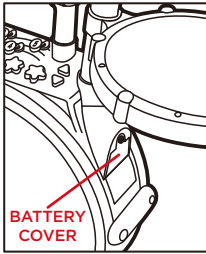


- Turn off the drum set.
- Use a screwdriver to remove the battery cover at the bottom of the drum set.
- Insert 3 AA batteries into the designated slot.
- Replace the battery cover and secure it with a screwdriver.

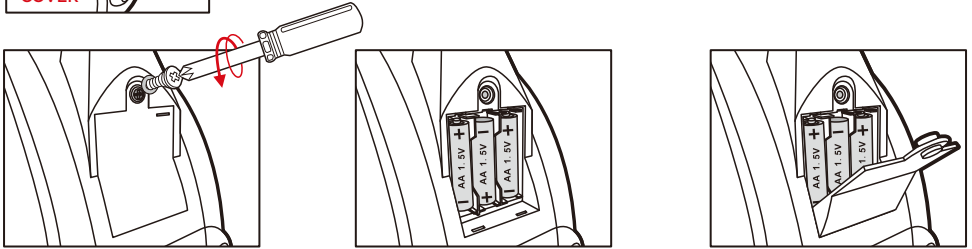

WARNINGS REGARDING BATTERIES

1. Do not mix alkaline, standard (carbon zinc) and rechargeable (nickel hydride) batteries
2. Do not mix old and new batteries.
3. Do not attempt to recharge non-rechargeable batteries.
4. Rechargeable batteries should be charged under adult supervision only.
5. Exhausted batteries should be removed.
6. The supply terminals should not be short-circuited.
7. Do not put batteries next to or in a heat source (fire, electronic heating device, etc.)
8. Do not hit batteries against hard objects.
9. Do not submerge batteries in water.
10. Batteries should be inserted with the correct polarity.

FUNCTIONS

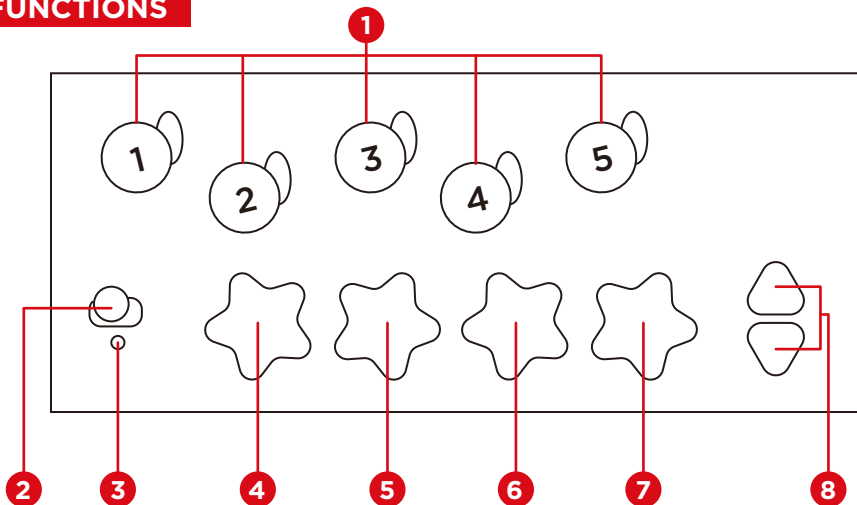

1. Note keys: Press the note keys to play 5 different songs.

2. On/Off switch: Switching the drum set on and off will trigger delightful music and colorful lights!

3. Indicator light: The indicator light will light up to signal power and when functions of the drum set are used. After 60 seconds of inactivity, the indicator light will turn off and the drum set will go into sleep mode.

4. Star button 1 - Drum Songs: In this mode, the drums will issue drum sounds and the cymbal will issue a cymbal sound.

5. Star button 2 - Sound Effects: In this mode, the drums and cymbal will play different sound effects.

6. Star button 3 - Songs: Press this button to cycle through 10 different songs. In this mode, kids can play and sing along with the songs!

- Are You Sleeping? (Brother John)
- Mary Had a Little Lamb
- If You're Happy
- Twinkle Twinkle Little Star
- Jingle Bells
- Oh, Susanna
- Red River Valley
- Little Bees
- White Horse
- Moscow Nights

7. Star button 4 - Dance Music: Press this button to play dynamic dance music. In this mode, kids can play and sing along with the music!

8. Volume adjustment: With 4 volume levels- 25%, 50%, 75%, and 100%- you can adjust the volume to your liking.

Pedal: Step on this Pedal to issue a bass drum sound.

Microphone: Use the microphone to amplify your voice! The microphone angle and height can be adjusted to match the vocalist.

NOTICE



- This product is not suitable for children under 3 years.
- Product with small parts may my be swallowed by mistake and cause a choking hazard.
- Insert and use batteries correctly under adult supervision.
- Do not play in wet areas or on the road.
- When this product is damaged, stop using or playing it to avoid causing harm.
- All packaging materials, such as tape, plastic sheets, packing locks and tags are not part of this toy and should be discarded for your child's safety.
- Toys should be used under adult supervision.

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

CONTACT US; WE'RE HERE 7 DAYS A WEEK TO HELP YOU!



bestchoiceproducts.com



customerservice@bestchoiceproducts.com



844.948.8400



[LEARN MORE!](#)

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.