 




bestchoiceproducts

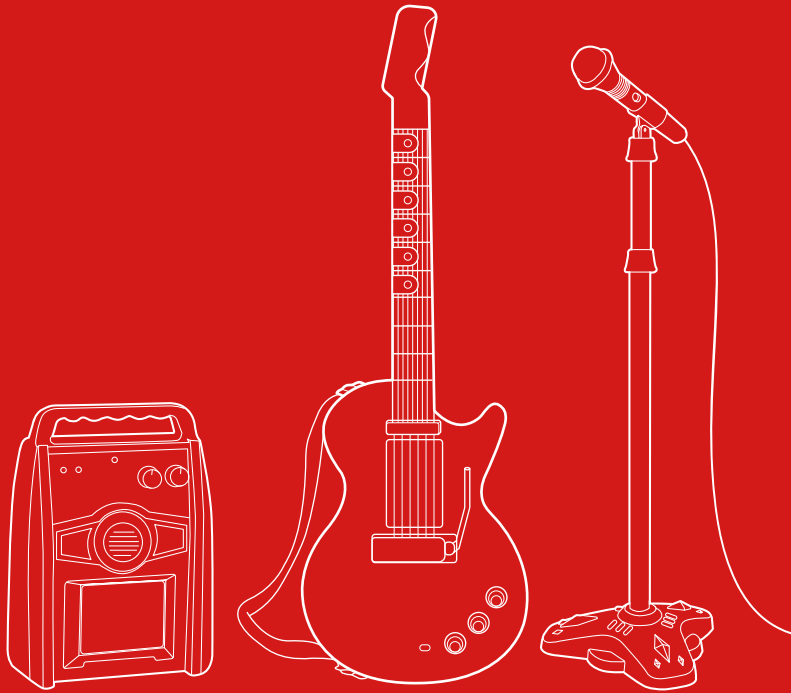

INSTRUCTION MANUAL

Kids Toy Electric Guitar Set



bestchoiceproducts

Thank you for choosing us! Since 2002, Best Choice Products has been bringing customers high-quality products at the absolute lowest price. With everything ranging from instruments and toys to furniture and outdoor, we've got your everyday living essentials covered. We're centered around a customer-first philosophy - with free shipping, exceptional customer service, and a catalog sourced with you in mind.

! NOTICE

Please retain these instructions for future reference.

- Avoid exposure to direct sunlight and excessive heat.
- Do not immerse product in water.
- Do not alter this product in any way as it may result in product failure.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

REQUIRED



PHILLIPS
SCREWDRIVER



6 AA BATTERIES

 
 
 
 
 
 


1 PERSON
ASSEMBLY




APPROXIMATELY
5 MIN.
ASSEMBLY

PARTS

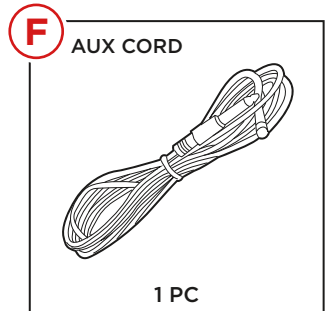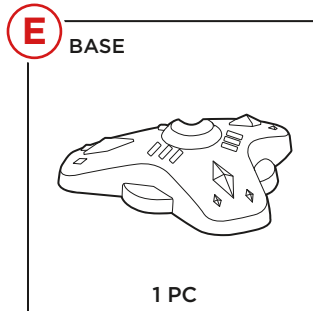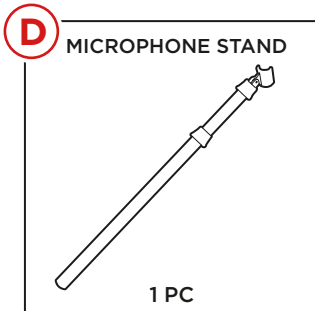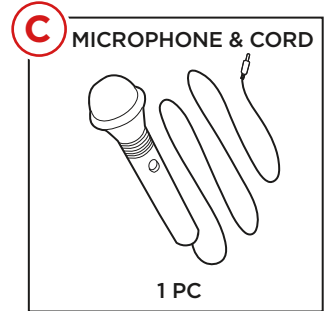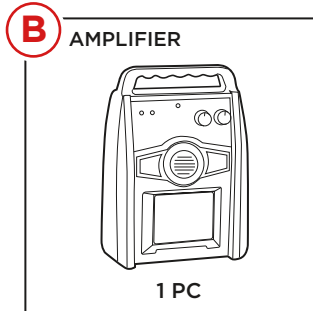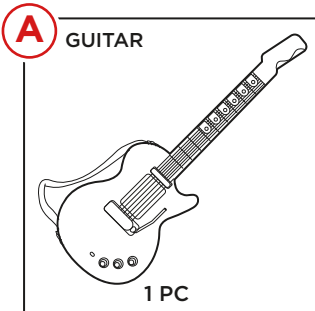

GUITAR

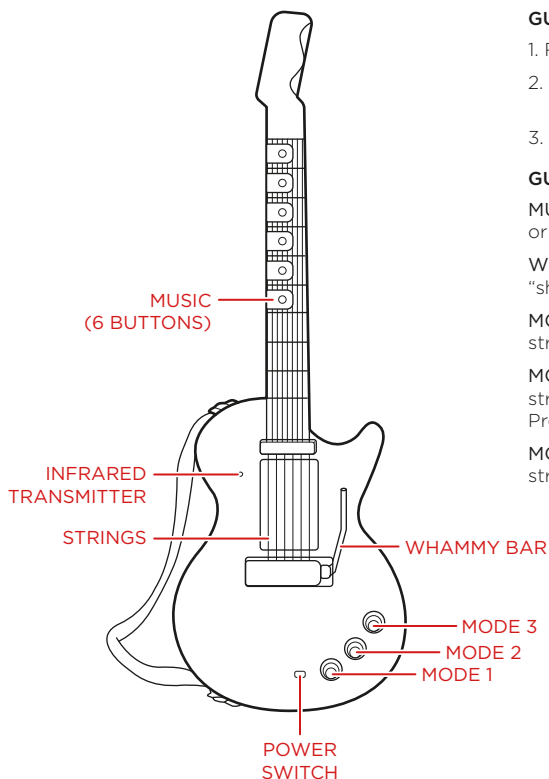 

GUITAR BATTERY INSTALLATION

1. Remove the battery cover.
2. Insert 3 AA batteries. Make sure the batteries are inserted with the correct polarity.
3. Replace the battery cover.

GUITAR BUTTONS

MUSIC: Each music button plays a different song or riff


WHAMMY BAR: Press whammy bar to play a “shredding” sound

MODE 1: Each music button starts a song and strumming continues the song

MODE 2: Each music button plays a song and strumming plays an accompaniment to the song. Press button again to pause song

MODE 3: Each music button starts a song and strumming continues the song

 AMPLIFIER

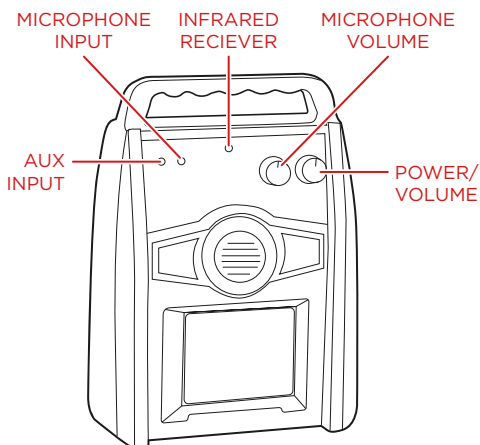

AMP BATTERY INSTALLATION

1. Remove the battery cover.
2. Insert 3 AA batteries. Make sure the batteries are inserted with the correct polarity.
3. Replace the battery cover.

AMPLIFIER:

 
Max wireless range: 25 feet

AUX INPUT: Plug in a music player (not included) to play your own music

MICROPHONE VOLUME: Controls the microphone volume

POWER/VOLUME: Turns on amp and controls music volume

MICROPHONE

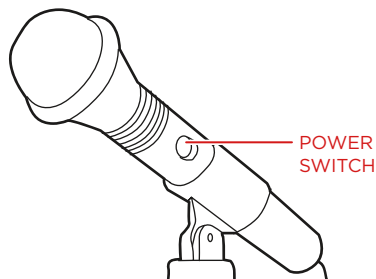

OPERATING INSTRUCTIONS

1. Insert part D microphone stand into part E base. Slide part C microphone/cord into microphone stand.
2. Plug in the microphone into the microphone jack on the part B amplifier.
 - If desired, plug in a music player into the AUX input on the amplifier.
3. Switch on the amplifier, guitar, and microphone.
4. To use the guitar or music player, turn the power/volume knob on the amplifier up.
NOTE: The guitar will not make noise unless both the amp and guitar have batteries and are turned on.
5. To use the microphone, turn the microphone volume knob up.
6. Select your desired mode on the guitar and begin playing.

CLEANING & STORAGE

- To clean, wipe product down with a damp cloth.
- If unused for a long period of time, remove the batteries.

WARNINGS REGARDING BATTERIES

- Do not mix alkaline, standard (carbon zinc) and rechargeable (nickel hydride) batteries.
- Do not mix old and new batteries.
- Non-rechargeable batteries should not be charged.
- Rechargeable batteries should be charged under adult supervision only.
- Exhausted batteries should be removed.
- The supply terminals should not be short-circuited.
- Do not put batteries next to or in a heat source (fire, electronic heating device, etc.).
- Do not hit batteries against hard objects.
- Do not submerge batteries in water.
- Batteries should be inserted with the correct polarity.

With our rewards program, you get more ways to save!

bestchoiceproducts
rewards\$

Join | Earn | Redeem

Earn points while you shop. Join today!

bestchoiceproducts.com



bestchoiceproducts

Check out more great products:

[bestchoiceproducts.com](https://www.bestchoiceproducts.com)



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.