 


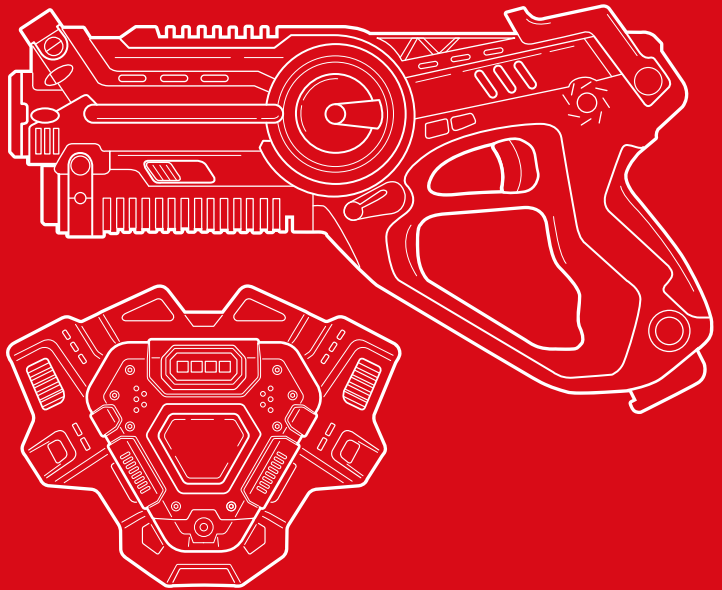

bestchoiceproducts



# INSTRUCTION MANUAL

---

Laser Force Blasters with Vests



**bestchoiceproducts**

---

Thank you for choosing us! Since 2002, Best Choice Products has been bringing customers high-quality products at the absolute lowest price. With everything ranging from instruments and toys to furniture and outdoor, we've got your everyday living essentials covered. We're centered around a customer-first philosophy - with free shipping, exceptional customer service, and a catalog sourced with you in mind.

---

## NOTICE

Please retain these instructions for future reference.

- Avoid exposure to direct sunlight and excessive heat.
- Do not immerse product in water.
- Do not alter this product in any way as it may result in product failure.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

## REQUIRED



PHILLIPS  
SCREWDRIVER



4 AA BATTERIES  
PER GUN



3 AAA BATTERIES  
PER VEST



 
1 PERSON  
ASSEMBLY



APPROXIMATELY  
5 MIN.  
ASSEMBLY

## BLASTER DIAGRAM


- **LIFE INDICATORS (3):** Each life indicator represents 3 health (for a total of 9).
- **LOW BATTERY:** The 3 life indicators will flash slowly to indicate that the blaster has low battery.
- **MAX STRIKE DISTANCE:** 130 feet

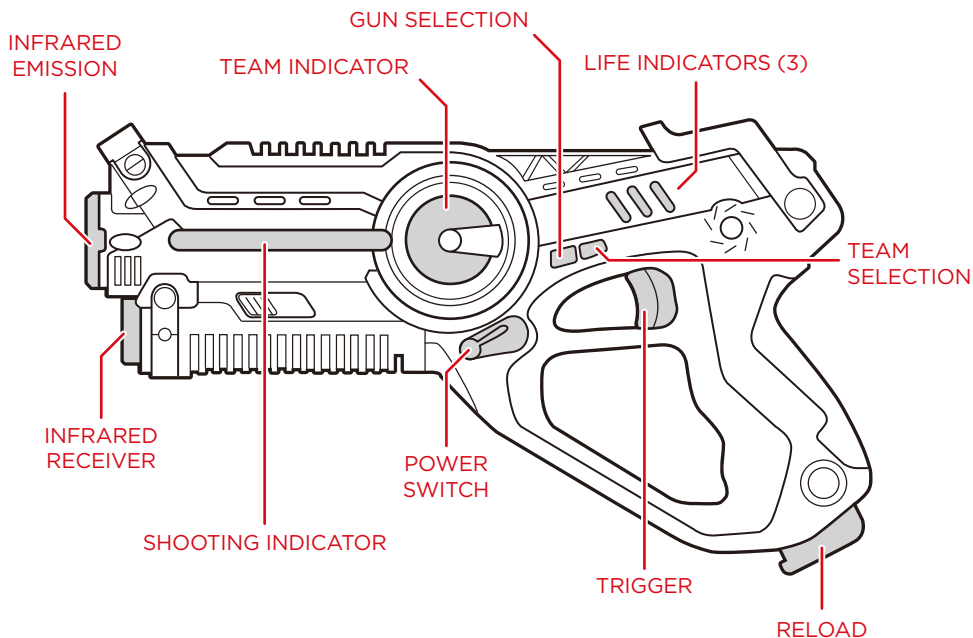

## VEST DIAGRAM



- **INFRARED RECEIVER:** Vibrates and flashes colors when hit
- **LIGHT INDICATOR:** Displays team color
- **LIFE INDICATORS (4):** Each life indicator represents 3 health (for a total of 12)

 **NOTE:** Blasters and vests have separate life indicators. The blaster has 9 health points and the vest has 12 health points; therefore, each player has combined 21 health points.

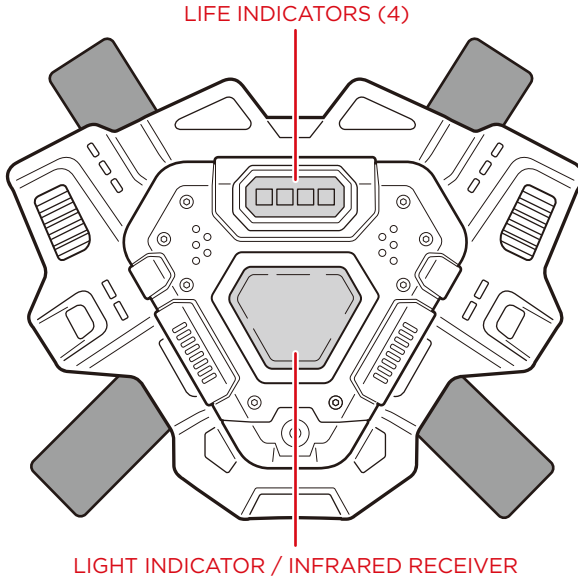


## BATTERY INSTALLATION - BLASTER & VEST

  1. Use a screwdriver to remove the battery covers.
2. Insert 4 AA batteries into the blasters and 3 AAA batteries into the vests. Make sure the batteries are inserted with the correct polarity.
3. Replace the battery covers.

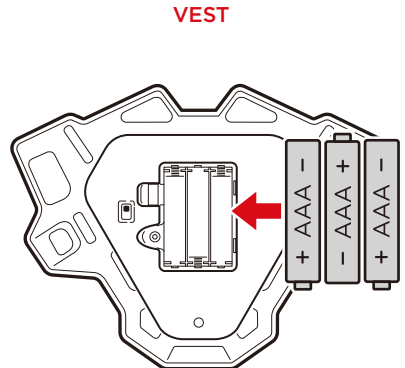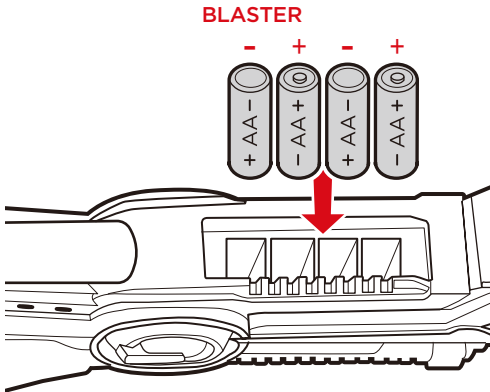

## VEST INSTRUCTIONS

 1. Place vest strap over your neck.
2. Fasten buckle in the back. Tighten straps to secure vest.

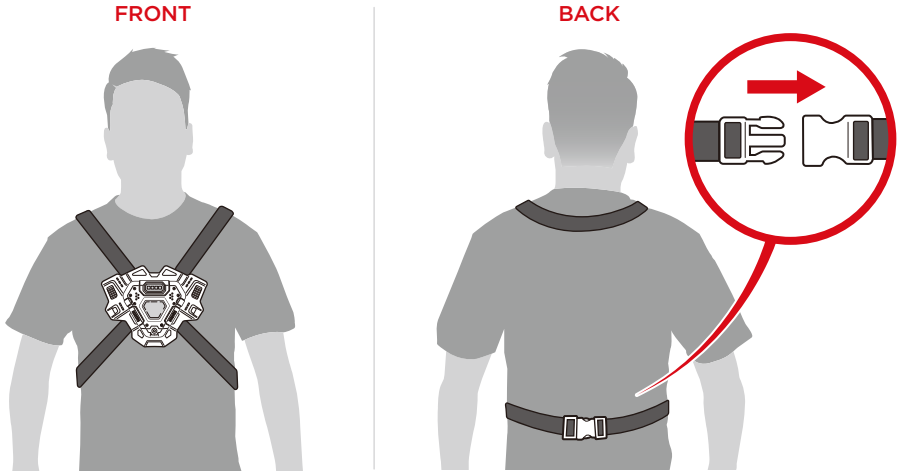

## OPERATING INSTRUCTIONS

- 1 Switch the blaster on. The blaster will default to pistol mode.
- 2 Press the team selection button to toggle between teams. There are 4 colors to represent 4 possible teams - blue, red, green, or white. You cannot shoot your own team. A player cannot change teams during a game.
- 3 Switch the vest on and it will toggle different colors. Use the blaster to shoot the vest and the vest will turn the color of your team. The vest is now assigned to your team. You cannot shoot your own team's vest.
- 4 Press the gun selection button to toggle between 4 gun modes:

GUN MODES	Pistol	Shotgun	Submachine Gun	Rocket Launcher
SHOTS				
HEALTH REDUCED BY EACH SHOT				

When you run out of ammo, press the reload button under the grip to reload.

- 5 The blaster and the vest are infrared receivers with a different amount of health points (blaster has 9 health and vest has 12 health). Aim and shoot at an opponent's blaster or vest to register a hit. Once hit, the life indicator will reduce accordingly and the blaster/vest will vibrate and emit a sound. When your life indicator reaches 0, the indicators will flash and you will not be able to shoot anymore.

## RESET BLASTER & VEST

- A player cannot change teams or reset a gun/vest during a game.
- Press the team selection button to change your team before a game.
- To reset a gun/vest, switch the gun/vest off and on.

## CARE

- If unused for a long period of time, remove the batteries.
- If necessary, clean this product with a damp cloth.

## COMPATIBLE SETS

With the ability to mix and match Best Choice Products laser guns, you'll have more than enough blasters for your next event, birthday party, or family reunion!

## TROUBLESHOOTING

PROBLEM	REASON	SOLUTION
Blasters do not work	Low battery	Replace the batteries
	Infrared signal could not reach the blaster because the distance is too far or angle is wrong	Reduce the firing distance and firing angle
	Obstacles blocking the infrared signal	Remove the obstacles
Blasters operate automatically	Low battery	Replace the batteries
	Overexposure to direct sunlight	Block sunlight or play in an area without direct sunlight
	Competing infrared transmission from other devices, such as TV remotes	Stop using or move away from competing infrared devices

**NOTE:** If normal operation of the product is disturbed or interrupted, strong electro-magnetic interference may be causing a problem. Reset the product by turning it completely off and then back on. If normal operation does not resume, try replacing the batteries and moving the product to another location.

## WARNINGS REGARDING BATTERIES

- Do not mix alkaline, standard (carbon zinc) and rechargeable (nickel hydride) batteries.
- Do not mix old and new batteries.
- Non-rechargeable batteries should not be charged.
- Rechargeable batteries should be charged under adult supervision only.
- Exhausted batteries should be removed.
- The supply terminals should not be short-circuited.
- Do not put batteries next to or in a heat source (fire, electronic heating device, etc.).
- Do not hit batteries against hard objects.
- Do not submerge batteries in water.
- Batteries should be inserted with the correct polarity.

Earn points while you shop. Join today!

bestchoiceproducts  
**rewards**

Join | Earn | Redeem

Give your friends 15% off their first order! For each successful referral you'll receive 100 points.

[bestchoiceproducts.com](https://bestchoiceproducts.com)



# HELP CENTER



Question about your product? We're here to help. Visit us at:

[help.bestchoiceproducts.com](http://help.bestchoiceproducts.com)



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

## PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

## WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.