



bestchoiceproducts



INSTRUCTION MANUAL

Coffee Maker with Built-In Grinder



bestchoiceproducts

Thank you for choosing us! Since 2002, Best Choice Products has been bringing customers high-quality products at the absolute lowest price. With everything ranging from instruments and toys to furniture and outdoor, we've got your everyday living essentials covered. We're centered around a customer-first philosophy - with free shipping, exceptional customer service, and a catalog sourced with you in mind.



TIPS FOR GREAT COFFEE

- Use freshly ground beans
- Use cold filtered water
- Use the correct amount of grounds. NOTE: Use coarse ground beans for drip coffee

bestchoiceproducts.com

PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

 
NOTICE

- Do not allow children to operate this appliance. Keep appliance out of reach of children.
- Close supervision is necessary when appliance is used near children.
- This item is intended for indoor, household use only.
- Place appliance on a stable and level surface in a cool, dry environment.
- Unplug appliance if it is left unattended and before assembly, disassembly, or cleaning.
- Ensure that your voltage is consistent with specifications.
- Regular cleaning of this appliance is recommended.
- Using an extension cord is not recommended as it may overheat and cause a risk of fire. If used, make sure to organize cord to prevent accidental tripping.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

WARNING


- Do not operate this appliance without water in the tank.
- Do not fill water tank beyond the max fill line.
- Do not touch hot surfaces. Be careful when handling jug with hot coffee.
- Keep appliance away from direct sunlight and other sources of heat (stove, heater, etc.).
- Do not run power cord over sharp edges/corners or a hot surface.
- Do not pull or carry appliance by the power cord.
- Do not place outdoors or in a damp environment such as a bathroom or spa.
- Do not use appliance in a cabinet or enclosure.
- Do not immerse the appliance or power cord in water or any other liquid.
- Do not spill water on the electrical components or connectors.
- Do not cover vents or obstruct openings. Beware of hot steam escaping from vents.
- Do not unplug the appliance by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
- Do not move appliance, touch any of its components, or open lid while it is plugged in or in motion.
- Do not use if the plug, power cord, or any components are damaged.
- Do not use any accessory or fitting other than original accessories and fittings.
- Do not turn off or unplug appliance while it is in operation.
- Do not use this appliance with an external switching device or timer.
- This appliance has a polarized plug (one blade wider than the other), so the plug must be oriented correctly to fit into the plug.

DIAGRAM

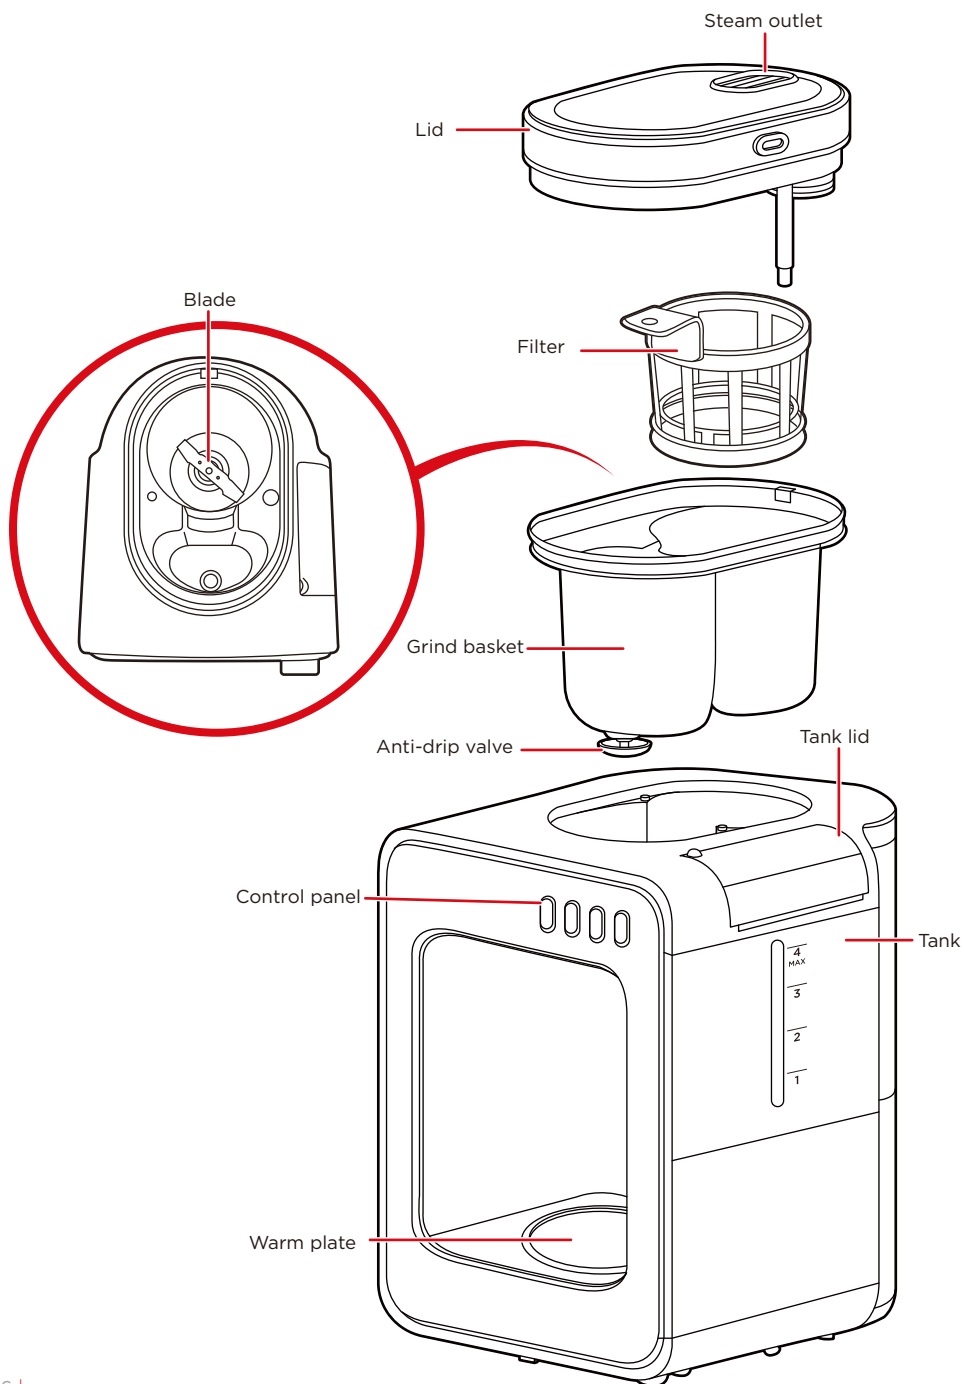


ACCESSORIES

 Spoon
Approximately 7g per spoon

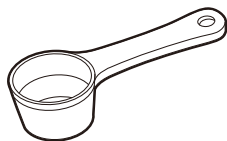


Jug

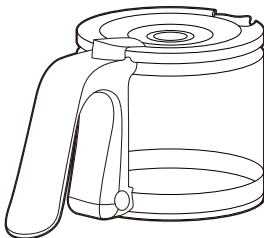 





Brush

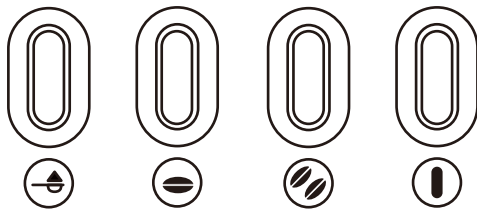 



CONTROL PANEL



-  Ground beans: Use pre-ground coffee beans
-  Whole beans - small: Use for 1-2 spoons of beans
-  Whole beans - large: Use for 3-4 spoons of beans
-  Power


WATER TANK LEVEL

  NOTE: Machine always brews the entirety of water in the tank; the amount of water put into the tank is the amount of coffee brewed.

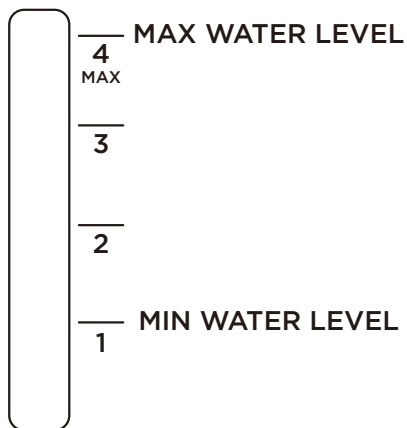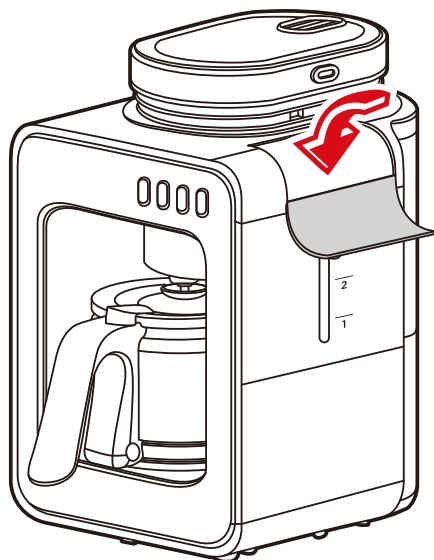

PRODUCT DISASSEMBLY

 1. Press button on side of lid and lift to remove lid.
2. Remove filter by lifting it by the handle.
3. Rotate grind basket counterclockwise to unlock and lift up to remove.

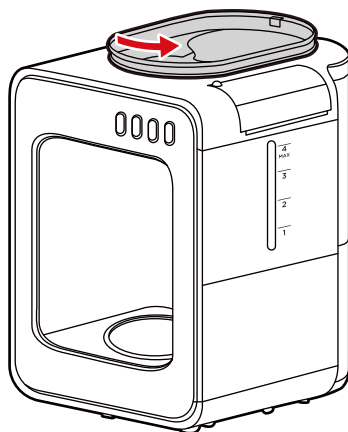

USAGE TIPS

- Initially, appliance may release smoke and mild smell; this will disappear after a few uses.
- Ambient temperature must be above 32°F for appliance to function properly.
- Regularly check the coffee grinder for foreign objects. Remove foreign objects before operation.
- Only use coffee grinder to grind roasted coffee beans. Do not grind nuts, spices, unroasted beans, etc.
- Do not put jug in oven or microwave to warm up coffee.
- Do not place empty or almost empty jug on the warm plate or any other hot surfaces.
- Be aware that glass jug is fragile and susceptible to cracks.
- Take extreme care when handling cutting blades while emptying bowl or cleaning.
- Appliance will automatically turn off after 30 minutes of nonuse.
- Unplug and let appliance cool before cleaning or storage.

SETTING UP THE APPLIANCE

1. Remove all packaging and accessories. Inspect appliance to make sure it is in good condition.
2. Disassemble appliance and rinse accessories/attachments with warm water. Allow parts to dry.
3. Wipe exterior of unit with a damp cloth and allow to dry.
4. Reassemble appliance and place on a stable and level surface.
5. Arrange appliance so it is at least 12 inches away from other kitchen appliances.

BEFORE USE

Before use, clean interior by running water through the appliance.

1. Fill water tank and plug machine into wall outlet. Do not exceed the max line.
2. Press the power button to turn machine on.
3. Press the ground beans button. The button will flash to indicate the machine is operating.
4. Hot water will dispense into the jug. The button will turn solid to indicate it is finished.
5. Repeat if necessary.

OPERATING INSTRUCTIONS

NOTE: Check grinder and tank for foreign objects before using.

1. Press button on side of lid and lift to remove lid.
2. Place desired amount of whole coffee beans or ground beans into the grinder compartment, then replace lid. Add water to the water tank.
3. Press corresponding whole bean or ground bean button. The button will flash to indicate the machine is operating.
4. Coffee will automatically dispense into the jug. The button will turn solid to indicate it is finished.

CLEANING AND STORAGE

Note: Do not immerse or soak the unit in water or any other liquid.

- Unplug and let appliance cool before cleaning or storage.
- Dump used coffee grounds into waste basket.
- Rinse accessories and attachments with warm water. If necessary, use a small amount of mild detergent and a sponge.
- Wipe the exterior of the unit with a damp cloth.
- Do not clean with steel wool, abrasive detergents, or corrosive liquids like gasoline or acetone.
- Place unit and attachments in a cool, well-ventilated place to dry.
- Store in a cool, dry place away from direct sunlight.

DESCALING

Every 2 to 3 months, descale the machine to remove mineral deposits.

1. Fill water tank to the max line with a descaling mixture.
 - Use either a 4:1 ratio of water to household descaler or a 1:1 ratio of water to white vinegar.
2. Turn on and press the ground beans button to run the descaling mixture through machine.
3. Repeat if necessary.
4. Fill water tank with clean water and run water through the machine to remove traces of descaling mixture.

SPECIFICATIONS

Voltage	120 Volts, 60 Hz
Power	Heater: 600 watts Grinder: 110 watts
Jug Capacity	19 fluid ounces

TROUBLESHOOTING

Problem	Reason	Solution
Not working	Wrong voltage	Use recommended voltage
	Not plugged in	Plug into outlet
	Not turned on	Turn on
Leaking water	Tank filled beyond max level	Do not fill beyond max level
Coffee grounds in jug	Overflowing coffee grounds	Use less coffee beans/grounds
	Jug not placed correctly	Place jug on warm plate directly below anti-drip valve
	Filter not placed correctly	Make sure filter inserted correctly
Brewing longer than usual	Machine needs descaling	Descale machine (see Descaling section)
Does not completely brew water tank		
Coffee too strong or too weak	Incorrect amount of coffee beans/grounds	Adjust amount of coffee beans/grounds
Coffee tastes burned	Jug left on warm plate too long	Do not leave on warm plate too long
Coffee not hot enough	Coffee amount too little	More coffee will maintain heat longer
	Jug not placed correctly	Place jug completely on warm plate
Jug difficult to place or remove	Jug or grind basket placed incorrectly	Place jug or grind basket correctly
Less coffee in jug than expected	Jug not placed correctly	Place jug on warm plate directly below anti-drip valve
	Machine needs descaling	Descale machine (see Descaling section)

Earn points while you shop. Join today!

bestchoiceproducts
rewards

Join | Earn | Redeem

Give your friends 15% off their first order! For each successful referral you'll receive 100 points.

bestchoiceproducts.com



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.



WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.