



**Golden precision, every time. Gourmet 7**

The Gourmet 7 Toaster's advanced technology allows you to choose from seven settings to create the ideal results. And experience optimum toasting performance, from sourdough to soda bread. Because we know precision is important.

**Product Benefits & Features**



**Every slice. Toasted with precision**

Different kinds of breads require different warming settings. Choose from seven browning options, for soft brioches or tougher bakes like ciabatta. Broiled to precision, customised with the twist of a dial.

- Stop button
- Bun warmer
- Removable crumb tray
- Defrost function
- Reheat function



**Defrost or reheat. With pre-set programmes**

Revive the taste and smell of bakery-fresh breads with the Gourmet 7's reheat programme. Allowing breads to be warmed through, without re-toasting. And for breads that have been preserved in the freezer, the defrost function offers a quick solution.



**Warming rack and anti-dust lid accessories**

Heat croissants, buns and bagels with the warming rack. Positioned on top of the toaster, the rack offers a convenient way to warm breads that are too large to fit inside. It can also be used to keep slices of toast warm and crisp. And when finished, the toasting lid will keep unwanted dust away.

**Lift-and-look lever. For perfect results**

Never overcook toast again with the lift-and-look function. The lever-operated system allows you to check progress without interrupting the cooking or warming cycle. Which makes achieving your personal, desired result, easier than ever.

**Crumb tray. For easy cleaning**

To ensure cleaning and maintenance is straightforward, a crumb tray is built into the Gourmet 7 toaster. The removable plate will catch any small pieces of cooked bread, and can easily be ejected and emptied, as and when necessary.

## Product Specification

Accent Colour	Anthracite Grey
Colour	Anthracite Grey
Height (mm)	314.2
Width (mm)	183.2
Depth (mm)	200.5
Net Weight (Kg)	1.93
Watt	980
Cord Length (m)	1