Valve Spring Compressor Kit

- . Replaces valve springs and valve stem oil seals without the need to remove the cylinder head
- Applications include, but not limited too: BMW, MINI, VW, Audi, Hyundai, Toyota, Lexus, Ford, Lincoln, Nissan, Renault, Opel, Seat, Clio & more
- Components:
 - o 1 Pc. Lever Bar
 - 4 Pc. Valve Spring Compressor Adapters:
 - 24.75mm (O.D.)
 - 27.50mm (O.D.)
 - 30.25mm (O.D.)
 - 35.50mm (O.D.)
 - o 1 Pc. Slotted/Notched Pulling Device
 - o 1 Pc. Hook Pulling Device
 - o 1 Pc. Connector for Valve Spring Adapters
 - o 1 Pc. Connector for Pulling Device
 - o 1 Pc. Extension for Valve Spring Adapters



CAUTION: To prevent injury, always wear gloves and eye protection that meets ANSI Z87.1 and OSHA standards.

CAUTION: To prevent equipment damage, clean and lubricate threaded screws and holes before and after use.

INSTRUCTIONS:

- 1. Select appropriate size Valve Spring Compressor Adapter and attach to threaded connector at end of Lever Bar.
 - a. Note: Add threaded extension (Photo #1, marked "C"), if necessary.
- 2. Select appropriate Pulling Device, depending on engine.
 - a. Use the Slotted/Notched type (**Photo #1**, **marked "B"**) and attach to head of threaded bolt, using threaded hole, as available.
 - b. Use the Hook-Type device (**Photo #2 w/ Hook circled "A"**) and hook onto the cylinder head or opposite camshaft, as available.
 - c. Note: Adjust Connector to appropriate hole in lever bar, as needed.
- 3. Seat Valve Spring Compressor Adapter onto Valve Spring and pull Lever Bar to compress spring (Photo #3).







Photo #1 Photo #2 Photo #3