

Part# 4045

GM Torsion Bar Unloader - Large

Holds torsion bar while making adjustments on 2011 & up GM Heavy Duty C/K trucks



CAUTION: To prevent injury, always wear gloves and eye protection that meets ANSI Z87.1 and OSHA standards.
CAUTION: To prevent equipment damage, clean and lubricate threaded screws and holes before and after use.


INSTRUCTIONS:

REMOVAL:

1. Attach Torsion Bar Unloader to frame rail of vehicle
2. Tighten tool against the torsion bar adjusting arm
3. Loosen or fully remove the adjusting bolt connected to the adjusting arm
4. Count the number of turns in order to identify the original position of adjusting bolt
5. When complete, remove tool and perform required service

INSTALLATION:

1. Attach Torsion Bar Unloader to frame rail of vehicle
2. Tighten tool against the torsion bar adjusting arm
3. Tighten tool, drawing torsion bar adjusting arm into the frame rail.
4. Tighten torsion bar adjusting bolt using the number of turns recorded in removal (Removal Step 2).
5. Remove tool
6. Check vehicle service manual for correct trim height and alignment specs

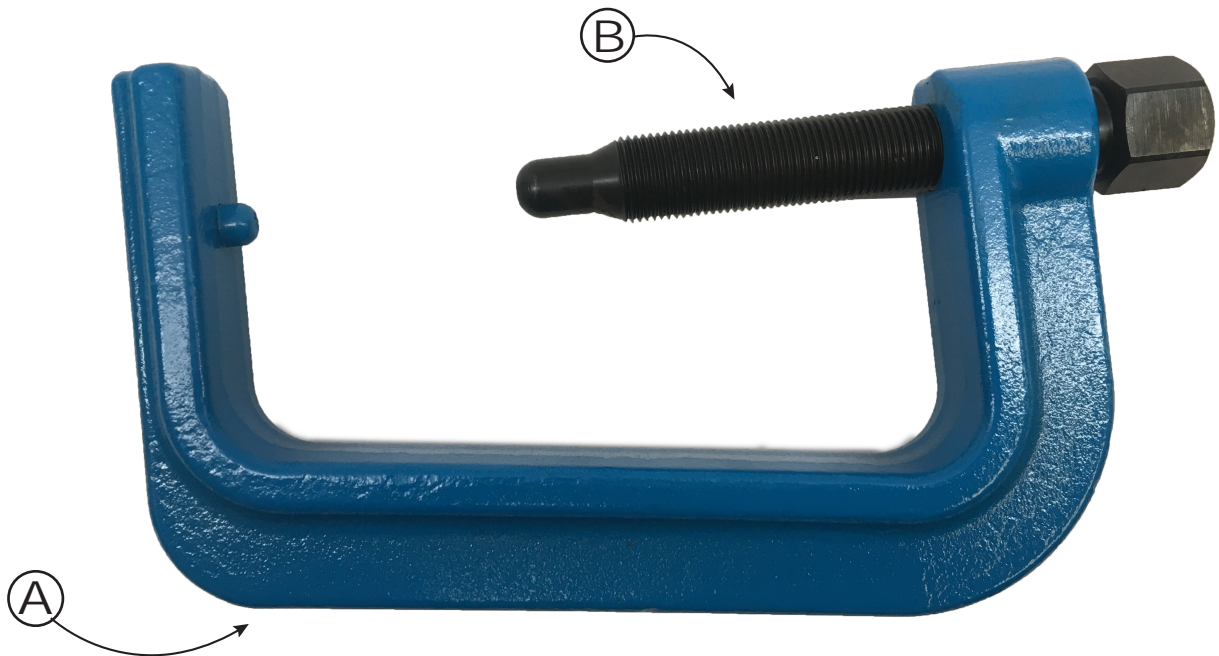

PART# 4045X01 Yoke

PART# 4045X02 Bolt

