

Part# 8099

Push Puller

Use with bearing splitters when removing and installing Gears, Bearings, Shafts, Pulleys and other press-fit parts.

Capacity: 10 Tons

Spread: 2-1/8 to 7-1/4"

Screw Size: 3/4 - 16 x 12


Reach: 8-1/4"



CAUTION: To prevent injury, always wear gloves and eye protection that meets ANSI Z87.1 and OSHA standards.
CAUTION: To prevent equipment damage, clean and lubricate threaded screws and holes before and after use.

INSTRUCTIONS:

1. Assemble tool according to diagram below
2. Adjust arm positions as needed
3. Align with hub or bearing
4. Remove hub or bearing by turning center bolt with wrench

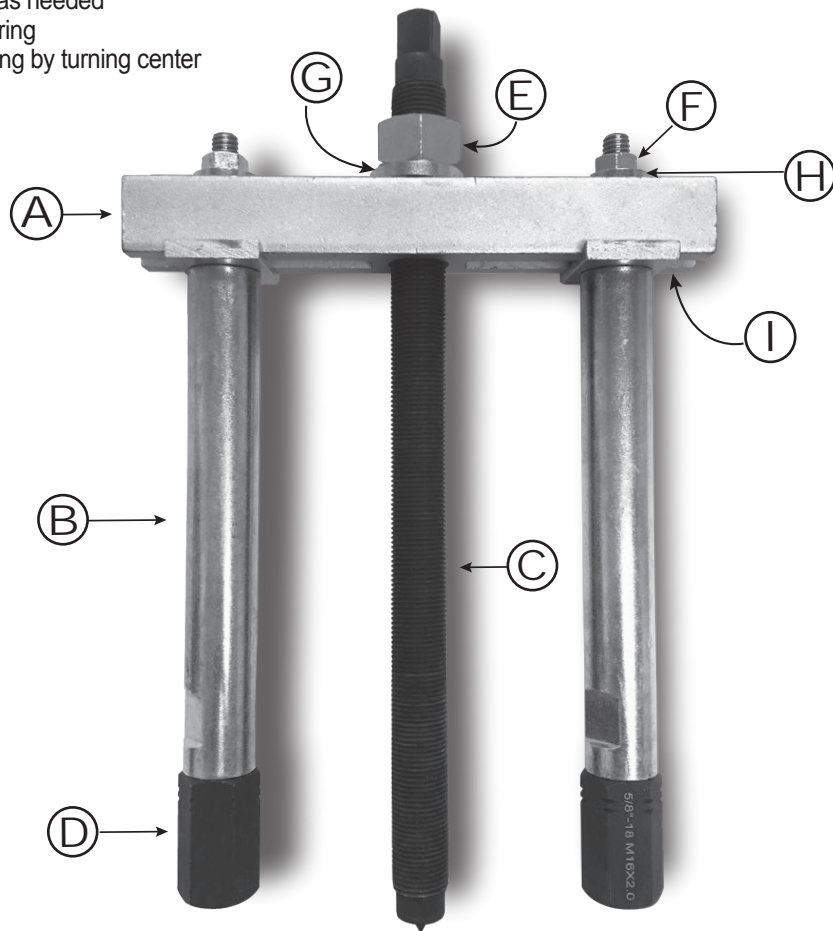

PART# 8099X01	Yoke
PART# 8099X02	Leg
PART# 8099X03	Center Screw
PART# 8099X04	Hex Nut - M16
PART# 8099X05	Hex Nut - Large
PART# 8099X06	Hex Nut - Small
PART# 8099X07	Washer - Large
PART# 8099X08	Washer - Small
PART# 8099X09	Plate

