

Thermal Fuse Replacement

Part# S6056 [Ref. #21-3]



⚠ WARNING


Before attempting to troubleshoot the iron, turn off and unplug the iron from the power supply. Close the valve on the Water Tank and disconnect the hose from the iron. Wait for the iron to cool down.

Technical Support Steps


- 1 Hold and slide up *metal ring*, then detach from the *outer cover*



- 2 Remove *dial screw*(1) and *dial spring*(1) set, then the *dial housing*

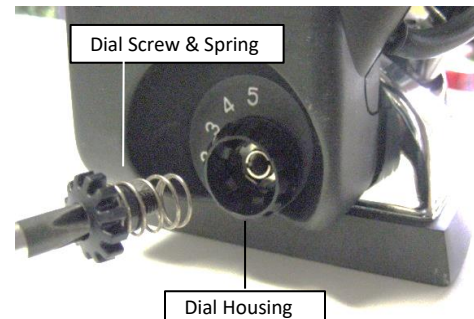

- 3 Remove screws (3) from *outer cover* and gently open it

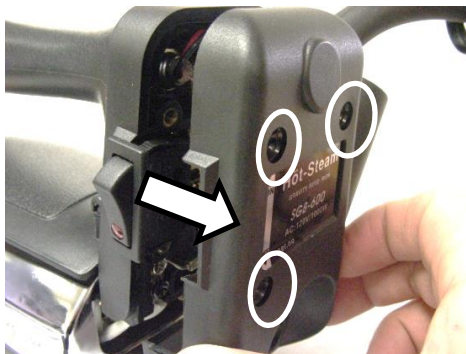

- 4 Remove screws(2) on each side of the *thermal fuse* and replace

