

## Outer Cover Replacement

Part# S6060 [Ref. #21-7]  
Content: 1pc



### ⚠ WARNING


Before attempting to troubleshoot the iron, turn off and unplug the iron from the power supply. Close the valve on the Water Tank and disconnect the hose from the iron. Wait for the iron to cool down.

### Technical Support Steps


- 1 Hold and slide up *metal ring*, then detach from the *outer cover*



- 2 Remove *dial screw* and *dial spring* set, then the *dial housing*

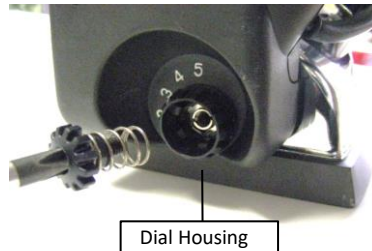


- 3 Remove screws(3) and gently open the *outer cover*

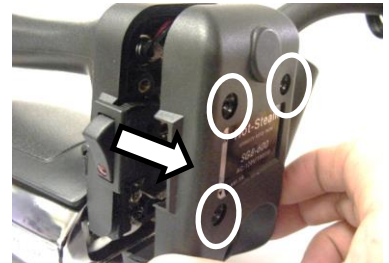

- 4 Inspect and make sure to remove all broken pieces from inside of iron



- 5 Make sure to properly tuck in all wires in between the covers before closing

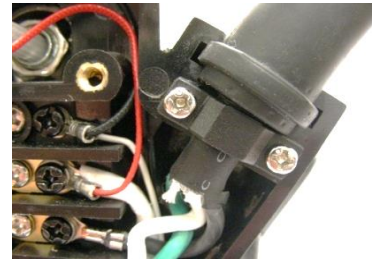


- 6 Gently install new *outer cover* and lock both covers in place with the metal ring



- 7 Verify the thermostat stem is centered. If not, remove cover and make adjustments



- 8 By loosening screw(2) the cover can be moved slightly up, down and left, right

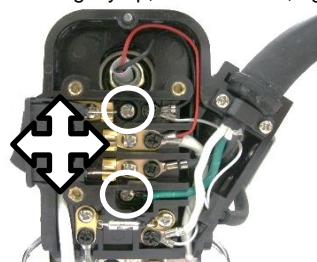

- 9 Repeat steps 6, 7 and 8 until the stem is successfully centered. Tighten the outer cover screws(step 3) and then the dial set (step 2)