




PS-511 / GIGI-1 TC


MANUAL - Ver 1.00

■ ITEMS INCLUDED


Please check the contents of the set before fully opening the tent. If you find something missing, please contact the store where you purchased it or us directly.

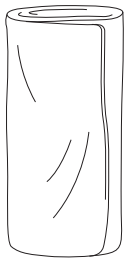


Tent body×1

 


Center pole×1

 


Extension pole ×2

 


4m
rope
×2

 


3m
rope
×8

 

Rope bag
×1

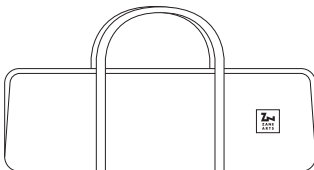

Carry bag ×1

 

Pole bag×1

※Pegs/Hammer are not included.

■ ABOUT THIS PRODUCT

Please take some time to understand the characteristics of this product before using it.

Pegs are not included.

Pegs are not included.

Please prepare pegs beforehand.

Below are the recommended pegs / quantity.

【Recommended pegs/quantity】

● TO-518 "GRART STAKE 18" / 6 pcs

● TO-528 "GRART STAKE 28" / 12 pcs

This product is not waterproof.

The TC fabric of this product is a blended material of natural and chemical fibers. Due to the characteristics of the fabric, the natural fibers expand when it becomes wet in the rain, which has the effect of making it difficult for rain to penetrate, but it is not completely waterproof. Also, please note that rain may partially enter through the seams.

Water repellency is not permanent.

The surface is treated with silicone water repellent, but after use, the water repellent performance will deteriorate and rain will eventually penetrate the fabric. Please note that the water repellency cannot be maintained long term. Waterproof performance of the back side is not affected, so even if water repellency deteriorates, there is no issue using it as it is.

Scratches and color unevenness of the TC fabric.

TC fabric is a material that is prone to weaving unevenness, weaving scratches, and dyeing unevenness. Please note that these are not covered by the warranty.

The fabric is easy to discolor.

The fabric is prone to discoloration due to ultraviolet rays. Avoid long-term continuous use or use on beaches where ultraviolet rays are strong.

Dry and store securely after use.

TC fabric is a material that easily retains moisture, so please be aware that it should be dried well after use. Storage in damp conditions may cause mold, bad odors, color transfer, and deterioration.

Do not remove the fire prohibition tag.

Do not cut or remove the fire prohibition tag sewn to the product. Products without the fire prohibition tag will not be guaranteed nor accept repairs.

■ PRECAUTIONS FOR SETUP AND USE

Be sure to read and understand the following contents before use to prevent harm to the user and others, and damage to the property.



**INDICATES CONTENTS THAT MAY
RESULT IN DEATH OR SERIOUS INJURY.**

DANGER

- Fire is prohibited in tents, shelters, and tarps. It is extremely dangerous as there is a risk of fire, oxygen deficiency, carbon monoxide poisoning, etc. Do not use firearms and keep fire away from the product.
- If bad weather such as a typhoon or storm is expected, please stop camping immediately.
- Do not set up in places that are easily affected by wind, or where there is a risk of falling rocks, avalanches, or flooding.



WARNING

INDICATES CONTENTS THAT MAY RESULT IN INJURIES OR PROPERTY DAMAGE.

- Not for permanent use. If this product is permanently installed, it will deteriorate and be damaged in a short period of time due to the effects of ultraviolet rays and other elements.
- Set up in a well-drained, flat area. Moisture and dirt lead to deterioration, and rough ground leads to damage due to product distortion.
- Remove any stones, twigs, or other objects that may damage the product before setting up.
- When setting up the product, be sure to do it with two or more people while paying attention to your surroundings.
- Do not set up in strong winds. The product may be blown away or damaged by the force of the wind.
- When setting up, be prepared for gusts of wind, and always be careful that the tent body and frame will not fly away, and work while supporting them.

- When extending poles or frames, make sure each section is inserted securely. Assembling the product incorrectly can lead to damage.
- When handling poles or frames, be careful not to hit or damage something around you and pay attention to your surroundings.
- After setup, secure the tent, shelter, and tarp to the ground with pegs and ropes to prevent them from being blown away by the wind.
- Do not leave the product unattended for long periods of time so that you can respond to sudden weather changes.

■ PRECAUTIONS FOR TAKING DOWN THE PRODUCT AND AFTER USE CARE

Be sure to read and understand the following contents before use to prevent harm to the user and others, and damage to the property.




WARNING

INDICATES CONTENTS THAT MAY RESULT IN INJURIES OR PROPERTY DAMAGE.

- When taking down the product, be sure to do it with two or more people.
- Please take down the product in the reverse order of the setup. Not following the instructions properly may damage the product.
- When removing poles or frames, pay attention to your surroundings and be careful not to hit or damage something around you.

- When folding a frame or pole with a built-in cord (bungee cord), begin folding from the centre, this will reduce the wear on the cord by not applying extra tension.

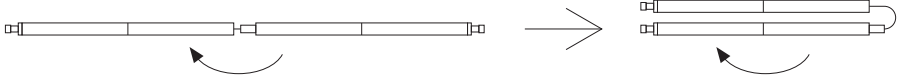

- After use, clean the fabric and allow it to dry thoroughly before storage. Storage with dirt and damp conditions may cause mold, bad odors, color transfer, and deterioration.
- After use, also clean the frames, poles, and other metal parts and allow it to dry thoroughly before storage. Storage with dirt and damp conditions may cause corrosion damage.
- Salt will accelerate the deterioration of fabrics. If used near the sea, rinse the product with fresh water and dry well before storage.
- Use a soft towel to gently clean or wipe moisture off the fabric. Rubbing may damage the coating of the fabric.
- Do not use solvents such as paint thinners. There is a risk of detachment or discoloration of the water-repellent finish.
- Do not launder. It leads to deterioration of the fabric and breakage of parts.
- Please keep out of reach of infants and children while storage.

■ SETUP PROCEDURES


Follow the instructions in order to setup the product.

【Preparation】

※Prepare pegs and hammer

Recommended pegs/quantity > TTO-518 "GRART STAKE 18" / 6 pcs
TO-528 "GRART STAKE 28" / 12 pcs


※Close all zippers

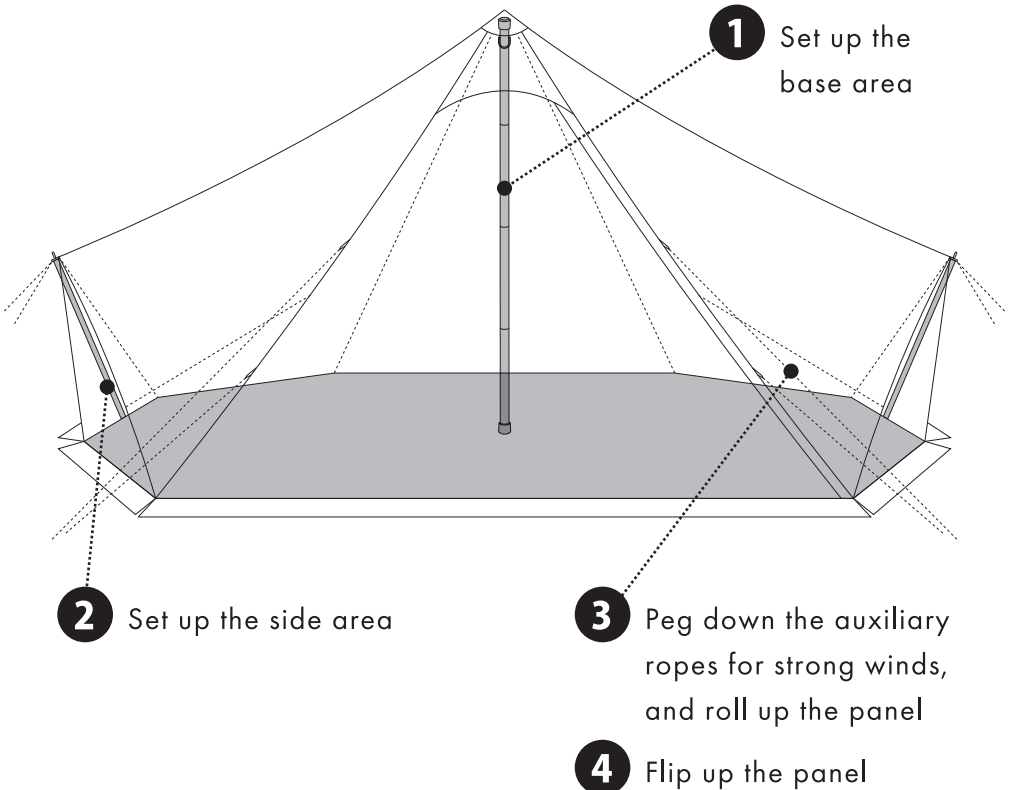

1 SET UP THE BASE AREA

A : Peg down the 4 corners of the building tapes in numerical order to create a rectangle. (GRART STAKE 28)

B : Insert the center pole from the side and push up the top to make the tent stand on its own.

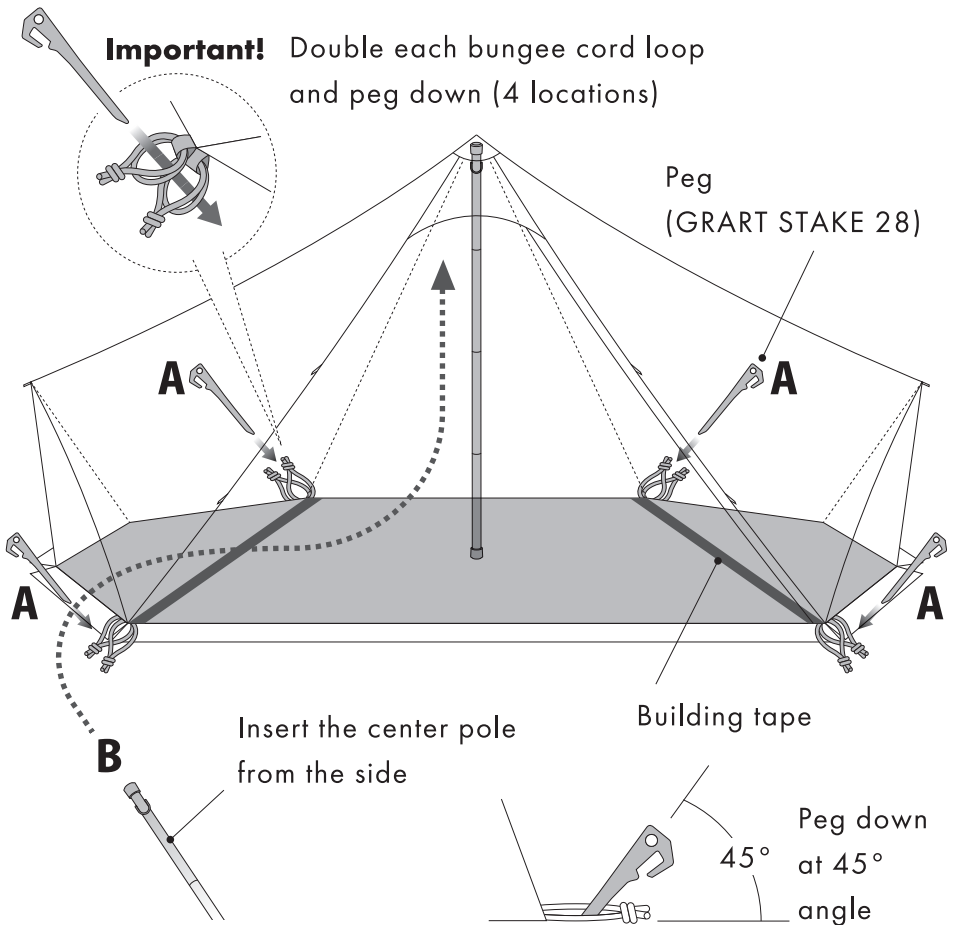

2 SET UP THE SIDE AREA

A : Insert the long end of the Extension pole into the grommet.


B : Insert the short end of the Extension pole into the grommet.

C : Peg down. (GRART STAKE 18)

D : Attach the 4m Rope to the long end of the Extension pole.

E : Peg down. (GRART STAKE 28)

F : Peg down. (GRART STAKE 18)

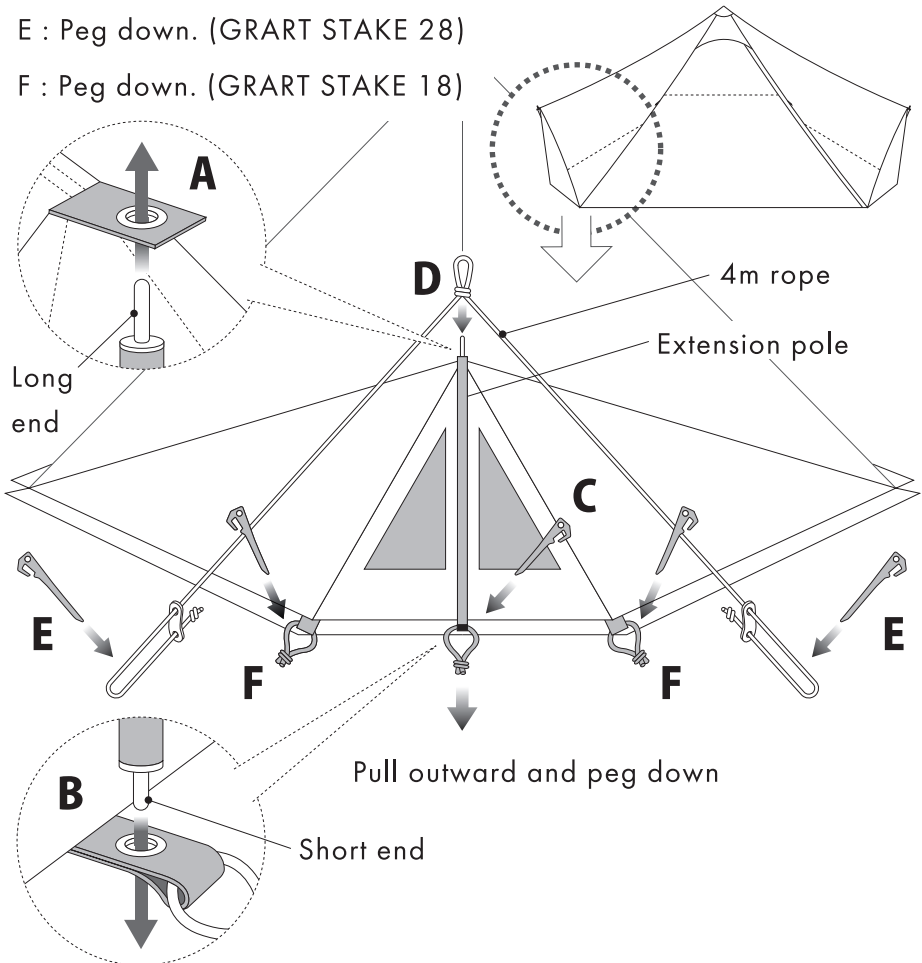

3 PEG DOWN THE AUXILIARY ROPES FOR STRONG WINDS, AND ROLL UP THE PANEL

A : Attach the 3m Ropes for strong winds.

(8 locations, front and rear)

B : Peg down 4 locations, front and rear.

(GRART STAKE 28)

C : Release the door panel's loop from the peg.


D : Roll up the panel.

Rope installation

Loop for rope

Stopper

Peg down

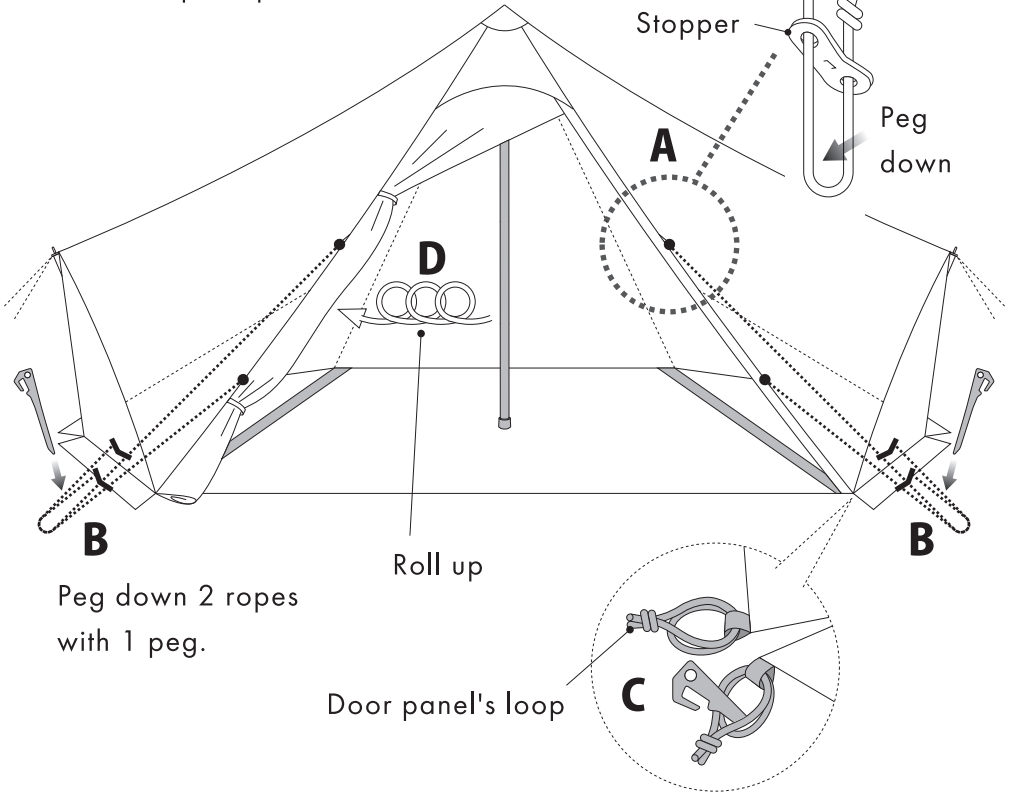

Peg down 2 ropes with 1 peg.

Roll up

Door panel's loop


4 FLIP UP THE PANEL

※To flip up the panel, 2 additional poles and pegs are required.
(sold separately)

A : Remove the bulding tape shown below.

B : Insert the tip of the pole (sold separately)
into the ring and attach the 3m Rope.

C : Peg down the rope.

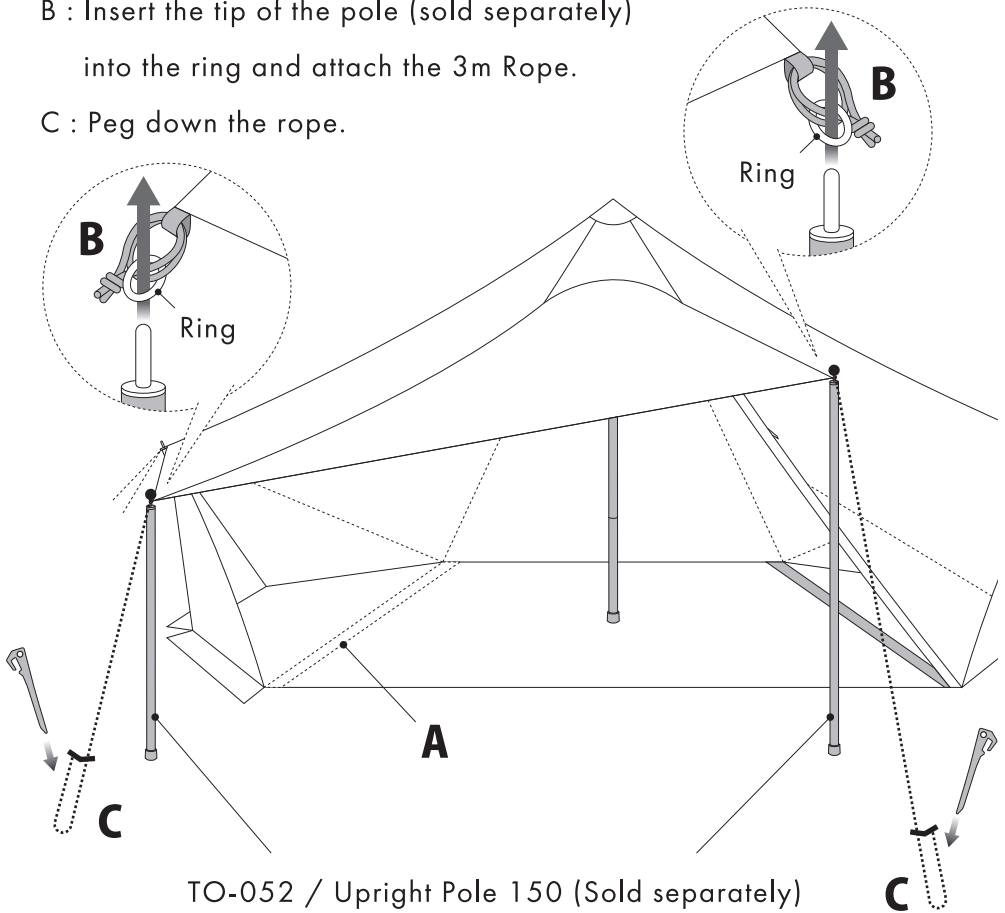

ZANE ARTS, Inc.

7190-2 Shimauchi, Matsumoto, Nagano 390-0851

global@zanearts.com