



 
PS-033 / LOLO

MANUAL - Ver 1.01

EN

## ■ ITEMS INCLUDED


Please check the contents of this set before fully opening the tent. If you find something missing, please contact the store where you purchased it or ZANE ARTS directly.



Tent body x 1



 
Inner tent x 1



Long front frame x 1



 
Short front frame x 1




Rear frame x 1



 Bridge frame x 2




Center pole x 1

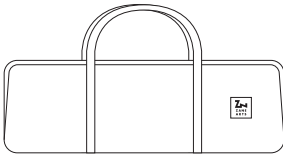


Carrying case x 1



 
Pole bag x 1



3m rope  
x 20

 

2m rope  
x 2

 

Rope case x 1

※Pegs and hammer not included.

## ■ ABOUT THIS PRODUCT

Please familiarize yourself with this product before use.

---

Pegs not include

---

Pegs are not included. Please prepare the following recommended pegs ahead of time.

【Recommended Type · Required Number】


● TO-528 / GRART STAKE 28 × 22

---

Apply seam sealant

---

Seam tape cannot be attached to the joint at the tip of the indoor ceiling. In the unlikely event of leakage, you may choose to apply a commercially available seam sealant.

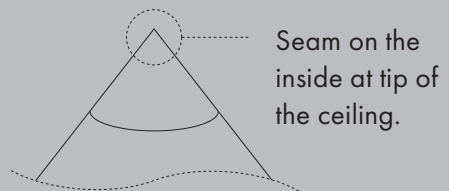

---

## Waterproofing performance is reduced

---

The surface is treated with silicone water repellent, but after use, the water repellent performance will deteriorate and rain will eventually penetrate the fabric. Please note that the water repellency cannot be maintained long term. Waterproof performance of the back side is not affected, so even if water repellency deteriorates, there is no issue using it as it is.

---

## Noticeable Wrinkles

---

Commonly used chemically treated fibers used in tents, shelters and tarps are prone to creases. In particular, the fabric in this product has noticeable wrinkles due to the color, thickness, and surface processing of fabric. Please note that it does not affect performance in any way.

---

## Three Season Tent

---

This product is not designed to withstand snowfall or low temperatures. Do not use in low temperatures, where the zippers may freeze, or in snow.

---

Use of a wood stove is absolutely prohibited.

---

Chemically treated fibers are used in the fabric of this product. Chemically treated fibers may liquefy when burned, the liquefied fabric may stick to skin and cause serious burns. Never bring fire close to tents, shelters or tarps.

---

Do not remove the fire prohibition tag

---

Do not cut or remove the fire-prohibited tag sewn into the product. Products without a fire-prohibited tag cannot be guaranteed or repaired.

## ■ PRECAUTIONS FOR SETUP AND USE

Please follow these guidelines to avoid property damage and to ensure the safety of yourself and others.



**DANGER**

---

**INDICATES SITUATIONS THAT MAY RESULT  
IN DEATH OR SERIOUS INJURY.**

---

- Fire is strictly prohibited near tents, shelters, and tarps. The risk of fire, oxygen deficiency, carbon monoxide poisoning, etc. is extremely dangerous. Keep open flames away from this tent at all times.
- If bad weather such as a typhoon or storm is expected, please stop camping immediately.
- Do not set up in places that are easily affected by wind, or where there is a risk of falling rocks, avalanches, or flooding.



---

**INDICATES SITUATIONS THAT MAY RESULT  
IN MINOR INJURY OR PROPERTY DAMAGE.**

---

**CAUTION**

---

- Not for permanent use. If this product is set up permanently, it will deteriorate and be damaged in a short period of time due to the effects of ultraviolet rays and other elements.
- Set up on a flat surface with good drainage. Moisture and dirt can cause deterioration, and rough terrain can damage the product.
- Before setting up, remove any stones, twigs, or other objects that may cause damage.
- When setting up, work with two or more people while paying attention to your surroundings.
- Do not set up when the wind is strong. The main body may blow away or the product may be damaged by the force of the wind.
- When setting up, be prepared for wind gusts and be sure that the body and frame don't fly away by keeping your hands on the frame and body while working.

- When extending poles or frames, make sure each section is inserted securely. Assembling the product incorrectly can lead to damage.
- When handling poles or frames, pay attention to your surroundings and be careful not to hit or damage something around you.
- After setup, secure the tent, shelter, and tarp to the ground with pegs and ropes to prevent them from being blown away by wind.
- Do not leave the product unattended for a long period time if the weather suddenly changes.



## ■ PRECAUTIONS FOR TEARDOWN AND AFTER USE CARE

Please follow these guidelines to avoid property damage and to ensure the safety of yourself and others.



 
---

**INDICATES SITUATIONS THAT MAY RESULT IN MINOR INJURY OR PROPERTY DAMAGE.**

### **CAUTION**

---

- When taking down, work with two or more people.
- Please take down in the reverse order of the setup. Not following the instructions properly may damage the product.
- When removing poles or frames, pay attention to your surroundings and be careful not to hit or damage something around you.
- When folding frames or poles with built-in cords (elastic), begin folding from the center. This will reduce wear on the cord by not applying excessive tension.



- After each use, clean the fabric and dry thoroughly before storing. If stored dirty or wet, colors may transfer, moldy odors may form, and the waterproof coating and seam tape may come off.
- Frames, poles, and other metal parts should also be thoroughly dried before storing. If stored dirty or wet they may be damaged by corrosion.
- Salt can accelerate the deterioration of fabrics. If used near the sea, rinse with fresh water and dry well before storing.
- Use a soft towel to gently clean or wipe moisture off fabrics. Rubbing too hard may damage the fabric's coating.
- Do not use thinners and other organic solvents. This may cause discoloration or delamination of the water-resistant treatment.
- Do not wash. This will cause the fabric to deteriorate and damage to other parts.
- Please keep out of reach of infants and children.

# ■ SETUP PROCEDURES


Follow the numbered steps to set up.

【Prepare in Advance】

※Prepare Pegs and Hammer

Recommended Pegs • Quantity > TO-528 / GRART STAKE 28×22

※Close all zippers

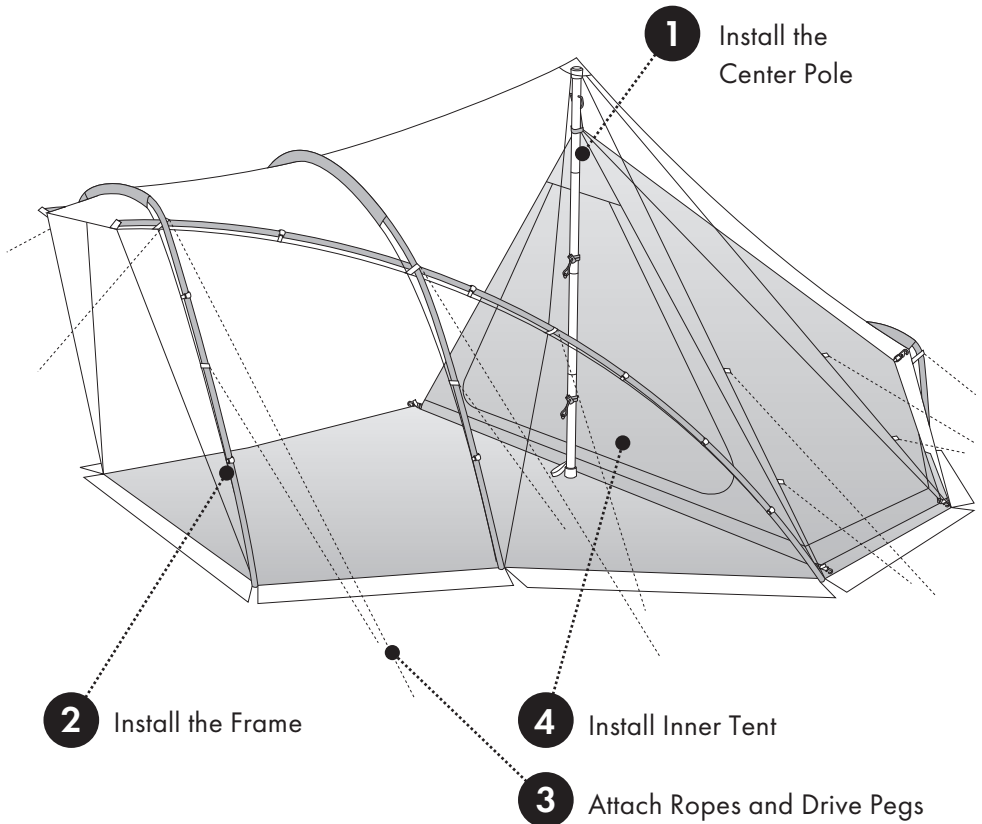


# 1 -1 INSERT THE CENTER POLE

A: Make a square by driving pegs (GRART STAKE 28) through the four gray corner loops that are attached to the gray building tape (webbing).

※ Make it as square as possible.


A base that is askew will result in a distorted tent,  
making it more prone to damage.

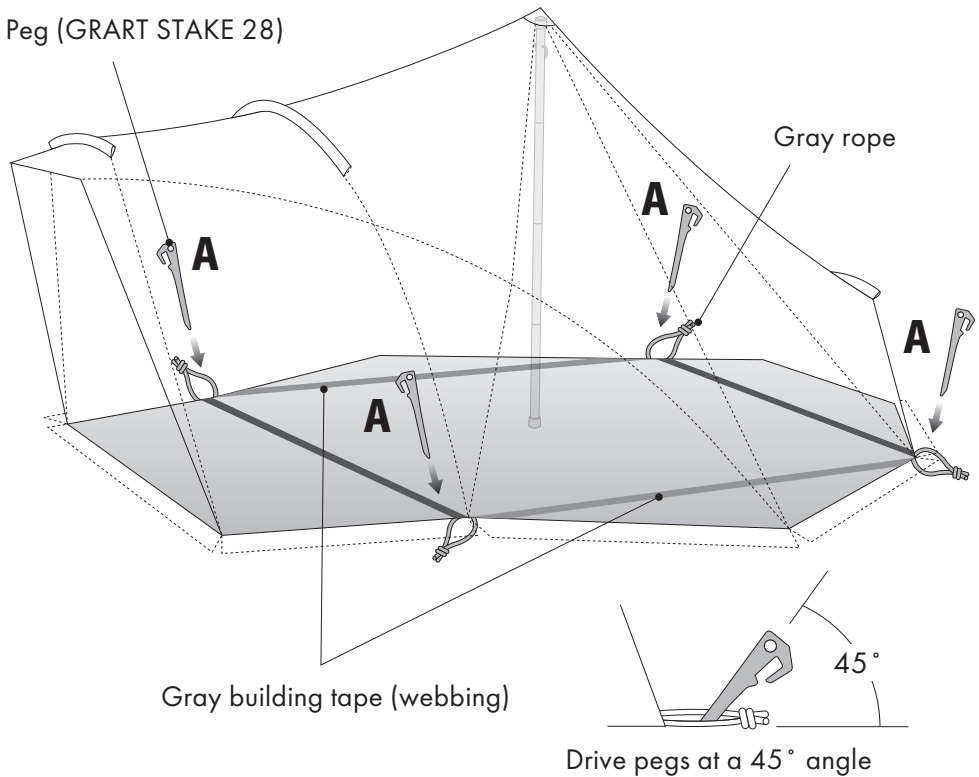

# 1 -2 INSERT THE CENTER POLE

B: Stand the center pole in the room and push up into the apex.

C: Drive pegs (GRART STAKE 28) into the remaining two side corners to complete.

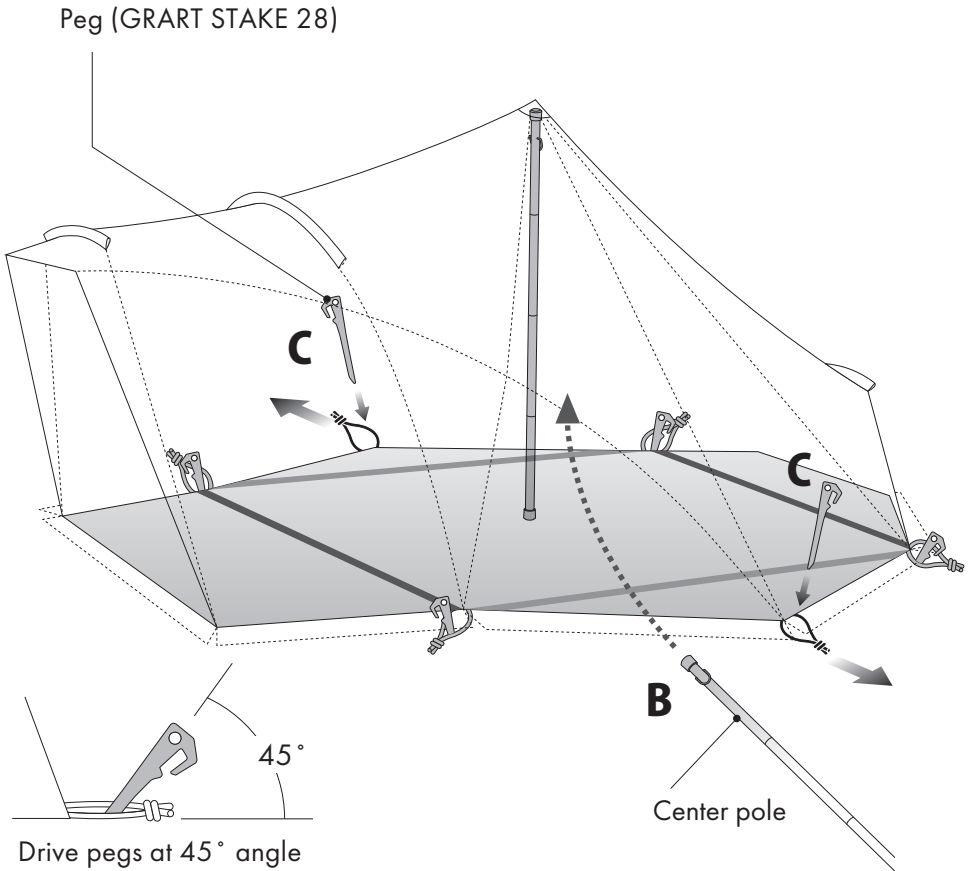


## 2 -1 INSTALL THE FRAME

A: Insert the longest frame (long front frame), with the silver ends, into the sleeve with the gray binding.

B: Insert corner clips with gray rope into both ends of frame.

C: Clip (2 places)

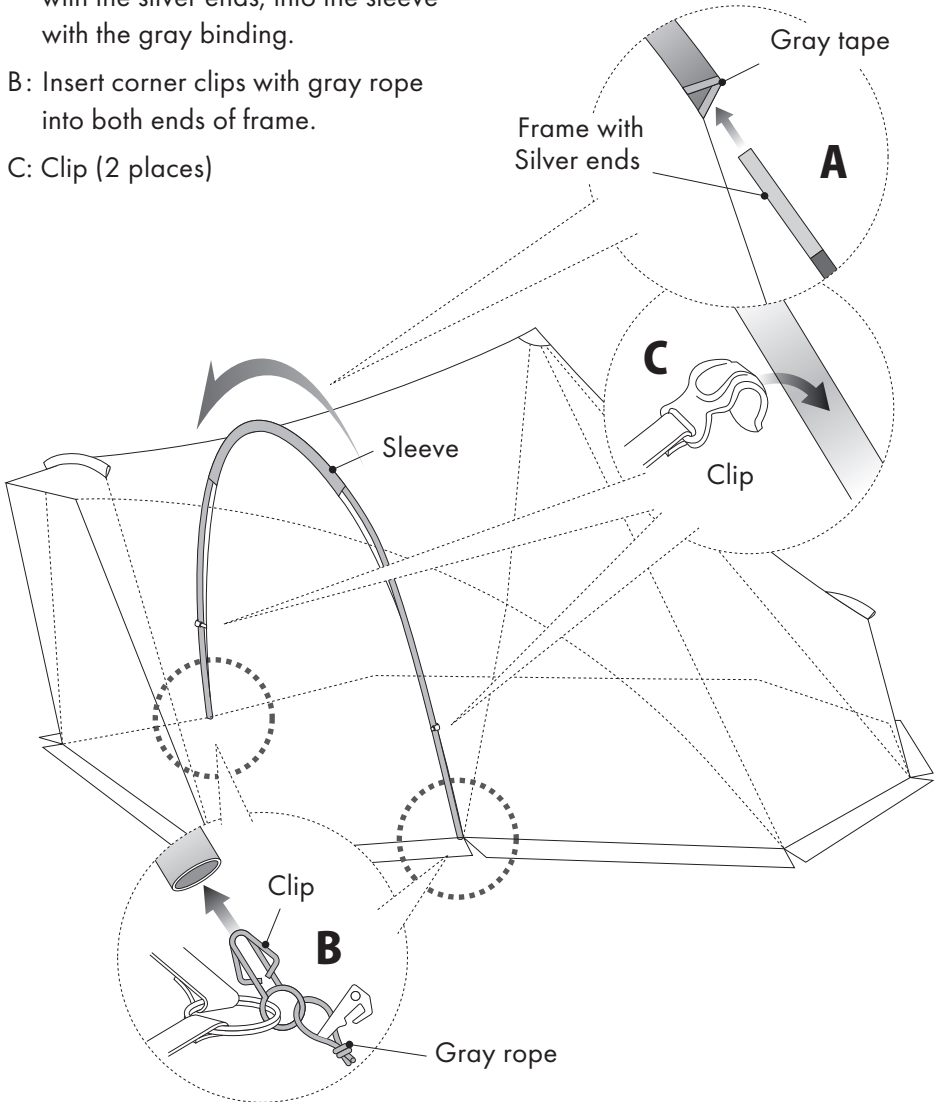


## 2 -2 SETTING UP THE SHORT FRAME

D: Insert the second to longest frame (the short front frame) through the sleeve with black binding.

E: Insert corner clips with black rope on both ends of frame.

F: Attach clips (4 places)

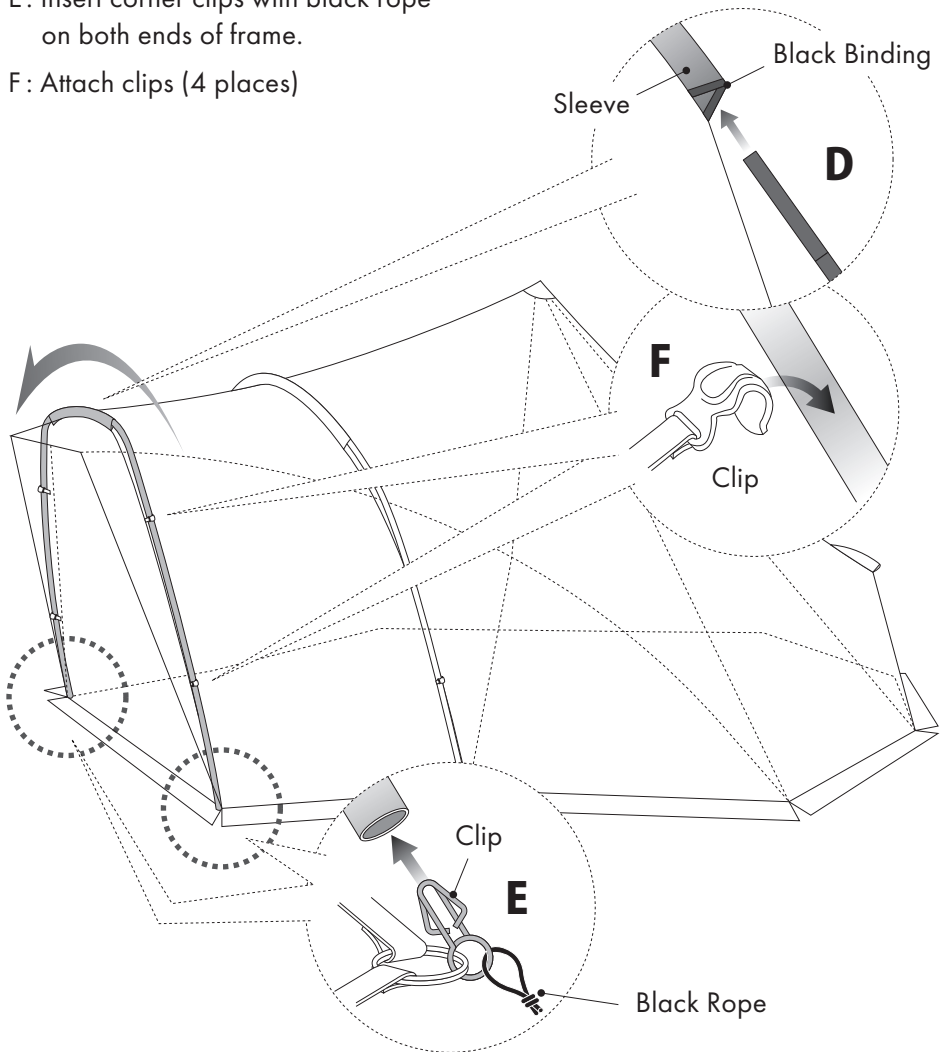


## 2 -3 SETTING UP THE BRIDGE FRAMES

G: Insert frames (bridge frame) with locking grommet tips into grommets above entrance on both sides.

H: Insert clips on bottom side corners into ends of bridge frames on both sides.

I: Attach clips (5 locations) to bridge frame.  
Repeat on opposite side.

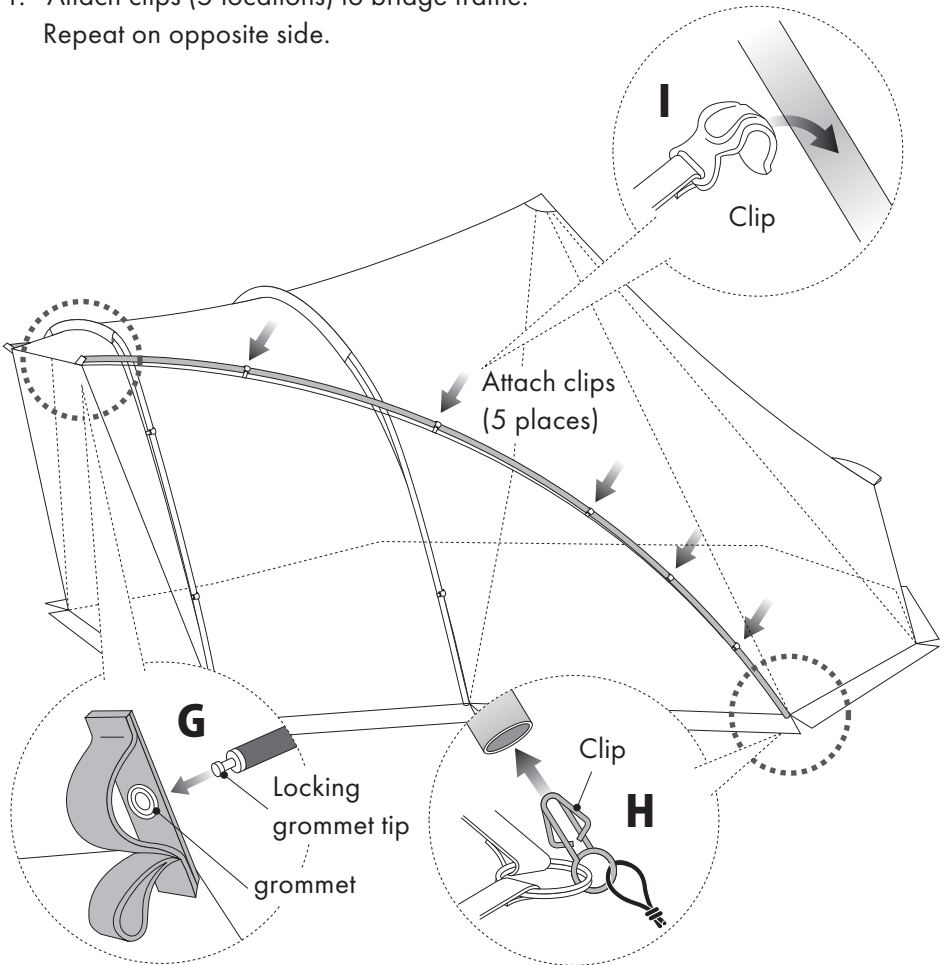



## 2 -4 SETTING UP THE REAR FRAME


J: Peg down two front corners (GRART STAKE 28).

K : Insert shortest frame (rear frame) through back sleeve.

L: Insert back side clips into ends of bridge frames on both sides.

M: Attach clip (2 places)


N: Pull both back corners out and peg down (GRART STAKE 28).

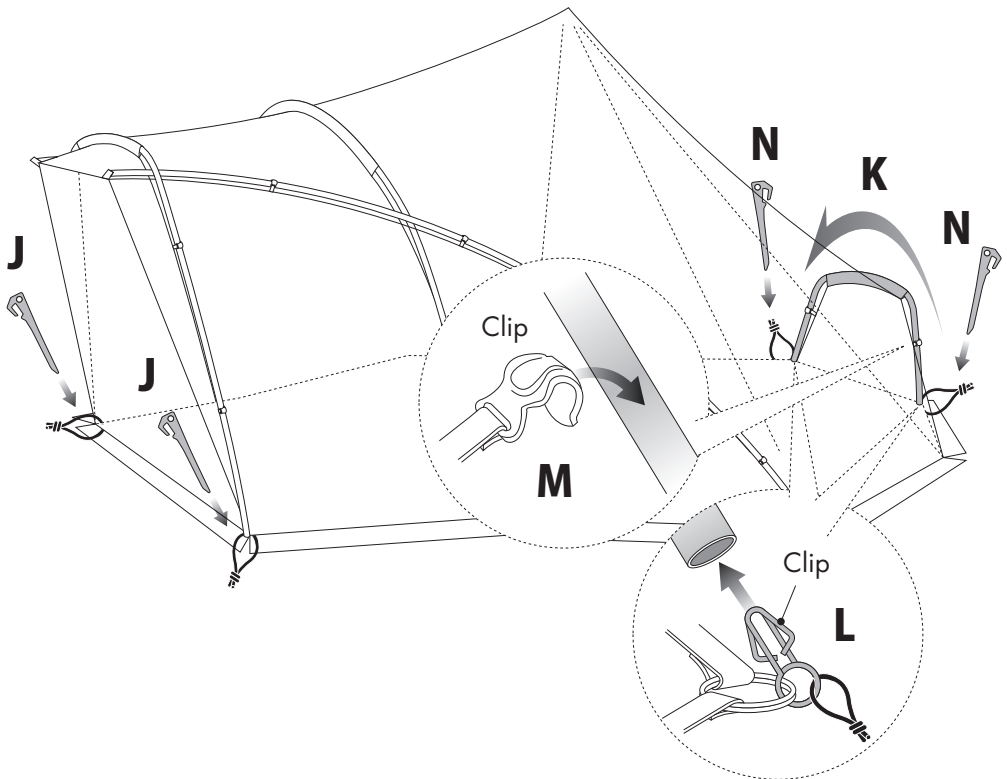

### 3 -1 ATTACH ROPES AND DRIVE PEGS

Attach 2 m and 3 m ropes according to the diagram below.  
The 2 m ropes are only used in 2 places, all others are 3 m.

Attach the rope to rings where available,  
where rings are not available, attach to webbing.

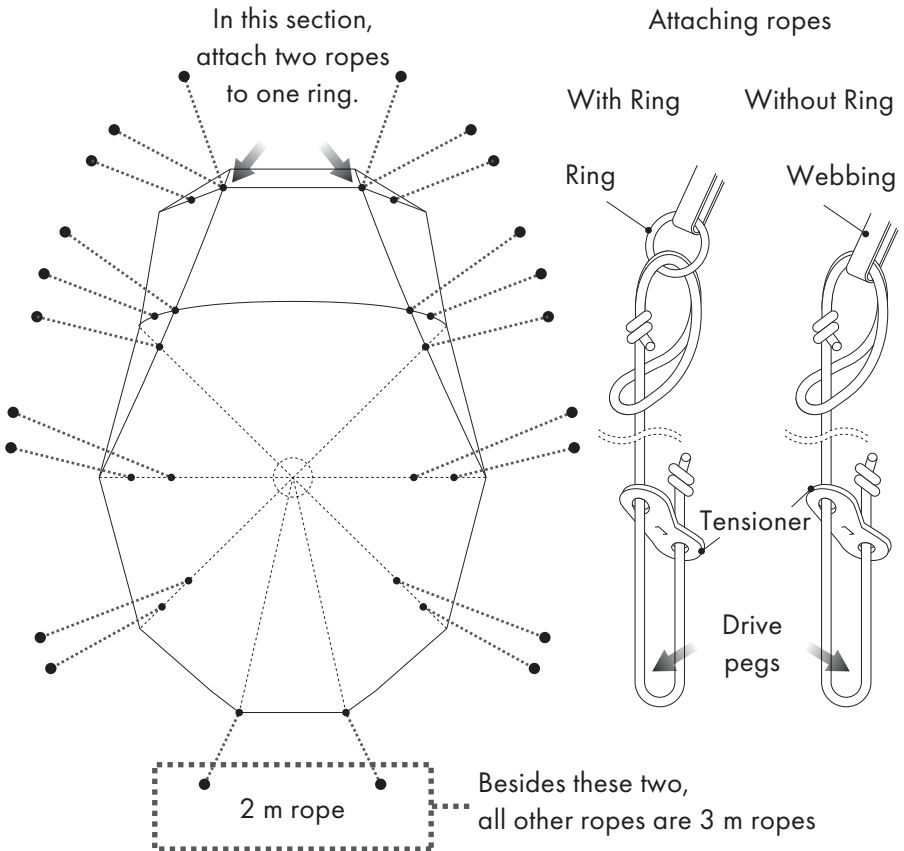

### 3 -2 ATTACH ROPES AND DRIVE PEGS


A: Lasso the webbing loop.

B: Peg down two ropes with one peg.

C: Peg down three ropes with one peg.



D: Peg down one rope with one peg.

※ Do not fully tension ropes until after installing inner tent.

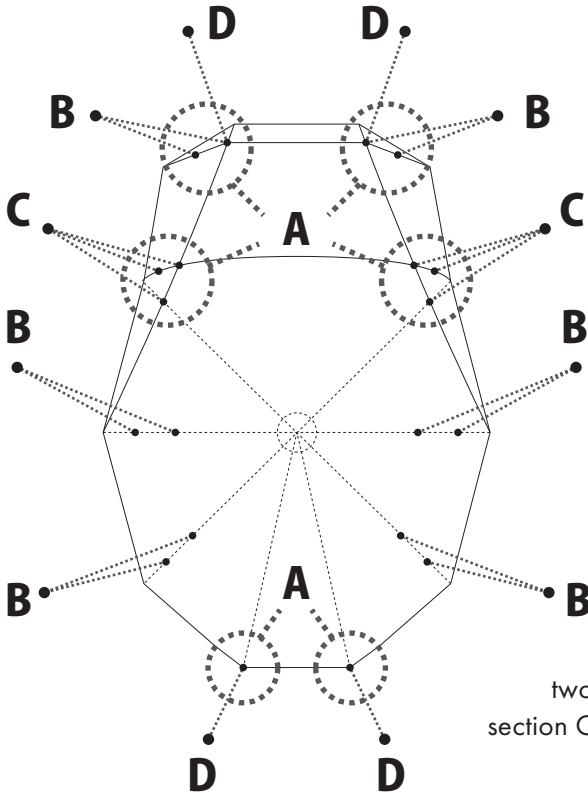


**A**

Lasso the webbing loop.

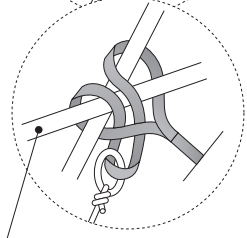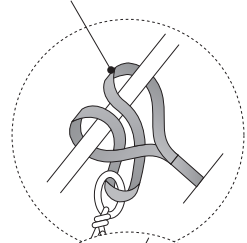

Lasso intersecting frame poles together.

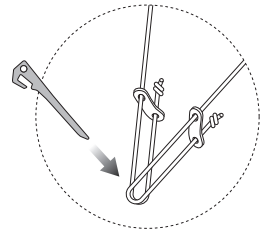


In section B peg down two ropes with one peg and in section C three ropes with one peg.

## 4 -1 INSTALL INNER TENT

A: Hang inner tent hook on D ring of center pole, adjust height as needed and secure with hook-and-loop tape.  
(the D ring can be easily reached by tilting the pole diagonally).


B: Fix the inner tent to the center pole with cords (2 places).

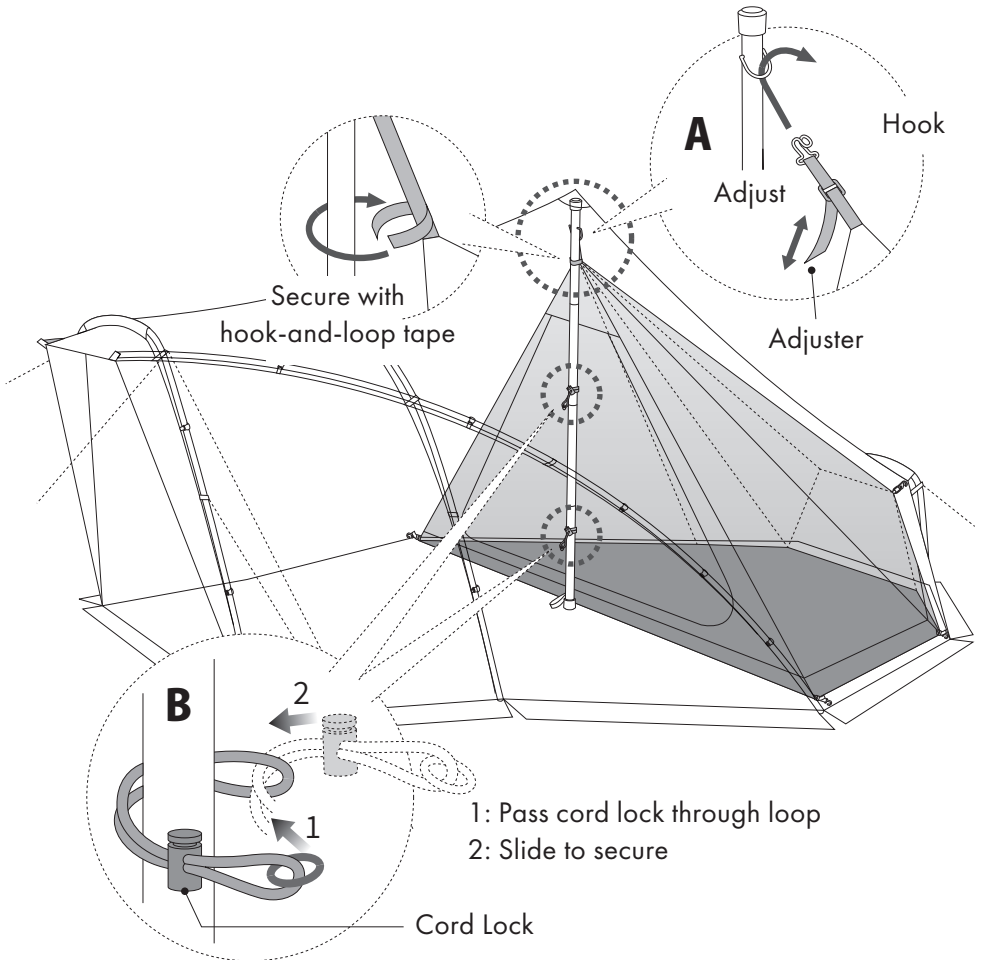

## 4 -2 INSTALL INNER TENT

C: On exterior of inner tent, hook upper rear hooks to rings on main tent, adjust as needed (2 places).


D: On exterior of inner tent, hook bottom rear hooks to rings on main tent, adjust as needed (2 places).

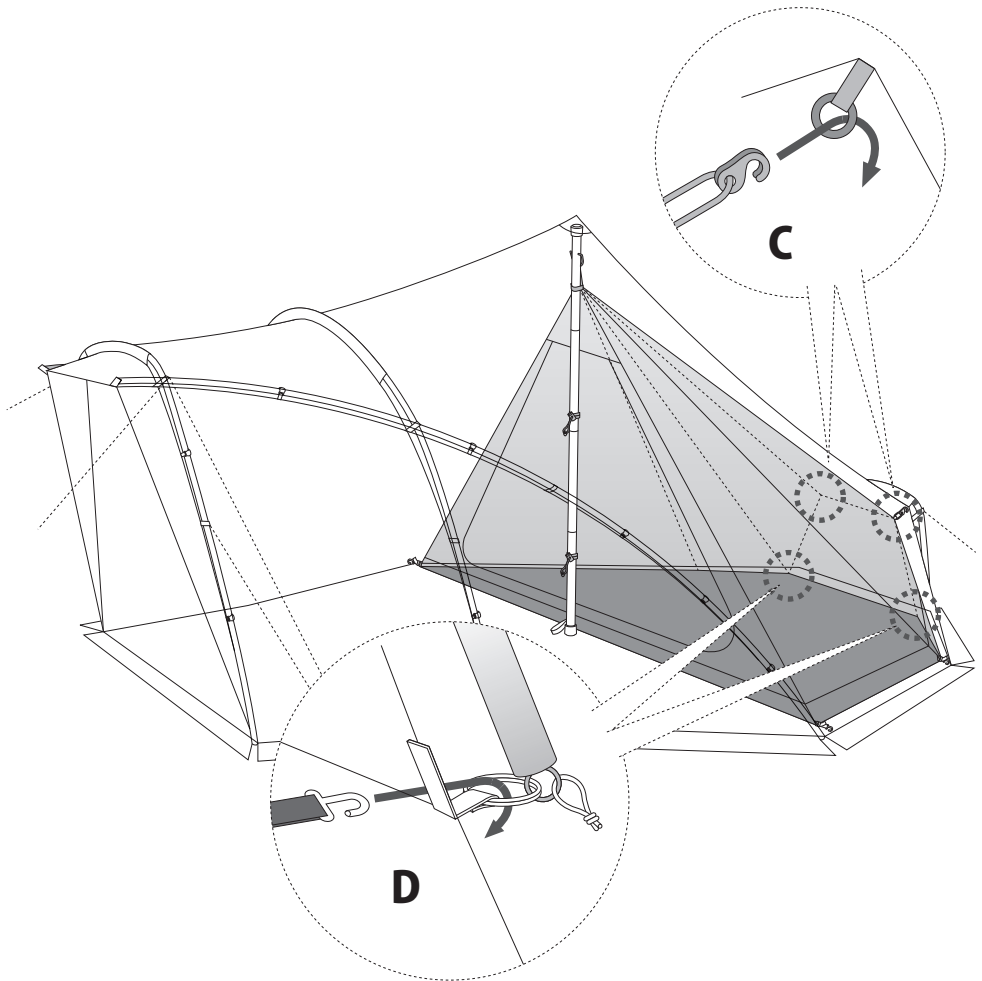

## 4 -3 INSTALL INNER TENT

E: On exterior of inner tent, hook bottom middle hooks to rings on main tent, adjust as needed (2 places).

F: On exterior of inner tent, hook bottom front hooks to rings on main tent, adjust as needed (2 places).

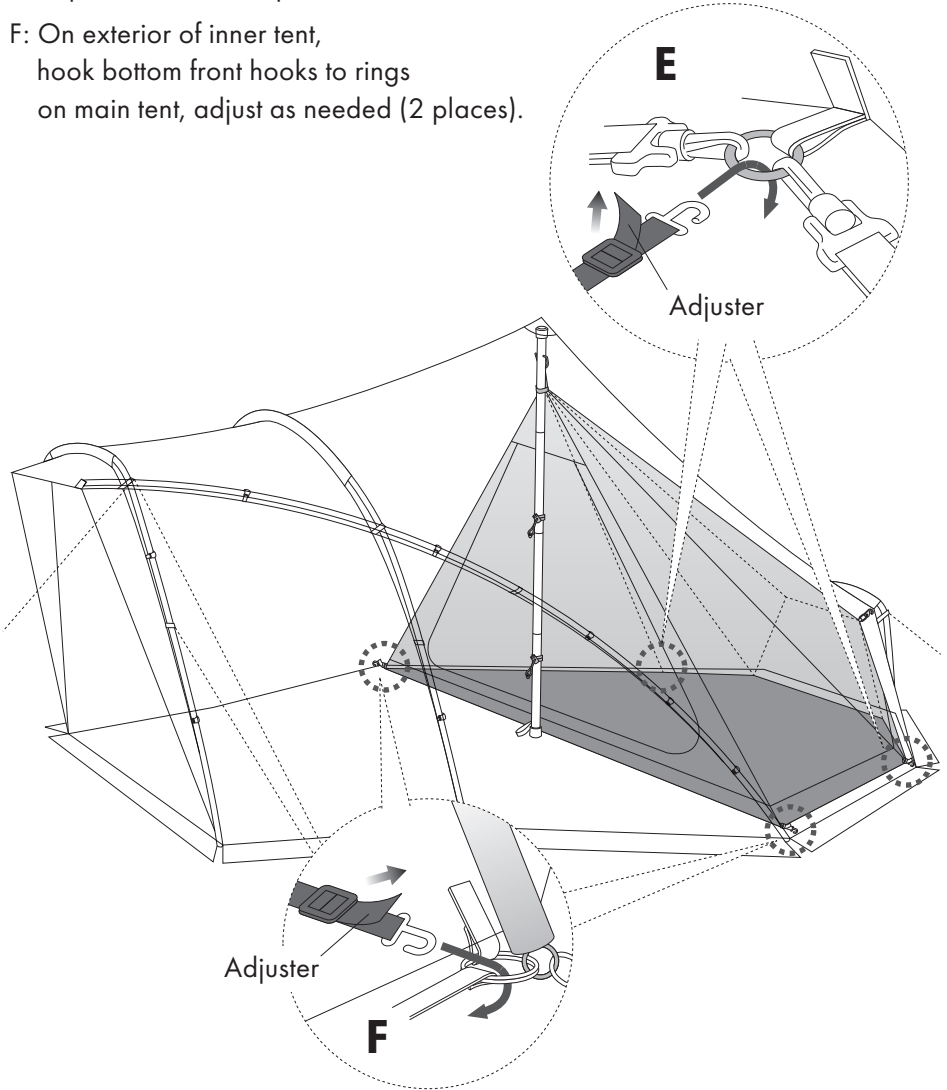

## 4 -4 INSTALL INNER TENT

G: After installing inner tent, tension all guy lines.  
Set up is complete.

