

 


DT-014 / GIMORG

MANUAL - Ver 1.00

■ ITEMS INCLUDED


Please check the contents of the set before fully opening the tent. If you find something missing, please contact the store where you purchased it or us directly.



Fly sheet
× 1



Inner tent
× 1

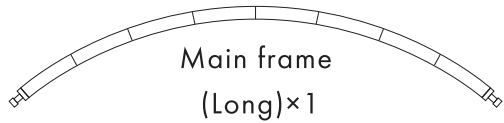

Main frame
(Long) × 1




Main frame
(Short) × 2




Bridge frame × 2




Rear frame × 1

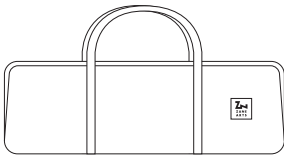


Carry bag × 1

 

 
1.5m rope
× 4



 2.5m rope
× 4



Rope bag
× 1

 

Pole bag
× 1

※Pegs/Hammer are not included.

■ ABOUT THIS PRODUCT

Please take some time to understand the characteristics of this product before using it.

Fire is prohibited

Chemically treated fibers are used in the fabric of this product. Chemically treated fibers will liquefy when burned, and the liquefied fabric may cause serious burns to the skin when touched. Never use stoves inside the tents, shelters or tarps.

Wrinkles caused by folding are noticeable.

Chemically treated fibers that are commonly used for tents, shelters and tarps are prone to wrinkles. In particular, the fabric of this product will have noticeable wrinkles due to the color, thickness, and surface processing of fabric. Please note that it does not affect performance in any way.

Water repellency is not permanent.

The surface is treated with silicone water repellent, but after use, the water repellent performance will deteriorate and rain will eventually penetrate the fabric. Please note that the water repellency cannot be maintained long term. Waterproof performance of the back side is not affected, so even if water repellency deteriorates, there is no issue using it as it is.

Discoloration of seam tapes

Please note that the seam tapes will gradually discolor, but this does not affect the performance of the product.

Dry and store securely after use.

If the product is stored in damp conditions, the polyurethane coating on the back side of the fabric will react with the moisture and may decompose or separate, causing the seam tape to peel off and diminish its waterproofness. After using, dry thoroughly and store away from hot or humid places. Be extra careful to wipe any moisture from the seam tapes.

For 3 season of use

This product is not designed to withstand snowfall nor low temperatures. Do not use in such situation where the zippers may freeze.

Do not remove the fire prohibition tag.

Do not cut or remove the fire prohibition tag sewn to the product. Products without the fire prohibition tag will not be guaranteed nor accept repairs.

■ PRECAUTIONS FOR SETUP AND USE

Be sure to read and understand the following contents before use to prevent harm to the user and others, and damage to the property.



**INDICATES CONTENTS THAT MAY
RESULT IN DEATH OR SERIOUS INJURY.**

DANGER

- Fire is prohibited in tents, shelters, and tarps. It is extremely dangerous as there is a risk of fire, oxygen deficiency, carbon monoxide poisoning, etc. Do not use firearms and keep fire away from the product.
- If bad weather such as a typhoon or storm is expected, please stop camping immediately.
- Do not set up in places that are easily affected by wind, or where there is a risk of falling rocks, avalanches, or flooding.



WARNING

INDICATES CONTENTS THAT MAY RESULT IN INJURIES OR PROPERTY DAMAGE.

- Not for permanent use. If this product is permanently installed, it will deteriorate and be damaged in a short period of time due to the effects of ultraviolet rays and other elements.
- Set up in a well-drained, flat area. Moisture and dirt lead to deterioration, and rough ground leads to damage due to product distortion.
- Remove any stones, twigs, or other objects that may damage the product before setting up.
- When setting up the product, be sure to do it with two or more people while paying attention to your surroundings.
- Do not set up in strong winds. The product may be blown away or damaged by the force of the wind.

- When setting up, be prepared for gusts of wind, and always be careful that the tent body and frame will not fly away, and work while supporting them.
- When extending poles or frames, make sure each section is inserted securely. Assembling the product incorrectly can lead to damage.
- When handling poles or frames, be careful not to hit or damage something around you and pay attention to your surroundings.
- After setup, secure the tent, shelter, and tarp to the ground with pegs and ropes to prevent them from being blown away by the wind.
- Do not leave the product unattended for long periods of time so that you can respond to sudden weather changes.

■ PRECAUTIONS FOR TAKING DOWN THE PRODUCT AND AFTER USE CARE

 
Be sure to read and understand the following contents before use to prevent harm to the user and others, and damage to the property.



INDICATES CONTENTS THAT MAY RESULT IN INJURIES OR PROPERTY DAMAGE.

WARNING

- When taking down the product, be sure to do it with two or more people.
- Please take down the product in the reverse order of the setup. Not following the instructions properly may damage the product.
- When removing poles or frames, pay attention to your surroundings and be careful not to hit or damage something around you.



- When folding a frame or pole with a built-in cord (bungee cord), begin folding from the centre, this will reduce the wear on the cord by not applying extra tension.
- After use, clean the fabric and allow it to dry thoroughly before storage. Storage with dirt and damp conditions may cause mold, bad odors, colour transfer, and deterioration.
- After use, also clean the frames, poles, and other metal parts and allow it to dry thoroughly before storage. Storage with dirt and damp conditions may cause corrosion damage.
- Salt will accelerate the deterioration of fabrics. If used near the sea, rinse the product with fresh water and dry well before storage.
- Use a soft towel to gently clean or wipe moisture off the fabric. Rubbing may damage the coating of the fabric.

- Do not use solvents such as paint thinners. There is a risk of detachment or discoloration of the water-repellent finish.
- Do not launder. It leads to deterioration of the fabric and breakage of parts.
- Please keep out of reach of infants and children while storage.

■ SETUP PROCEDURES


Follow the instructions in order to setup the product.

【Preparation】

※Prepare pegs and hammer

Recommended pegs/quantity > TO-518 "GRART STAKE 18" / 10 pcs
TO-528 "GRART STAKE 28" / 8 pcs

※Close all zippers

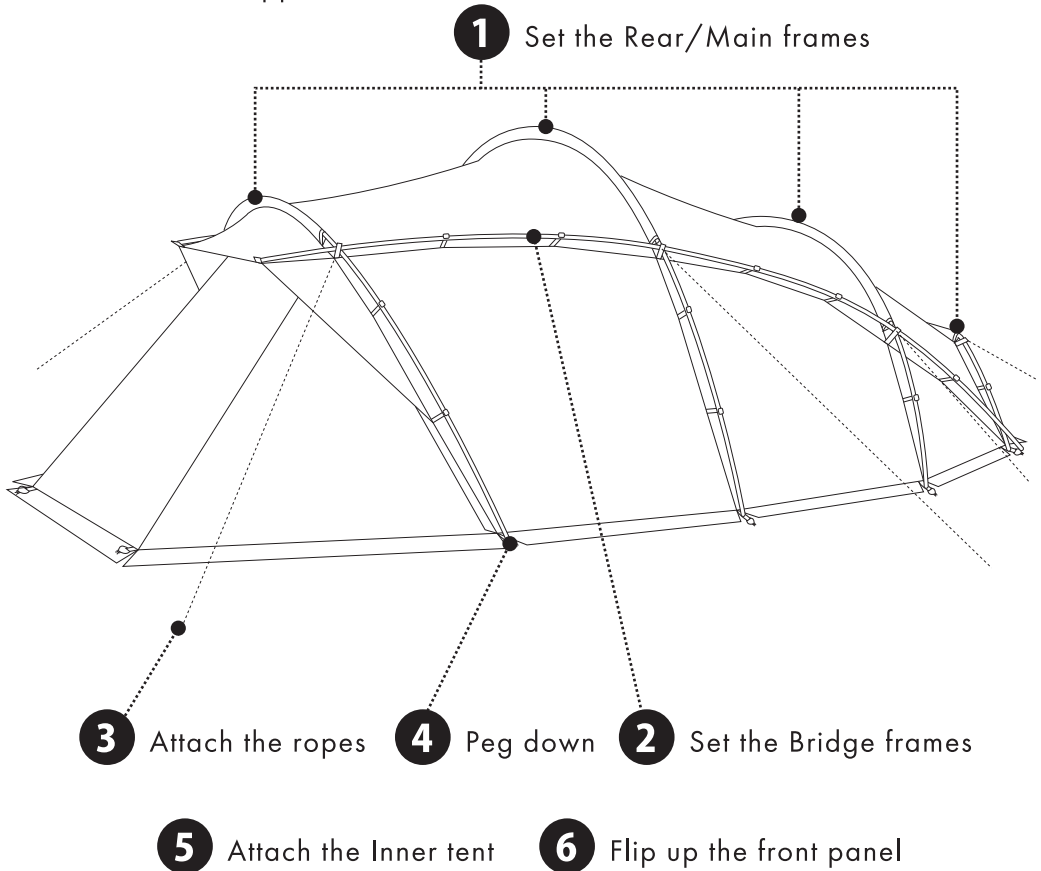


1 -1 SET THE REAR/MAIN FRAMES

Assemble all the frames (6 total)

A : Insert the Rear frame into the sleeve at the rear side of the tent.

B : Insert the tips of the frame into the grommet at the corners.

C : Attach the hooks. (2 locations)

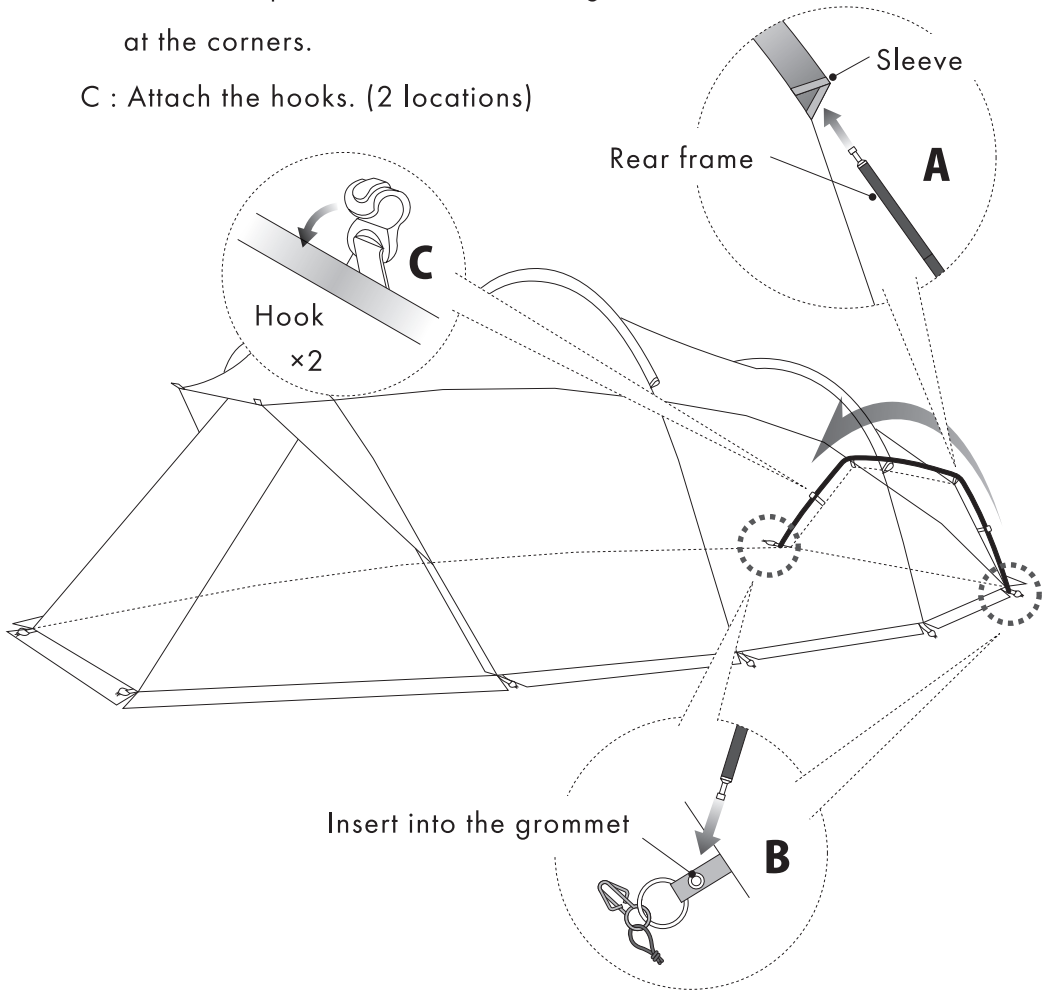


1 -2 SET THE REAR/MAIN FRAMES

D : Insert the frame with silver ends (Main frame (Long)) into the sleeve with grey ends. (2nd sleeve from the rear)

E : Insert the tips of the frame into the grommet where the grey ropes are attached.

F : Attach the hooks. (2 locations)

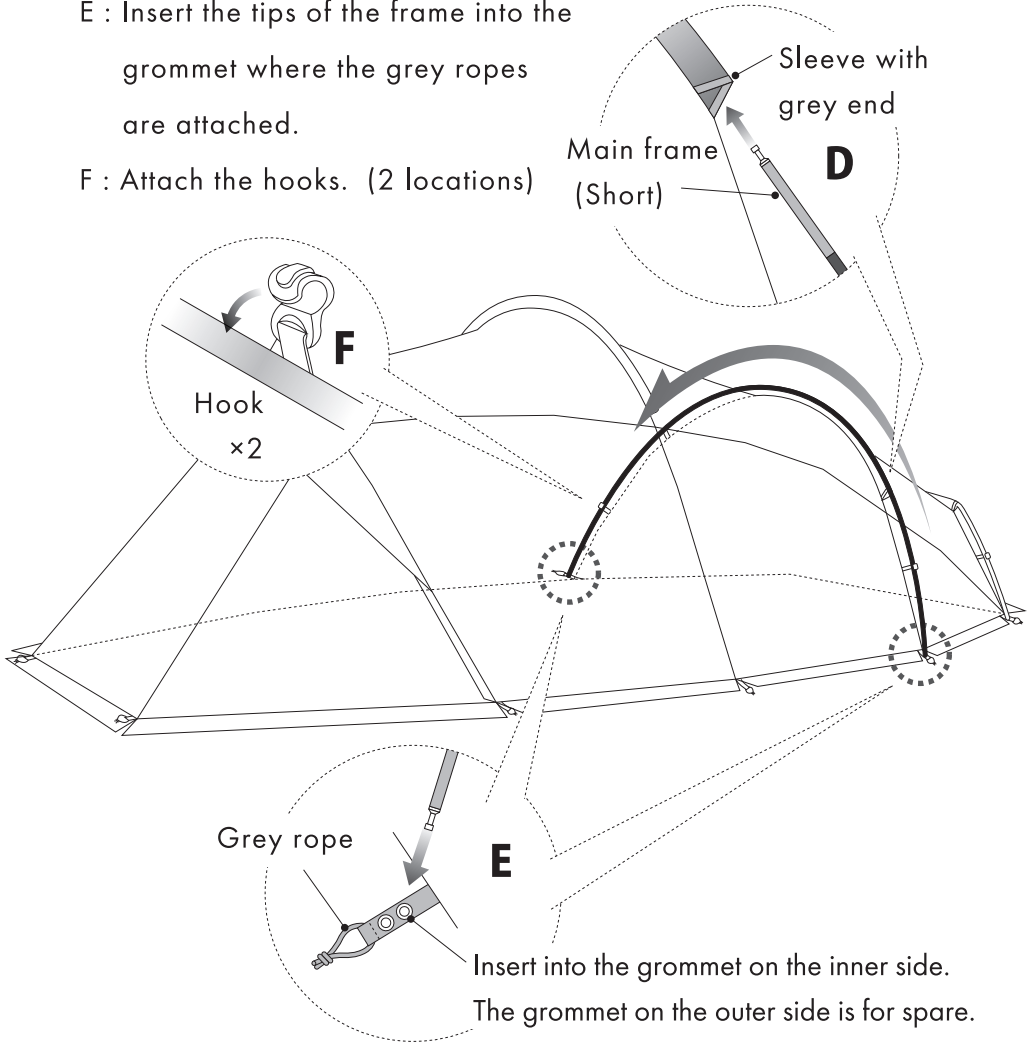


1 -3 SET THE REAR/MAIN FRAMES

G : Insert the Main frame (Long) into the sleeve with black ends.
(3rd sleeve from the rear)

H : Insert the tips of the frame into the grommet where the black ropes are attached.

I : Attach the hooks. (4 locations)


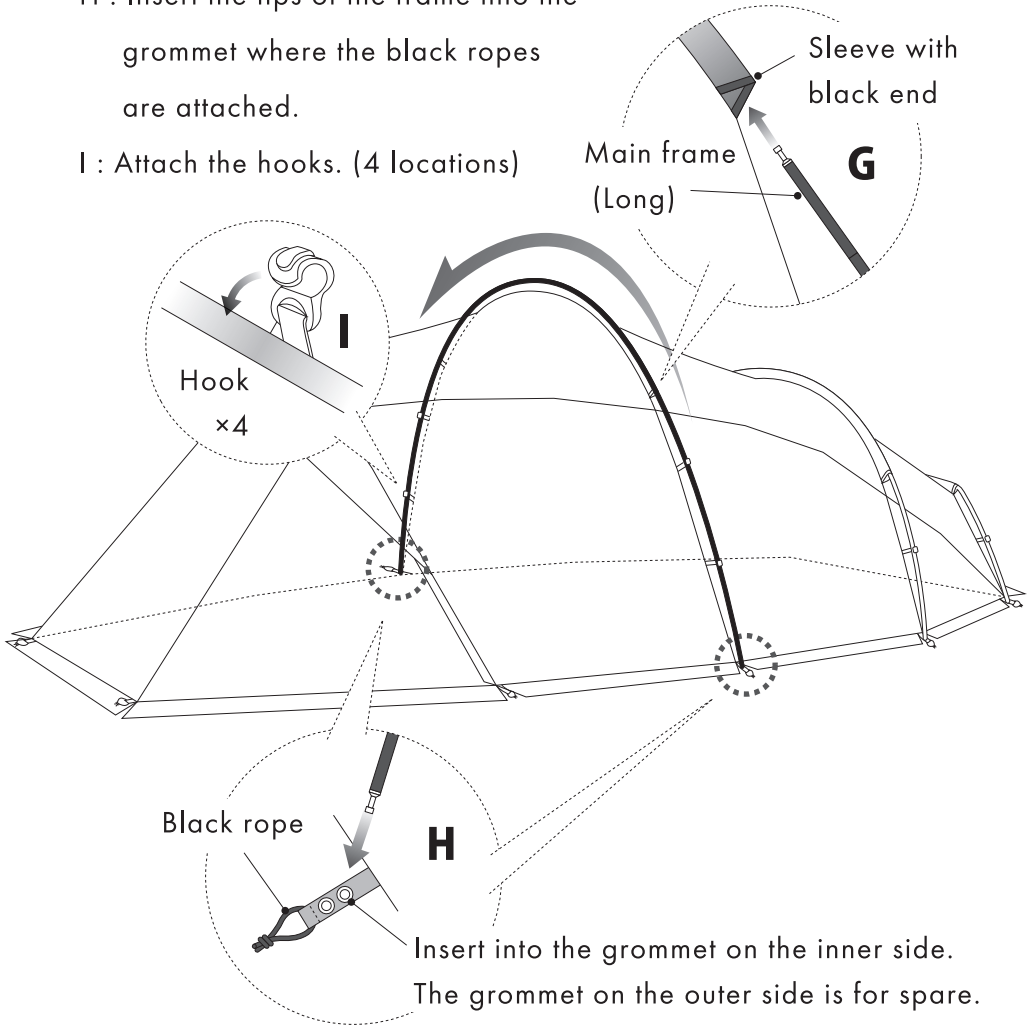


1 -4 SET THE REAR/MAIN FRAMES

J : Insert the frame with silver ends (Main frame (Short)) into the sleeve with grey ends. (front sleeve)

K : Insert the tips of the frame into the grommet where the grey ropes are attached.

L : Attach the hooks. (4 locations)

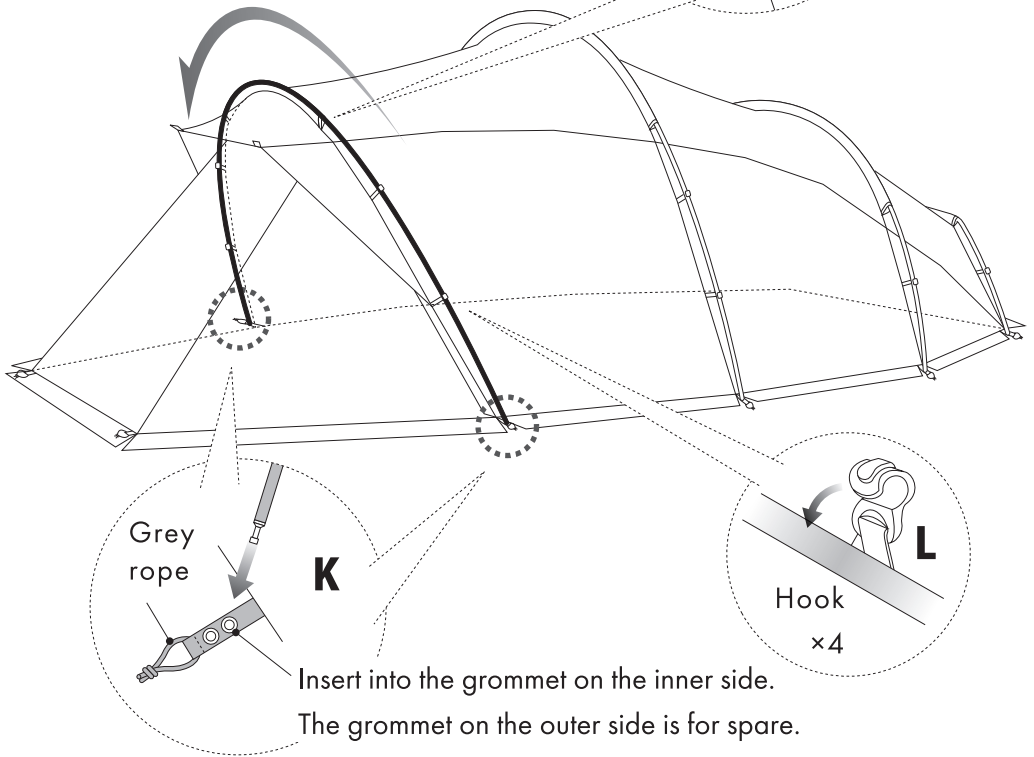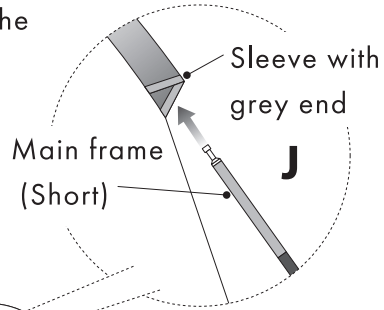


1 -5 SET THE REAR/MAIN FRAMES

M : Lay down the frames so that they overlap toward the rear side.

N : Temporarily peg down the 2 loops located at each ends of the Rear frame.

O : Hold and pull the front chamber while letting air go inside the tent,
and the frame will stand alone.

P : While keeping the frames upright, temporarily peg down the
2 loops located at the corners of the front chamber.

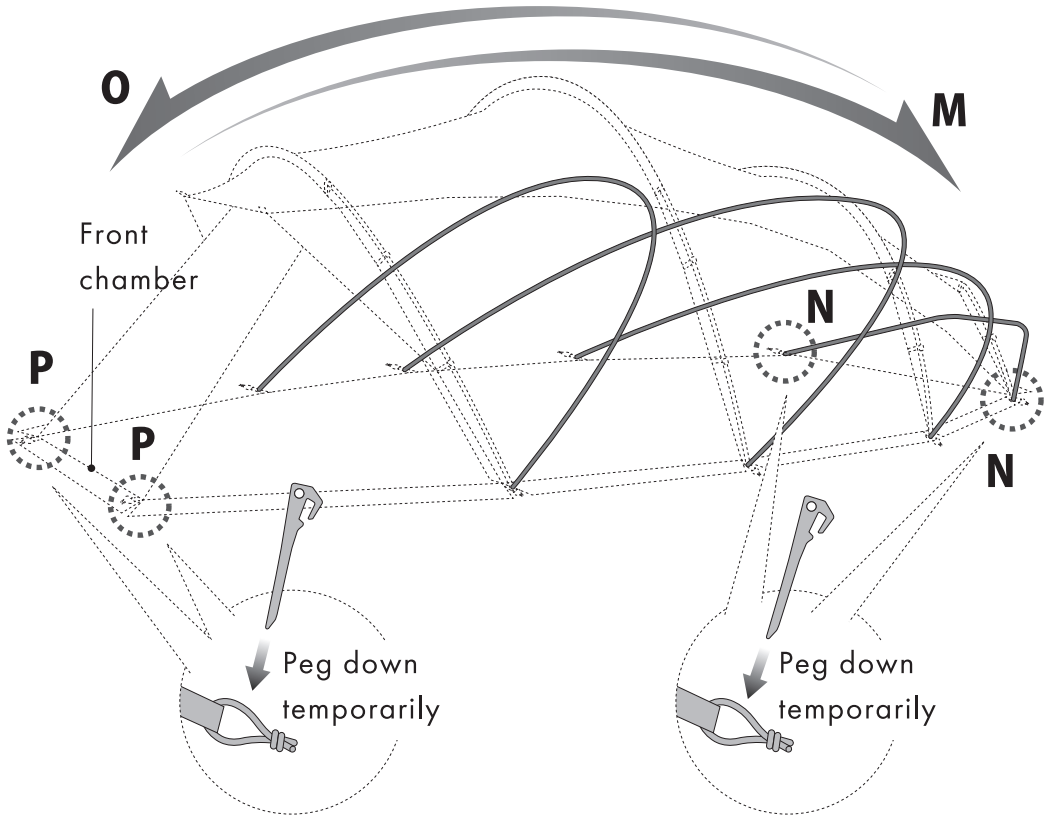


2 SET THE BRIDGE FRAMES

A : Insert the locking grommet tip of the Bridge frame into the grommet above the front panel.

B : Insert the other end of the Bridge frame into the clip located at the bottom rear corner.

C : Attach the hooks. (5 locations)

Repeat on opposite side.


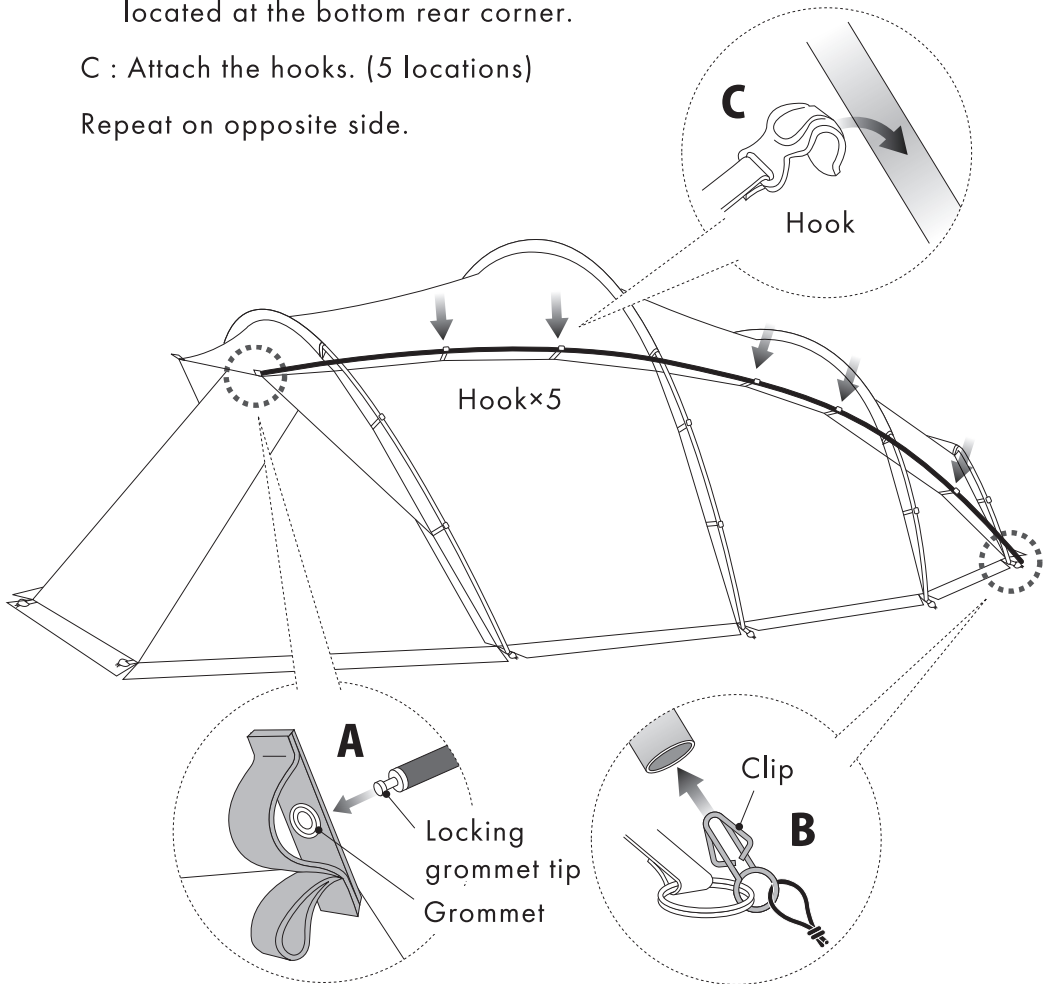


3 -1 ATTACH THE ROPES

Referring to below, attach the 2.5m and 1.5m ropes to each rings.
Repeat on opposite side.

Rope installation

Ring

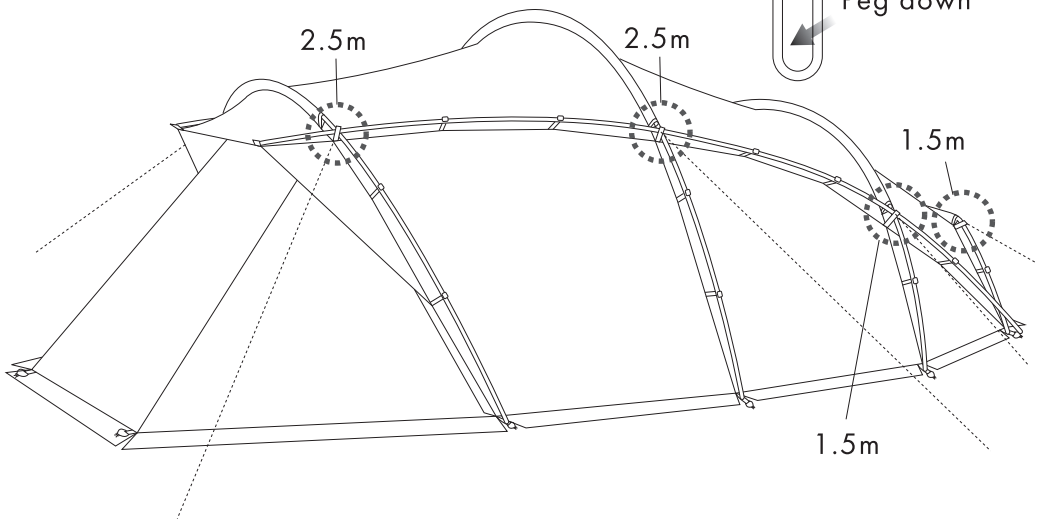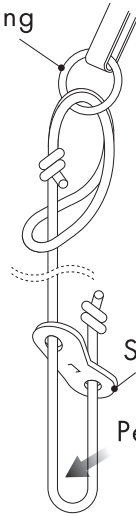



Repeat on opposite side.

3 -2 ATTACH THE ROPES

Referring to below, wrap the webbings around the frames.

Repeat on opposite side.

Wrap the webbing
around
the frame

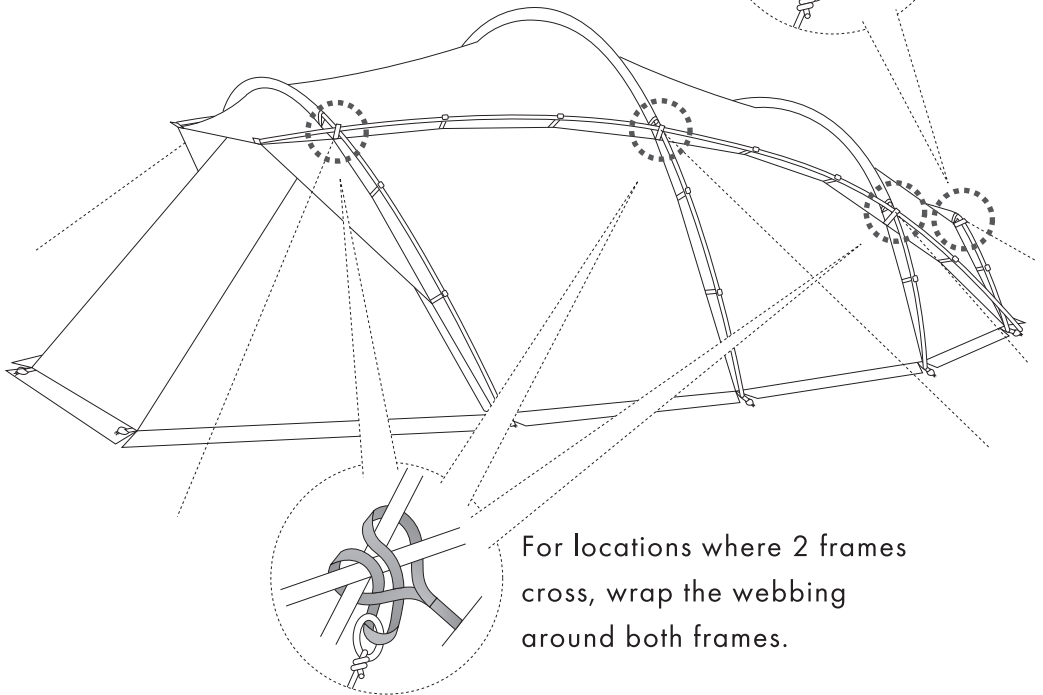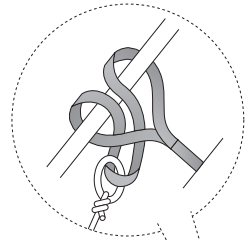

For locations where 2 frames
cross, wrap the webbing
around both frames.




4 PEG DOWN

Remove the temporarily fixed pegs.

A : Peg down the bottom corners in numerical order. (GRART STAKE 18)

B : Peg down the the ropes. (GRART STAKE 28)

C : Adjust the tension with the stoppers.

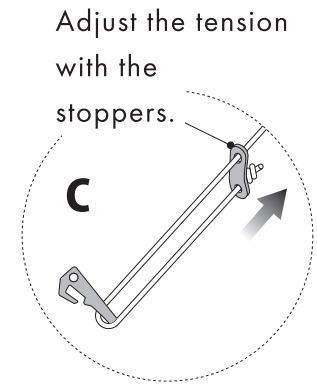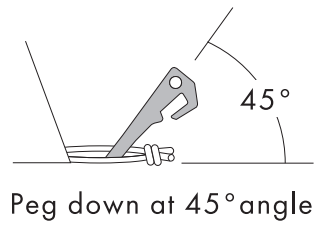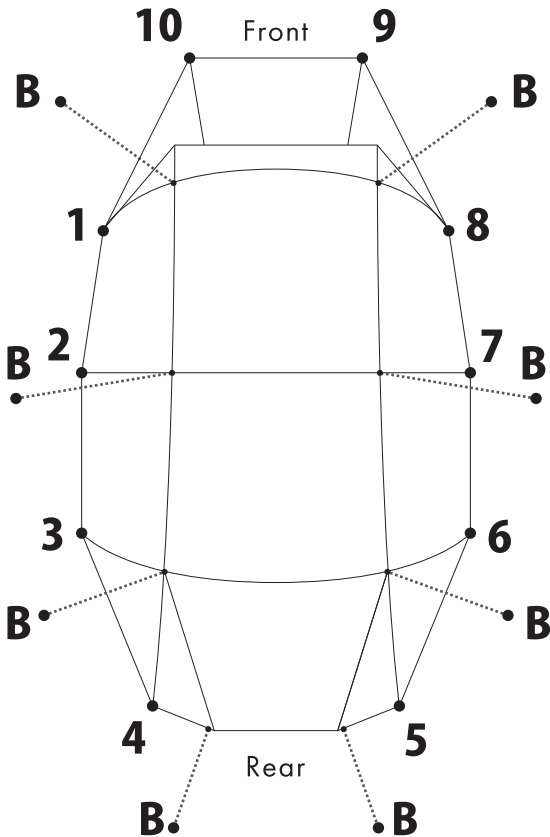

5 ATTACH THE INNER TENT

A : Attach the 2 hooks to the rings located at the upper rear side.


B : Attach the 2 hooks to the rings located at the bottom rear corners.

C : Attach the 3 hooks to the rings located at the upper middle area.

D : Attach the 2 hooks to the rings located at the bottom middle corners, and adjust the tension with the adjuster.

E : Attach the 3 hooks to the rings located at the upper front area.



F : Attach the 2 hooks to the rings located at the bottom front corners, and adjust the tension with the adjuster.

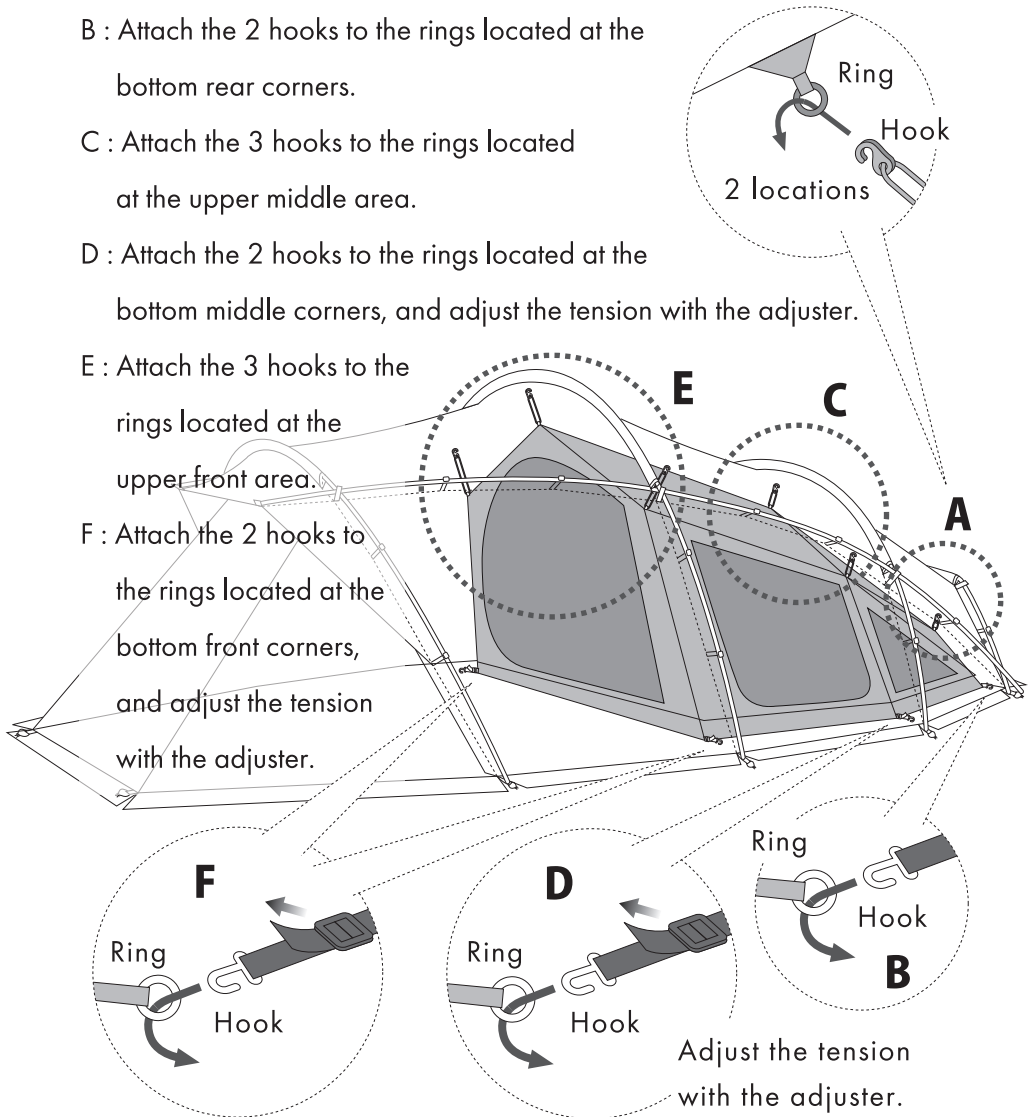

6 FLIP UP THE FRONT PANEL

There are 2 ways of flipping up the front panel.

※The required UPRIGHT POLE 150, ropes, pegs are not included.

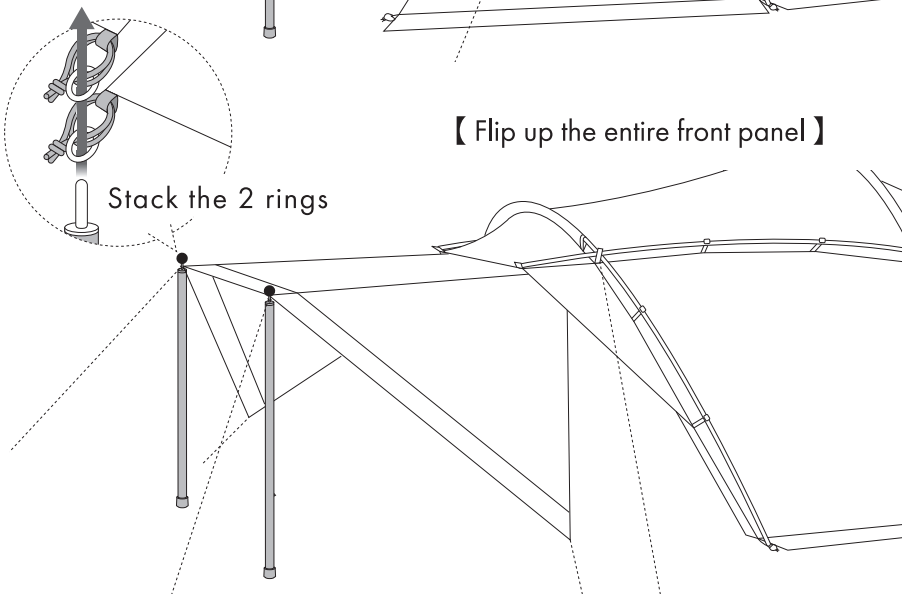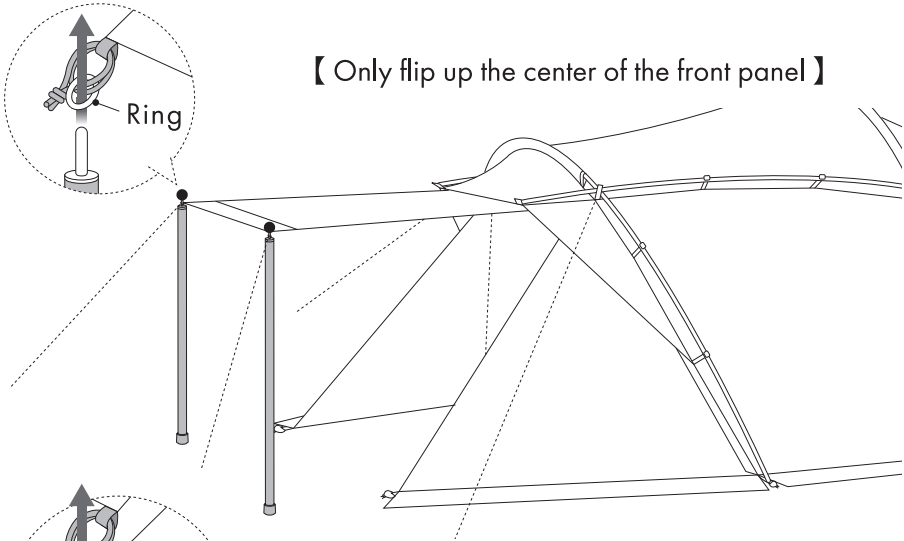

ZANE ARTS, Inc.

7190-2 Shimauchi, Matsumoto, Nagano 390-0851

global@zanearts.com