



Replacing the vacuum tube:

1. Remove the vacuum cup and unscrew the plastic section with a screwdriver.

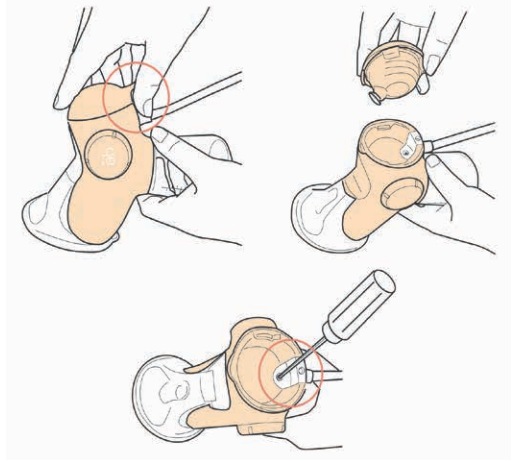

2. Replace with the new vacuum tube, slide the connector in and close the screw. Make sure the pins of the connector are aligned properly.

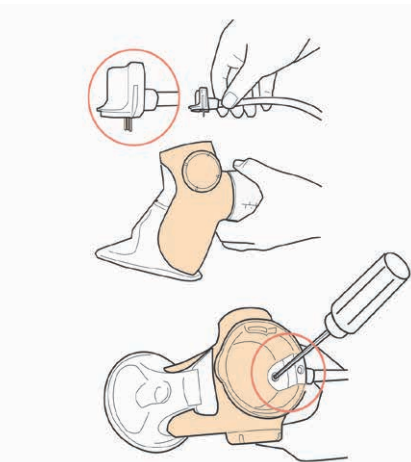

3. Turn the pump on and make sure it is functioning properly.