

Model 1

(Notches above the Ultrasonic Frequency Slider)




Too *LOUD*??!!



Here's how to adjust it !!

What's your issue? A, B, C

(Allow 1 minute to pass after each adjustment)

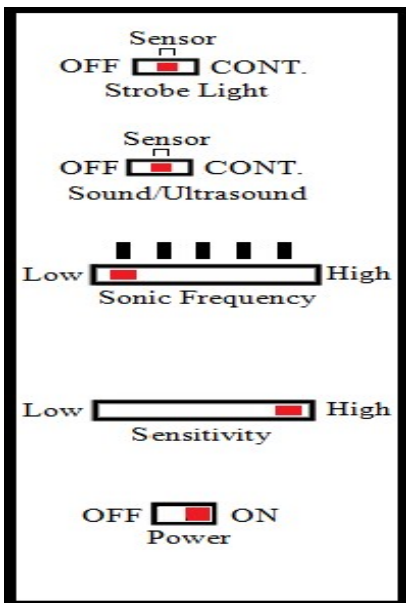

A – The beeping is **TOO** loud!

→→ There are 5 lines above this slider. We recommend LOW (all the way to the left) which is audible. Since this beeping is too noisy for your situation, adjust it to the second or third line. The middle will make it inaudible to humans, but we do not recommend pasting the middle line, it will make it inaudible to the birds as well.

B – The Sound & LED lights go off too easily

→→ Adjust the Sensitivity halfway to **LOW**.

C – It never stops beeping!!

→→ Make sure Sound/Ultrasonic switch is not set to CONT.

If you have any other problems,

please get in contact with us!!

Phone: (480) 255-5113

Email: info@cleanrth.com

We are here to help with the devices AND with those pesky birds

Model 2

(No Notches above Sonic Frequency slider)




Too *LOUD*??!!



Here's how to adjust it!!

What's your issue? A, B, C

(Allow 1 minute to pass after each adjustment)

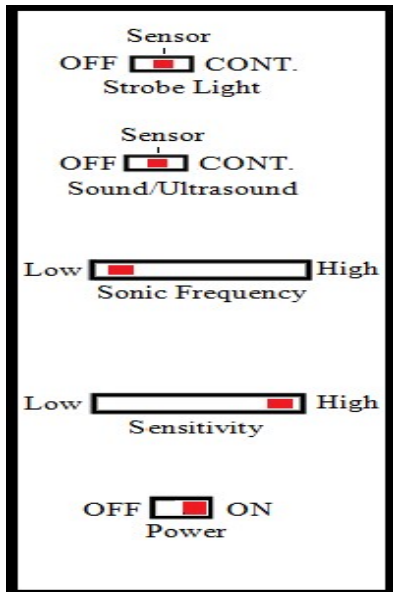

A – The beeping is TOO loud!!

→→ Adjust the Sonic Frequency slider halfway to three-quarters to the right. The audible beeping will stop but a light audible clicking with start.

B – The Sound & LED lights go off too easily

→→ Adjust the Sensitivity halfway to LOW.

C – It never stops beeping!!

→→ Make sure Sound/Ultrasound switch is not set to CONT.

If you have any other problems,

please get in contact with us!!

Phone: (480) 255-5113

Email: info@clearth.com

We are here to help with the devices AND with those pesky birds!