

Model 1

(Notches Above Ultrasonic Frequency Slider)




Too *LOUD*??!!



Here's how to adjust it!!

What's your issue? **A**, **B**, **C**

(allow 1 minute to pass after each adjustment)

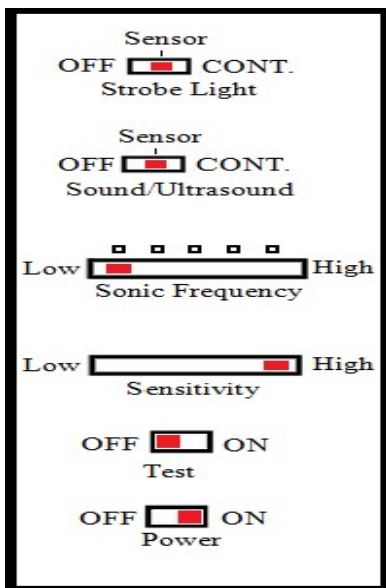

A – The beeping is **TOO** loud!!

→→ There are 5 lines above this slider. We recommend **LOW** (all the way to the left) which is audible. Since this beeping is too noisy for your situation, adjust it to the **second** or **third** line. The middle will make it inaudible to humans, but we do not recommend pasting the middle line, as it will make it inaudible to the birds as well.

B – The Sound & LED lights go off too easily

→→ Adjust the Sensitivity halfway to **LOW**.

C – It never stops beeping!!

→→ Make sure **TEST** button* is set to **OFF**.

If you have any other problems, please get in contact with us!!

Phone: (480) 255-5113

Email: info@clearrth.com

We are here to help with the devices AND with those pesky birds!

Model 2

(No notches above Ultrasonic Frequency Slider)




Too *LOUD*??!!



Here's how to adjust it!!

What's your issue? A, B, C

(allow 1 minute to pass after each adjustment)

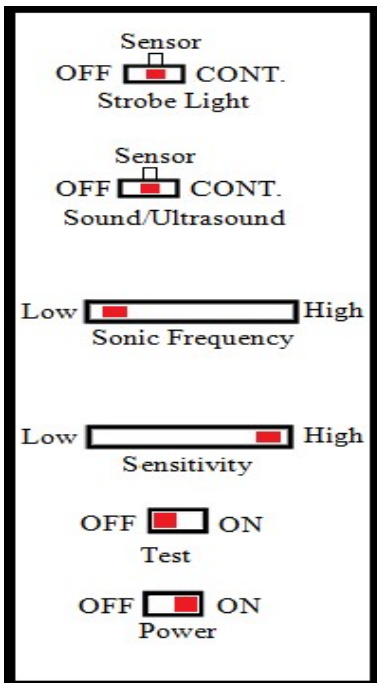

A – The beeping is **TOO** loud!!

→→ Adjust the Sonic Frequency slider Halfway to **three-quarter** to the **right**. The audible beeping will stop, and you will hear a light clicking.

B – The Sound & LED lights go off too

easily

→→ Adjust the Sensitivity halfway to LOW.

C – It never stops beeping!!

→→ Make sure TEST button* is set to OFF.

If you have any other problems, please get in contact with us!!

Phone: (480) 255-5113

Email: info@cleanrth.com

We are here to help with the devices AND with those pesky birds!