# Wall Mounted Touch Panel

# Model No.: T16, T16-1, T16-2, T16-3

1-4 Zone dimming switch/Glass touch panel/AC input/DMX 512 and RF 2.4G signal output



C€ RoHS emc LVD RED

### Features

- Touch panel 1/2/3/4 zone dimming DMX512 master, can also be used as 4 zone dimming RF remote.
- ullet DMX signal output, comply to standard DMX512 protocol, compatible with DMX decoder from any supplier.
- When used as RF remote, each zone can remote control multiple RF 2.4G LED controllers.
- Ultra sensitive high strength glass touch panel.
- Touch keys with LED indicator.
- White & Black glass panel available.

## **Technical Parameters**

| Model No.                 | T16-1 | T16-2 | T16-3 | T16 |
|---------------------------|-------|-------|-------|-----|
| Control zone number       | 1     | 2     | 3     | 4   |
| Output DMX channel number | 1     | 2     | 3     | 4   |

| Input and Output |                   |
|------------------|-------------------|
| Input voltage    | 100-240VAC        |
| Input current    | Max 0.1A          |
| Output signal    | DMX512, RF 2.4GHz |
|                  |                   |

| Safety and EMC       |                    |
|----------------------|--------------------|
| EMC standard (EMC)   | EN301 489,EN 62479 |
| Safety standard(LVD) | EN60950            |
| Radio Equipment(RED) | EN300 328          |
| Certification        | CE,EMC,LVD,RED     |
|                      |                    |

| Warranty |         |
|----------|---------|
| Warranty | 5 years |


| Dimming data        |                       |
|---------------------|-----------------------|
| Input signal        | Touch key + RF 2.4GHz |
| RF Control distance | 30m                   |
| Dimming level       | 256 levels            |
| Dimming range       | 0-100%                |

| Environment             |                 |
|-------------------------|-----------------|
| Operation temperature   | Ta:-30°C ~+55°C |
| Case temperature (Max.) | Tc: +65°C       |
| IP rating               | IP20            |
|                         |                 |
| Weight                  |                 |
| Net weight              | 0.180kg         |

0.237kg


Gross weight

## Mechanical Structures and Installations

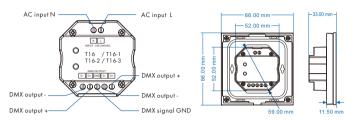


#### Installation diagram:

# Typical base as below:

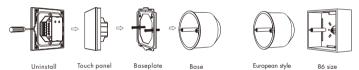

# Key function

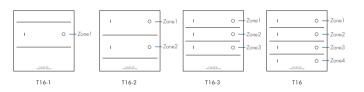

I ─ ON key

Short press: Turn on the light of each zone. Long press(1-6s): Dimming up when light is on.

o — OFF key

Short press: Turn off the light of each zone. Long press(1-6s): Dimming down when light is on.

Turn on key tone: Long press OFF key 5s when zone light is off, will turn on or turn off key tone.

User Manual Ver 2.0.1

### Touch Panel work as DMX512 Master

After connect with DMX decoders, please set the DMX decoders address as below:


DMX decoder's address 001 is controlled by Zone 1.

DMX decoder's address 002 is controlled by Zone 2,

DMX decoder's address 003 is controlled by Zone 3,

DMX decoder's address 004 is controlled by Zone 4.

## Wiring Diagram for touch panel work as DMX512 master

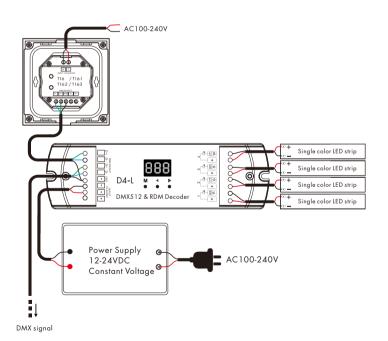

#### Touch Panel work as RF remote

When the touch panel work as RF remote, it need match with other RF 2.4G LED controllers. End user can choose the suitable match/delete ways. Two options are offered for selection:

### Use the controller's Match key

### Match:

Short press match key, immediately press ON key of the touch panel.

The LED indicator fast flash a few times means match is successful

#### Delete.

Press and hold match key for 5s to delete all match,
The LED indicator fast flash a few times
means all matched remotes were deleted.

#### Use Power Restart


#### Match:

Switch off the power of the receiver, then switch on power again, immediately short press ON key 3 times on the touch panel. The light blinks 3 times means match is successful.

#### Delete.

Switch off the power of the receiver, then switch on power again, immediately short press ON key 5 times on the touch panel. The light blinks 5 times means all matched remotes were deleted.

# Wiring Diagram for touch panel work as RF remote

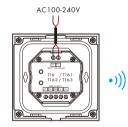

User Manual Ver 2.0.1