

APPETITE

HAVE THE PAP OF YOUR LIFE

The Automatic Pap Maker Original and Automatic Pap Maker Deluxe 3L, 5L, 8L and 12L

User Manual

General Safety Instructions

First Use

Product, Parts and Accessories

Control Panel

Status Messages


Getting Started

Cooking with Appetite

Cleaning and Care

Trouble Shooting

Warranty

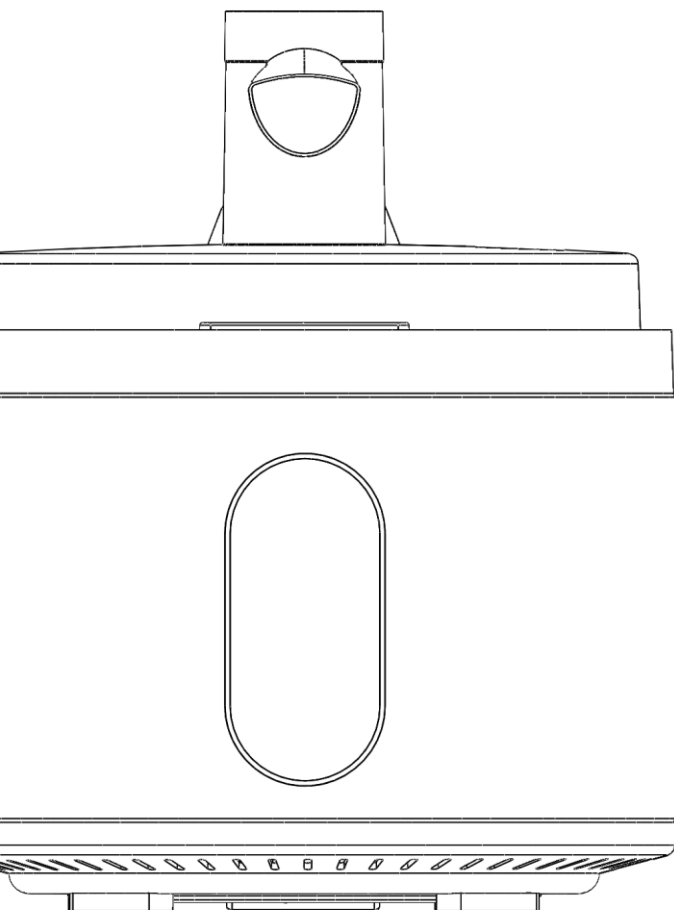

Welcome to Appetite

Thank you for welcoming us into your home.

We believe things you do matters. We believe everyone has a purpose. No matter how big or small, no matter what position you hold.

It could be a stay-at-home dad packing his daughter's lunch box, or an activist fight for equality.

There is a purpose to everything we do.

For those people, we are here to make their life easier, to give them more time to do those things that are meaningful to them.

We do it by automating manual tasks in your daily life by beautifully designed and simple to use products.

If Nelson Mandela had an automatic Pap Maker, it would have been an Appetite.

Happy cooking.



Gordon Zheung
Inventor, Founder and Chief Executive Officer

Go to www.appetite-sa.com

- [Original Recipes](#)
- [New User Tips](#)
- [Getting Started Videos](#)

Find helpful [how-to videos](#), [recipes](#) visit our website.

Welcome to Appetite

Table of Content

General Safety Instructions	4
First Use	9
Special Cord Set Instructions	9
Product Specifications	9
Product, Parts and Accessories.....	11
Top of Lid.....	11
Bottom of Lid	11
Inner Pot.....	12
Cooker body	12
Accessories	13
Control Panel	14
Appetite Automatic Pap Maker Deluxe	14
Appetite Automatic Pap Maker Original.....	15
Status Messages	17
Getting Started	18
Fitting and Removing the Lid	19
Sealing Ring.....	22
Cooking with Appetite.....	23
Making Stiff Pap	23
Making Slap (Soft) Pap.....	27
Making Porridge.....	29
Making Rice (Only for Deluxe Model)	31
Automatic Cleaning	32
Multi Cooker Function (Only for Deluxe Model)	33
Cooking Timer Function (Only for Deluxe Model)	36
Cleaning and Care	37
Trouble Shooting.....	39
Warranty.....	41





General Safety Instructions

General Safety Instructions

When using electrical appliances, basic safety precautions should always be followed:

1. READ THE *GETTING STARTED GUIDE* AND ALL INSTRUCTIONS, SAFEGUARDS, AND WARNINGS BEFORE OPERATING THE APPLIANCE. FAILURE TO FOLLOW THESE SAFEGUARDS AND INSTRUCTIONS MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.
2. **⚠️ WARNING** The Appetite Automatic Pap Maker is a non-pressurized appliance. Use only the Appetite Automatic Pap Maker lid with the Appetite Automatic Pap Maker cooker body. Using any other lids may cause injury and/or damage.
3. **⚠️ WARNING** To avoid any damage to the appliance, DO NOT use the Lid Stand when opening, closing and maneuvering the lid. Refer to [Product, Parts and Accessories](#).
4. **⚠️ WARNING** To avoid any damage to the appliance, DO NOT splash or submerge the lid and the cooker body in water. Clean the outside and the inside of the lid and cooker body with a dry or damp cloth only.
5. To avoid any damages, cook only in an authorized Appetite inner pot. DO NOT use the appliance without the removable inner pot installed.
6. Always operate the appliance on a stable, non-combustible, level surface.
7. Do not use the appliance for anything other than its intended use. Failure to follow these instructions may result in injury or property damage.
8. For household use only. Do not use outdoors. Not for commercial use.
9. **⚠️ CAUTION** Do not place the appliance on or in close proximity to a hot gas or electric burner, or a heated oven. Heat from an external source will damage the appliance. Failure to follow these instructions may result in injury or property damage.
10. **⚠️ CAUTION** Do not use the appliance near water or flame. Keep out of direct sunlight. Failure to follow these instructions may result in injury or property damage.
11. **⚠️ CAUTION** Do not touch hot surfaces. Only use side handles for carrying or moving. Extreme caution must be used when moving the appliance containing hot liquids. Do not move the appliance when it is under operation.
12. The cooker body contains electrical components. To avoid electrical shock, do not put liquid of any kind into cooker body, and do not immerse power cord, plug, or the appliance in water or other liquid. Do not rinse the appliance under tap.

General Safety Instructions

13.  Do not fill over the label Portion 4 as indicated on the inner pot. Overfilling may cause a risk of clogging the steam release pipe and damage to the appliance.
14.  This appliance cooks under agitation. Inappropriate use may result in burns, injury and/or property damage. Make certain the appliance is properly closed before operating. Refer to **How to Section**
15. When cooking meat with skin (e.g. sausage with casing), the skin can swell when heated. Do not pierce the skin while it is swollen; this could result in scalding injury.
16.  When cooking food with a doughy or thick texture, or a high fat/oil content, contents may splatter when opening the lid. Please follow recipe instructions for pressure release method.
17.  Do not open the appliance when in operation. Opening appliance while it is still in operation may lead to sudden release of hot contents and may cause burns or other injuries.
18. Do not use this appliance for deep frying with oil.
19. Do not lean over or place your hands or face over the steam release valve when the appliance is in operation or has residual steam. Do not touch the inner metal portion of the lid immediately after the appliance is in operation; this could result in injury.
20. Do not cover or obstruct the steam release valve/the lid and/or the bottom cover with cloth or other objects. Obstructing the steam release valve/the lid and/or the bottom cover can create a safety issue and may cause injury.



Read this manual carefully and completely, and retain for future reference. Failure to adhere to safety instructions may result in serious injury.

General Safety Instructions

21. Turn the appliance off if steam escapes from the sides of the lid and ensure sealing ring is properly installed. **See Trouble Shooting** for more information.
22. To disconnect, press Cancel for 5 seconds, then remove plug from power source.
23. Unplug from the outlet when not in use, as well as before adding or removing parts or accessories, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
24. Regularly inspect the appliance and power cord. Do not operate the appliance if the power cord or plug is damaged, or after the appliance malfunctions or is dropped or damaged in any manner. For assistance, contact Customer Care at www.appetitesa.com
25. **CAUTION** Do not let the power cord hang over edges of tables or counters, or touch hot surfaces or open flame, including the stovetop.
26. **CAUTION** Spilled food can cause serious burns. A short power-supply cord is provided to reduce the hazards resulting from grabbing, entanglement and tripping.
 - Keep the appliance and cord away from children.
 - Never drape the power cord over edges of tables or counters.
 - Never use below-counter power outlets, and never use with an extension cord.
27. Intended for countertop use only. Keep the appliance on a stable, heat-resistant platform. Do not place on anything that may block the vents on the bottom of the appliance. Do not place on a hot stove.
28. **CAUTION** Do not use any accessories or attachments not authorized by Appetite Inc. The use of attachments not recommended by the manufacturer, may cause a risk of injury, fire or electric shock.
29. **CAUTION** Before inserting the inner pot into the appliance, clean the outer surface of the inner pot and the heating element located on the inner surface of the outer pot with a clean, dry cloth. Ensure they are dry and free of food debris.
30. Do not attempt to repair, replace, or modify components of the appliance, as this may cause electric shock, fire or injury, and will void the warranty.



Read this manual carefully and completely, and retain for future reference. Failure to adhere to safety instructions may result in serious injury.

General Safety Instructions

31. Do not tamper with any of the safety mechanisms, as this may result in injury or property damage.
32. Do not use the appliance in electrical systems other than 220 V/55 Hz for South Africa. Do not use with power converters or adapters.
33. This appliance is NOT to be used by children or by persons with reduced physical, sensory, or mental capabilities. Close supervision is necessary when any appliance is used near children and these individuals. Children should not play with this appliance.
34. To prevent personal injury and damage to the appliance, only replace the sealing ring with an authorized Appetite Automatic Pap Maker sealing ring.
35. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
36. Proper maintenance is recommended after each use. Refer to [Care and Cleaning](#). Let the appliance cool to room temperature before cleaning or storage.
37. Never connect this appliance to an external timer switch or separate remote-control system.
38. **⚠ CAUTION** DO NOT touch accessories during or immediately after cooking. To avoid personal injury,
 - Always use oven mitts when removing accessories, and to handle the inner pot.
 - Always place hot accessories on a heat resistant surface or cooking plate.
 - Use extreme caution when disposing of hot grease.

Failure to follow these instructions may result in serious injury or property damage.

39. Do not leave the appliance unattended while in use.
40. **⚠ CAUTION** Extreme caution must be used when the inner pot contains hot oil, hot food, or hot liquids. Improper use, including moving the cooker body, may result in personal injury. Do not move the appliance while it is in use.
41. Oversized foods and/or metal utensils must not be inserted into the inner pot as they may cause risk of fire and/or personal injury.
42. Do not store any materials in the cooker body or inner pot when not in use.



Read this manual carefully and completely, and retain for future reference. Failure to adhere to safety instructions may result in serious injury.

General Safety Instructions

43. Do not place any combustible materials in the cooker body or inner pot, such as paper, cardboard, plastic, Styrofoam or wood.
44. Do not use the included accessories in a microwave, toaster oven, convection or conventional oven, or on a ceramic cooktop, electric coil, gas range, or outdoor grill.
45. The removable inner pot can be extremely heavy when full of ingredients. Care should be taken when lifting the inner pot from the cooker body to avoid burn injury.
46. Use caution when removing the lid. Heat and steam escapes as soon as the lid is removed. Never place your face, hands or exposed skin over the appliance opening where heat and steam escapes when removing the lid.

SAVE THESE INSTRUCTIONS



Read this manual carefully and completely, and retain for future reference. Failure to adhere to safety instructions may result in serious injury.

First Use

First Use

⚠ WARNING

To avoid injury, read and understand instruction manual before using this appliance. Failure to do so may result in injury.

⚠ WARNING

Electrical shock hazard. Use grounded outlet only. DO NOT remove ground. DO NOT use an adapter. DO NOT use an extension cord. Failure to follow instructions can cause electric shock or death.

⚠ WARNING

THE FAILURE TO FOLLOW ANY OF THE IMPORTANT SAFEGUARDS AND THE IMPORTANT INSTRUCTIONS FOR SAFE USE IS A MISUSE OF YOUR APPLIANCE THAT CAN VOID YOUR WARRANTY AND CREATE THE RISK OF SERIOUS INJURY.

Special Cord Set Instructions

As per safety requirements, a short power supply cord (0.6 m to 0.9 m) is provided to reduce the hazards resulting from grabbing, entanglement, and tripping.

This appliance has a 3-prong grounding plug. To reduce the risk of electric shock, plug the power cord into a grounded (earthed) electrical outlet that is easily accessible.

Product Specifications



Automatic Pap Maker 5L Original + Deluxe	5 Liters	1100 watts	220 - 240V / 50-60 Hz	5.35 kg	in: 13.4 L × 12.2 W × 12.5 H cm: 34 L × 31 W × 31.7 H
--	----------	------------	--------------------------	---------	--

First Use



Read this manual carefully and completely, and retain for future reference. Failure to adhere to safety instructions may result in serious injury.

- Read all the [General Safety Instructions](#) before using the appliance. Failure to read and follow the Important Safeguards may result in damage to the appliance, property damage or personal injury.
- Use only the Appetite Automatic Pap Maker lid with the Appetite Automatic Pap Maker cooker body. Using any other pressure cooker lids may cause injury and/or damage.
- Remove all packaging material and accessories from within and around the appliance.
- Place the appliance on a stable, level surface, away from combustible material and external heat sources.
- Do not remove safety warning stickers from the lid or rating label from back of the cooker body.
- Follow [Cleaning Before First Use](#) instructions to clean the appliance before first use.

CAUTION

Do not place the appliance on a stovetop. Heat from an external source will damage the appliance.

Do not place anything on top of the appliance, and do not cover or block the steam release valve or anti-block shield located on the appliance lid.


Product, Parts and Accessories

Product, Parts and Accessories


For the 3, 5, 8 and 12-Liters Automatic Pap Makers.

Before using the Appetite Automatic Pap Maker, verify that all parts are accounted for. If there are any parts missing from your Appetite Automatic Pap Maker, contact us immediately.

Top of Lid

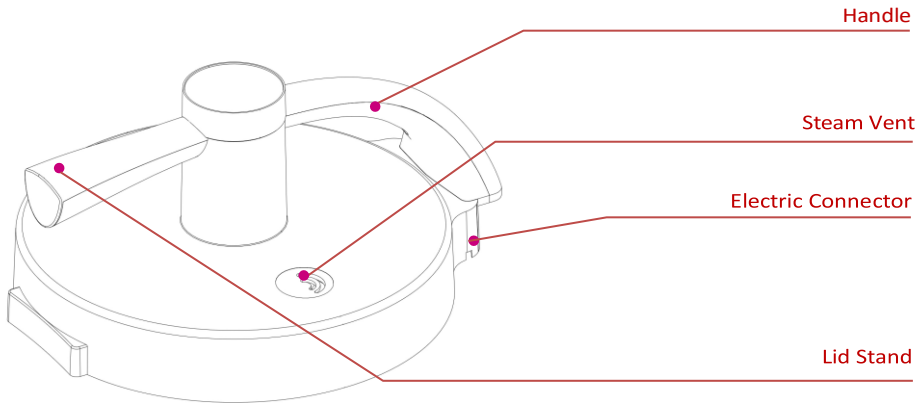


Bottom of Lid

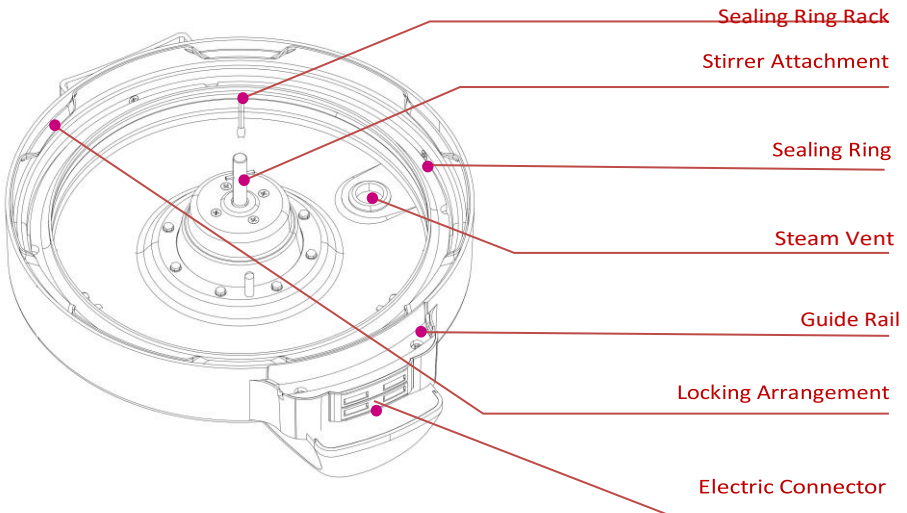


Illustrations are for reference only and may differ from the actual product.

Product, Parts and Accessories

Inner Pot

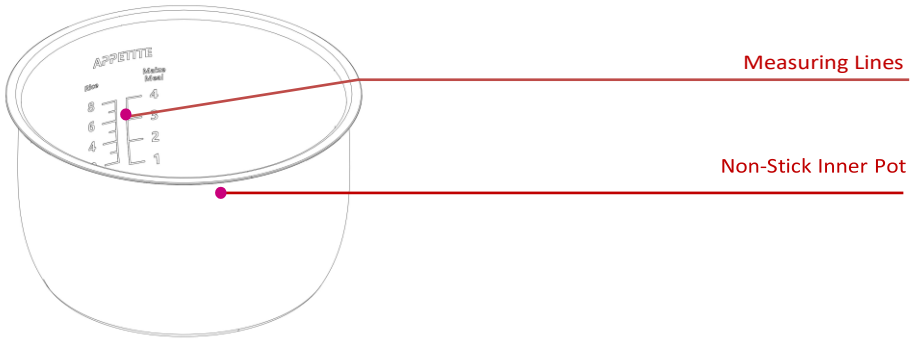


Cooker body

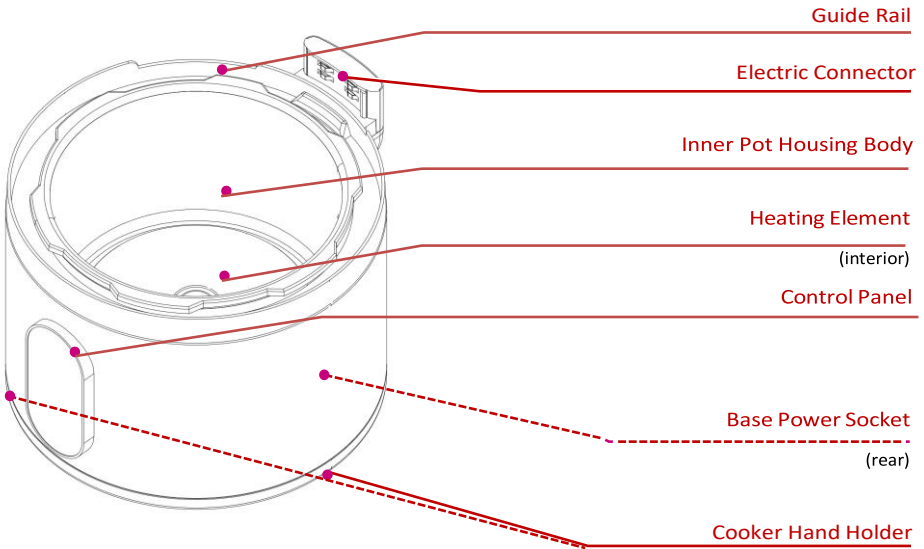


Illustrations are for reference only and may differ from the actual product.

Product, Parts and Accessories


Accessories

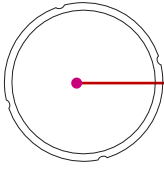


Sealing Ring
(installed in lid)

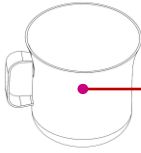


Measuring Container

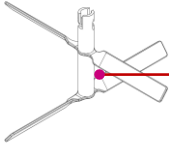

Stirrer
(Detachable From the Lid and Dishwasher Safe)

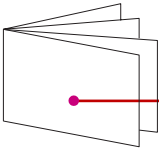

User Manual

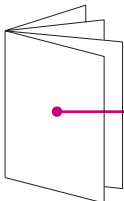

Warranty Card


Illustrations are for reference only and may differ from the actual product.

Control Panel

Control Panel

Appetite Automatic Pap Maker Deluxe

The Appetite Automatic Pap Maker features an intuitive control panel to help make cooking fast and easy.

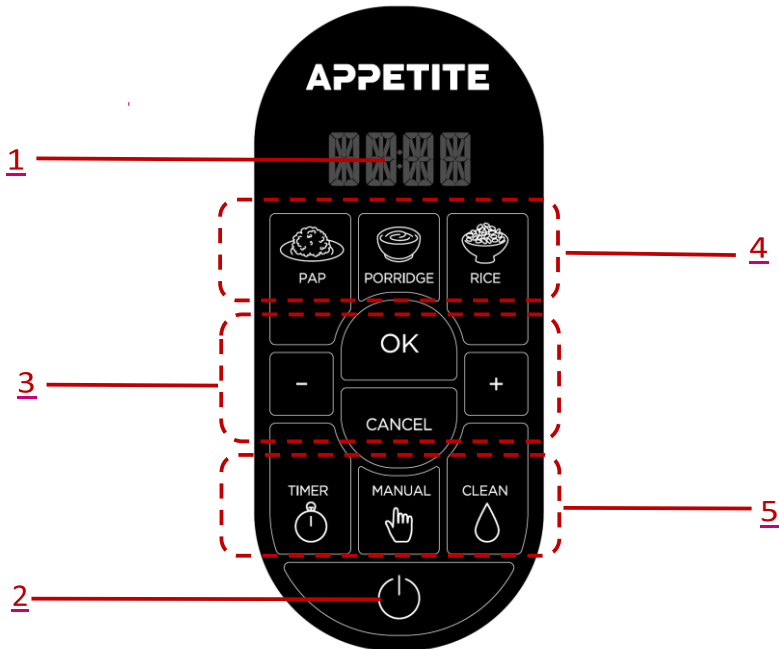

Illustrations are for reference only and may differ from the actual product.

1 Display

- Countdown timer indicates cooking time in hour format: 05:20 is 5 hours, 20 minutes.
- Display also shows [Status Messages](#) as described below.

2 On/Off

- The On/Off button.

3 Control Buttons

- OK – To select.
- CANCEL – To cancel or to go back to pervious manual.

Control Panel

- - / + – To decrease or increase.

4 Automatic Functions


- PAP – To select the automatic pap cooking function.
- Porridge – To select the automatic maize porridge cooking function.
- Rice – To select the automatic rice cooking function.

5 Multi Cooker Functions

- Timer – To select cooking time in the Manual function. Time in hour format: 05:20 is 5 hours, 20 minutes.
- Manual – To select manual cooking function. The manual cooking function enables the user to achieve stove top result with the Appetite Automatic Pap Maker.
- Clean – To select the automatic cleaning function.

See [Cooking With Appetite](#) for more information.

Appetite Automatic Pap Maker Original

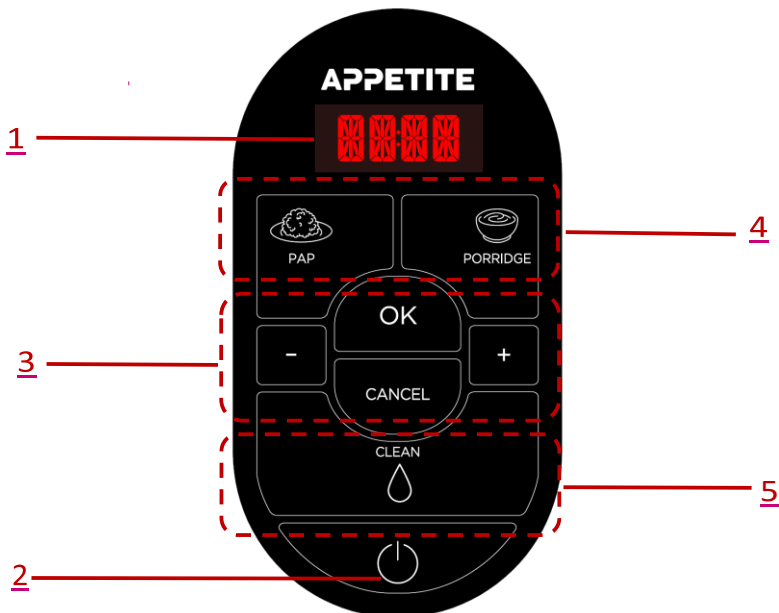

Control Panel

Illustrations are for reference only and may differ from the actual product.

1 Display

- Countdown timer indicates cooking time in hour format: 05:20 is 5 hours, 20 minutes.
- Display also shows [Status Messages](#) as described below.

2 On/Off

- The On/Off button.

3 Control Buttons

- OK – To select.
- CANCEL – To cancel or to go back to previous manual.
- - / + – To decrease or increase.

4 Automatic Functions

- PAP – To select the automatic pap cooking function.
- Porridge – To select the automatic maize porridge cooking function.

5 Multi Cooker Functions

- Clean – To select the automatic cleaning function.

See [Cooking With Appetite](#) for more information.

Status Messages

Status Messages

ADD

Indicates that wither water, rice or maize meal needed to be added in the appliance.

CLEAR

Indicates that the cleaning function has been selected.

COOK

Indicates that the appliance is executing the cooking function.

DONE

Indicates that the cooking function or timer function has been completed.

ERR

Error Message - Indicates that the lid is not securely fitted onto the cooker body.

MAN

Indicates that the manual function has been selected.

ON

Indicates that the appliance has been switched on.

PAP

Indicates that the automatic pap making function has been selected.

PORR

Indicates that the automatic porridge function has been selected.

PREP

Indicates that the appliance is pre-heating the water.

PRESS

Indicates to press the OK button confirm the selection.

RICE

Indicates that the automatic rice cooking function has been selected.

SELE

Indicates to select the number of portions which the user would like to cook.

TIMER

Indicates that the timer function has been selected.

Getting Started

Getting Started


Remove the inner pot and stirrer from the cooker body and wash it with hot water and dish soap. Rinse with warm, clear water and use a soft cloth to dry the outside of the inner pot.

Note: The inner pot and stirrer are dishwasher safe.

Wipe the heating element to ensure it is free of stray packaging particles before returning the inner pot to the cooker body. Failure to do so may damage the cooker.

The inner pot is an integral part of product safety. Food must be placed in the inner pot, and never directly in the cooker body.

To avoid personal injury or damage to the appliance, replace a deformed or damaged inner pot. Use only authorized Appetite inner pots made for the correct model when cooking.

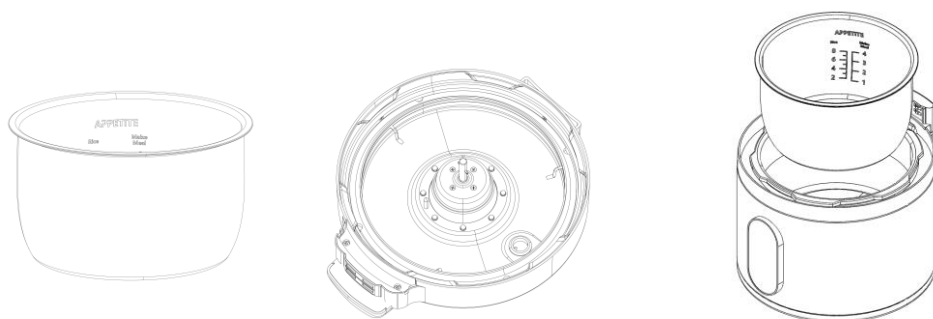

Illustrations are for reference only and may differ from the actual product.

CAUTION

To avoid risk of personal injury and/or property damage, do not pour food or liquid into cooker body.

WARNING

Do not fill the inner pot higher than the **Portion 4 line**, as indicated on the inner pot.


Exercise extreme caution when cooking and venting food such as applesauce, cranberries, pearl barley, oatmeal, split peas, noodles, etc., as these foods may foam, froth, or spatter, and may clog the steam release pipe and/or steam release valve. Do not fill the inner pot higher than the **Portion 2** line when cooking these foods, as indicated on the inner pot.

Getting Started

Fitting and Removing the Lid


The Appetite Automatic Pap Maker lid included is necessary for most cooking processes, and is essential for making pap and porridge. Always ensure to use the Appetite Automatic Pap Maker lid with the Appetite Automatic Pap Maker cooker body.

For replacement parts and accessories, visit our store at www.appetitesa.com

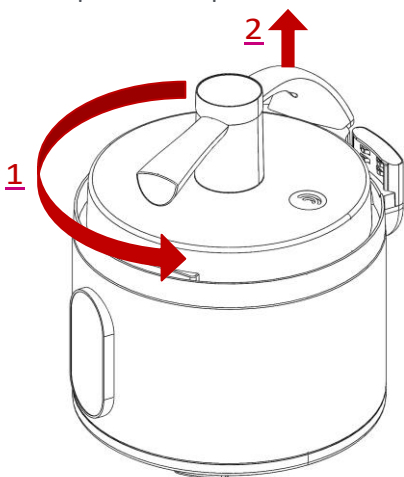

Open and Remove the Lid

Grip the lid handle only and turn it counter-clockwise on the lid to fully disengage the electronic connector, then lift the lid up and off the cooker body.

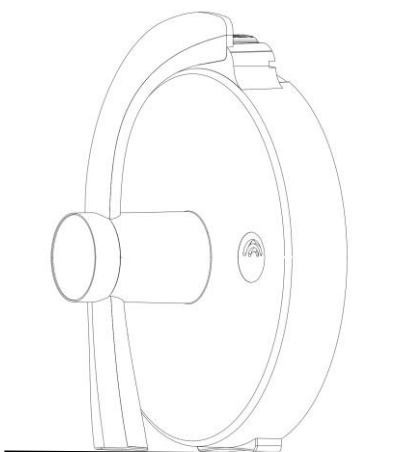

Balancing the Lid

Balance the lid using the Lid stand and the flat surface at the front of the lid on a flat and even surface.

Illustrations are for reference only and may differ from the actual product.


CAUTION

Always check the lid for damage and excessive wear prior to cooking.

WARNING


The Appetite Automatic Pap Maker lid is only compatible with the Appetite Automatic Pap Maker cooker body. Always ensure to use an authorized and compatible Appetite Automatic Pap Maker lid when cooking. Using any other lid may cause injury and/or property damage.

Getting Started

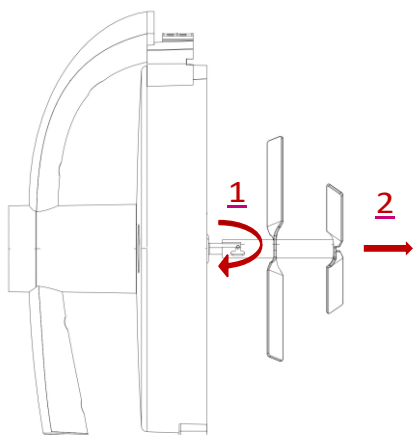

Detaching and Attaching the Stirrer

Align the locking pin on the shaft on the lid to the exit slot on the stirrer by moving the stirrer up or down. Once aligned, rotate and remove the stirrer. To attach the stirrer, align the locking pin with the receiving slot on the stirrer, insert the stirrer and rotate to lock in place.

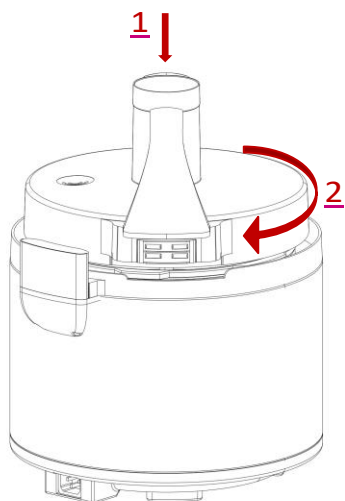

Close the Lid


Align the electronic connector on the lid so that it is to the left of the electronic connector on the cooker body and align the rails on the back of the lid so that it is directly above the receiving slots on the rim of the cooker body. Then lower the lid so the rails and the receiving are engaged. Rotate the lid clockwise to lock the lid in place and to couple the electronic connectors.

Illustrations are for reference only and may differ from the actual product.

CAUTION Always ensure the lid is closed correctly.

WARNING DO NOT cover or obstruct the steam vent on the lid during the cooking process. Failure to do so may cause injury and/or property damage.
Do NOT lean over or touch the steam release assembly.
Do NOT place unprotected skin over the steam vent.

Getting Started

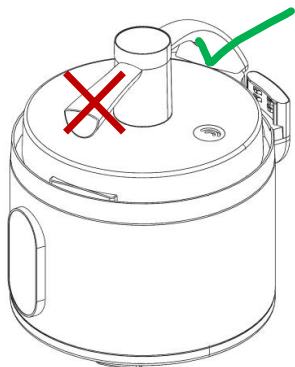

⚠ CAUTION Do Not use the lid stand to open, close or to move the appliance.

Align the locking pin on the shaft on the lid to the exit slot on the stirrer by moving the stirrer up or down. Once aligned, rotate and remove the stirrer. To attach the stirrer, align the locking pin with the receiving slot on the stirrer, insert the stirrer and rotate to lock in place.

Illustrations are for reference only and may differ from the actual product.

⚠ CAUTION Always ensure the lid is closed correctly.

⚠ WARNING DO NOT cover or obstruct the steam vent on the lid during the cooking process. Failure to do so may cause injury and/or property damage.
Do NOT lean over or touch the steam release assembly.
Do NOT place unprotected skin over the steam vent.

Getting Started

Sealing Ring

When the lid is closed, the sealing ring installed on the underside of the lid creates an air-tight seal between the lid and the cooker body.

The sealing ring must be installed before using the cooker and should be cleaned after each use. Only 1 sealing ring should be installed in the lid when using the cooker.

Sealing rings stretch over time with normal use. As an integral part of product safety, the sealing ring should be replaced every 12–18 months or sooner if stretching, deformation, or damage is noticed.

Remove the Sealing Ring


Grip the edge of the silicone rubber and pull the sealing ring out from behind the circular stainless steel sealing ring rack.

With the sealing ring removed, inspect the rack to ensure it is secured, centered, and an even height all the way around the lid. Do not attempt to repair a deformed sealing ring rack.

Install the Sealing Ring

Place the sealing ring over the sealing ring rack and press it into place. Press down firmly to ensure there is no puckering.

When installed properly, the sealing ring is snug behind sealing ring rack and should not fall out when the lid is turned over.

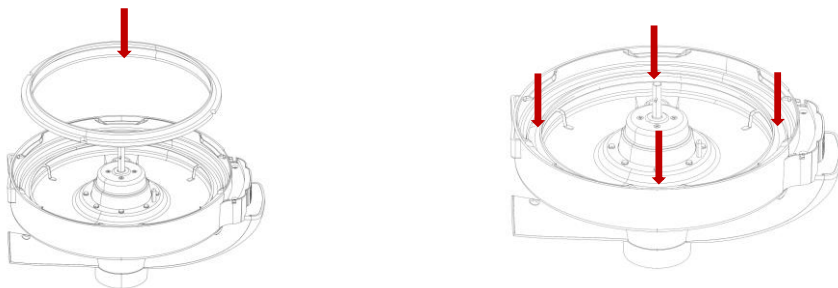

Illustrations are for reference only and may differ from the actual product.

Take Note: Silicone is porous, so it may absorb strong aromas and certain flavors. Keep extra sealing rings on hand to limit the transfer of those aromas and flavors between dishes.

CAUTION








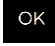 


Always check for cuts, deformation, and correct installation of the sealing ring prior to cooking. Do not use a stretched or damaged sealing ring. Only use authorized Appetite sealing rings. Failure to follow these instructions may cause food to discharge, which may lead to personal injury or property damage.

Cooking with Appetite

Cooking with Appetite

Making Stiff Pap

This tutorial will guide you through the preparation of stiff pap using your Appetite Automatic Pap Maker.

1. First, switch on the appliance by pressing the on/off button . The status message  will be shown on the display.
2. Open and place the lid.
3. Then, attach the stirrer.
4. Remove the cooking vessel from the housing body.
5. Ensure the Measuring Cup for maize meal is ready for use.
6. The cooking vessel and stirrer are dishwasher safe.
7. Choose the function Pap  on the control panel. The status message  will be shown on the display.
8. Then select the number of portions on the control panel, using the +  and -  key. The status message  will be shown on the display.
9. Pour the required amount of water into the cooking vessel, under the label Maize Meal, to the number line matching the number of portions you have selected on the appliance.
10. To guarantee the quality of the recipe, ensure you fill the water precisely to the correct level.
11. Dry the outside of the cooking vessel and insert it back into the housing body.
12. Close the lid securely and press OK  to start heating the water. The status message  will be shown on the display.
13. To avoid scratches, ensure the stirrer does not make contact with the cooking vessel when opening and closing the lid.
14. The appliance will notify you once the water is ready. The status message  will be shown on the display.
15. Then open the lid. Beware the inner surface of the lid, the stirrer and the cooking vessel will be hot during and after the preparation.


Cooking with Appetite

16. Add the required amount of maize meal into the cooking vessel using the measuring cup.
17. The number of cups of maize meal required matches the number of portions you have selected on the appliance. Please see table below:

Number of Portion Selected	Number of Cups of Maize Meal
1	1
2	2
3	3
4	4

18. To guarantee the quality of the recipe, ensure the maize meal is level with the rim of the measuring cup.
19. Close the lid securely to start the cooking process. The status message **COOK** will be shown on the display.
20. Cooking time for each portion is shown in the table below:

Number of Portion Selected	Cooking Time (Minutes)
1	20
2	25
3	30
4	35








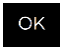 
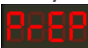 

21. The cooking process can be stopped at any time by pressing the Cancel **CANCEL** button.
22. Please note once the cooking process has been stopped, it cannot be restarted and the appliance automatically resets the preparation.
23. The appliance will notify you once the cooking process is completed. The status message **Done** will be shown on the display.
24. To avoid any scratches, only use a non-metal spoon or spatula to remove the pap from the cooking vessel.
25. To turn off the appliance, press the on/off button .

Cooking with Appetite

26. It is important to clean the Automatic Pap Maker after every use.
27. To clean the appliance, please see our cleaning tutorial with its automatic cleaning function.

Making Medium Stiff Pap


This tutorial will guide you through the preparation of stiff pap using your Appetite Automatic Pap Maker.

1. First, switch on the appliance by pressing the on/off button . The status message  will be shown on the display.
2. Open and place the lid.
3. Then, attach the stirrer.
4. Remove the cooking vessel from the housing body.
5. Ensure the Measuring Cup for maize meal is ready for use.
6. The cooking vessel and stirrer are dishwasher safe.
7. Choose the function Pap  on the control panel. The status message  will be shown on the display.
8. Then select the number of portions on the control panel, using the +  and -  key. The status message  will be shown on the display.
9. Pour the required amount of water into the cooking vessel, under the label Maize Meal, to the number line matching the number of portions you have selected on the appliance.
10. To guarantee the quality of the recipe, ensure you fill the water precisely to the correct level.
11. Dry the outside of the cooking vessel and insert it back into the housing body.
12. Close the lid securely and press OK  to start heating the water. The status message  will be shown on the display.
13. To avoid scratches, ensure the stirrer does not make contact with the cooking vessel when opening and closing the lid.
14. The appliance will notify you once the water is ready. The status message  will be shown on the display.

Cooking with Appetite




15. Then open the lid. Beware the inner surface of the lid, the stirrer and the cooking vessel will be hot during and after the preparation.
16. Add the required amount of maize meal into the cooking vessel using the measuring cup.
17. The number of cups of maize meal required matches the number of portions you have selected on the appliance. Please see table below:

Number of Portion Selected	Number of Cups of Maize Meal
1	0.8
2	1.5
3	2.5
4	3.5

18. Close the lid securely to start the cooking process. The status message  will be shown on the display.

19. Cooking time for each portion is shown in the table below:

Number of Portion Selected	Cooking Time (Minutes)
1	20
2	25
3	30
4	35







 
 

20. The cooking process can be stopped at any time by pressing the Cancel  button.
21. Please note once the cooking process has been stopped, it cannot be restarted and the appliance automatically resets the preparation.
22. The appliance will notify you once the cooking process is completed. The status message  will be shown on the display.
23. To avoid any scratches, only use a non-metal spoon or spatula to remove the pap from the cooking vessel.
24. To turn off the appliance, press the on/off button .

Cooking with Appetite

25. It is important to clean the Automatic Pap Maker after every use.
26. To clean the appliance, please see our cleaning tutorial with its automatic cleaning function.

Making Venda/Pedi (Very Soft) Pap

This tutorial will guide you through the preparation of slap (Soft) pap using your Appetite Automatic Pap Maker.

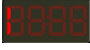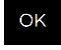1. First, switch on the appliance by pressing the on/off button . The status message  will be shown on the display.
2. Open and place the lid.
3. Then, attach the stirrer.
4. Remove the cooking vessel from the housing body.
5. Ensure the Measuring Cup for maize meal is ready for use.
6. The cooking vessel and stirrer are dishwasher safe.
7. Choose the function PAP  on the control panel. The status message  will be shown on the display.
8. Then select the number of portions on the control panel, using the +  and -  key. The status message  will be shown on the display.
9. Pour the required amount of water into the cooking vessel, under the label Maize Meal, to the number line matching the number of portions you have selected on the appliance.
10. To guarantee the quality of the recipe, ensure you fill the water precisely to the correct level.
11. Dry the outside of the cooking vessel and insert it back into the housing body.
12. Close the lid securely and press OK  to start heating the water. The status message  will be shown on the display.
13. To avoid scratches, ensure the stirrer does not make contact with the cooking vessel when opening and closing the lid.
14. The number of cups of maize meal required matches the number of portions you have selected on the appliance. Please see table below:

Cooking with Appetite

Number of Portion Selected	Number of Cups of Maize Meal
1	0.5
2	1
3	1.5
4	2

15. Mix the required amount of maize meal with cold water thoroughly in a separate container using the measuring cup to avoid any lumps.

CAUTION

To avoid any lumps, always mix maize meal with cold water thoroughly when cooking soft pap and porridge (Ratio smaller than 0.5 cup per Number of Portion Selected)



16. The appliance will notify you once the water is ready. The status message **ADD** will be shown on the display.
17. Then open the lid. Beware the inner surface of the lid, the stirrer and the cooking vessel will be hot during and after the preparation.
18. Add the maize meal and cold water mixture into the cooking vessel.
19. Close the lid securely to start the cooking process. The status message **COOK** will be shown on the display.
20. Cooking time for each portion is shown in the table below:

Number of Portion Selected	Cooking Time (Minutes)
1	20
2	25
3	30
4	35

21. The cooking process can be stopped at any time by pressing the Cancel **CANCEL** button.
22. Please note once the cooking process has been stopped, it cannot be








Cooking with Appetite

restarted and the appliance automatically resets the preparation.

23. The appliance will notify you once the cooking process is completed. The status message  will be shown on the display.
24. To avoid any scratches, only use a non-metal spoon or spatula to remove the pap from the cooking vessel.
25. The appliance will keep warm for up to 30 minutes after cooking is completed.
26. To turn off the appliance, press the on/off button .
27. It is important to clean the Automatic Pap Maker after every use.
28. To clean the appliance, please see our cleaning tutorial with its automatic cleaning function.

Making Porridge

This tutorial will guide you through the preparation of porridge using your Appetite Automatic Pap Maker.

1. First, switch on the appliance by pressing the on/off button . The status message  will be shown on the display.
2. Open and place the lid.
3. Then, attach the stirrer.
4. Remove the cooking vessel from the housing body.
5. Ensure the Measuring Cup for maize meal is ready for use.
6. The cooking vessel and stirrer are dishwasher safe.
7. Choose the function Porridge  on the control panel. The status message  will be shown on the display.
8. Then select the number of portions on the control panel, using the +  and -  key. The status message  will be shown on the display.
9. Pour the required amount of water into the cooking vessel, under the label Maize Meal, to the number line matching the number of portions you have selected on the appliance.
10. To guarantee the quality of the recipe, ensure you fill the water precisely to the correct level.


Cooking with Appetite

11. Dry the outside of the cooking vessel and insert it back into the housing body.
12. Close the lid securely and press **OK** to start heating the water. The status message **PrEP** will be shown on the display.
13. To avoid scratches, ensure the stirrer does not make contact with the cooking vessel when opening and closing the lid.
14. The number of cups of maize meal required matches the number of portions you have selected on the appliance. Please see table below:

Number of Portion Selected	Number of Cups of Maize Meal
1	$\frac{1}{4}$
2	$\frac{1}{2}$
3	$\frac{3}{4}$
4	1





15. Mix the required amount of maize meal with cold water thoroughly in a separate container using the measuring cup.
16. The appliance will notify you once the water is ready. The status message **ADD** will be shown on the display.
17. Then open the lid. Beware the inner surface of the lid, the stirrer and the cooking vessel will be hot during and after the preparation.
18. Add the maize meal and cold water mixture into the cooking vessel.
19. Close the lid securely to start the cooking process. The status message **COOK** will be shown on the display.
20. The cooking process can be stopped at any time by pressing the **CANCEL** button.
21. Please note once the cooking process has been stopped, it cannot be restarted and the appliance automatically resets the preparation.
22. The appliance will notify you once the cooking process is completed. The status message **DONE** will be shown on the display.
23. To avoid any scratches, only use a non-metal spoon or spatula to remove the pap from the cooking vessel.

Cooking with Appetite

24. The appliance will keep warm for up to 30 minutes after cooking is completed.
25. To turn off the appliance, press the on/off button .
26. It is important to clean the Automatic Pap Maker after every use.
27. To clean the appliance, please see our cleaning tutorial with its automatic cleaning function.

Making Rice (Only for Deluxe Model)

 

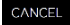 


This tutorial will guide you through the preparation of Rice using your Appetite Automatic Pap Maker.

1. First, switch on the appliance by pressing the on/off button . The status message  will be shown on the display.
2. Open the lid and detach the stirrer.
3. Remove the cooking vessel from the housing body.
4. Ensure the Measuring Cup for Rice is ready for use.
5. Choose the function Rice  on the control panel. The status message  will be shown on the display.
6. Add the required amount of Rice Grain into the cooking vessel using the measuring cup.
7. Pour the required amount of water into the cooking vessel, under the label Rice, to the number line matching the number of portions you wish to make as illustrated in the table below:

Number of Cups of Rice Grain	Water Level According to the Water line
2	2
3	3
4	4
5	5
6	6


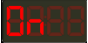 
Cooking with Appetite

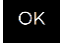7	7
8	8

8. To guarantee the quality of the recipe, ensure you fill the water precisely to the correct level.
9. Dry the outside of the cooking vessel and insert it back into the housing body.
10. Close the lid securely and press OK  to start the cooking process. The status message  will be shown on the display.
11. The cooking process can be stopped at any time by pressing the Cancel  button.
12. Please note once the cooking process has been stopped, it cannot be restarted and the appliance automatically resets the preparation.
13. The appliance will notify you once the cooking process is completed. The status message  will be shown on the display.
14. To avoid any scratches, only use a non-metal spoon or spatula to remove the pap from the cooking vessel.
15. To turn off the appliance, press the on/off button .
16. It is important to clean the Automatic Pap Maker after every use.
17. To clean the appliance, please see our cleaning tutorial with its automatic cleaning function.





Automatic Cleaning

This tutorial will guide you through the Self-Cleaning function of your Appetite Automatic Pap Maker. The self-cleaning function is most effective after the preparation of stiff pap, soft pap or porridge.

1. First, switch on the appliance by pressing the On/Off button . The status message  will be shown on the display.
2. Remove the cooking vessel from the housing body.
3. Beware, the cooking vessel might be hot from previous food preparations.
4. To avoid any scratches, ensure the stirrer does not make contact with the



Cooking with Appetite

cooking vessel when opening or closing the lid.










5. Empty any contents in the cooking vessel by using a non-metal spoon or spatula.
6. Pour the required amount of water into the cooking vessel as indicated by the Portion 4 label on the water line labelled Maize Meal.
7. Dry the outside of the cooking vessel and place the cooking vessel back into the housing body.
8. Close the lid securely as shown.
9. On the control panel, select the Clean  function. The status message  will be shown on the display.
10. Press OK  to start the cleaning cycle.
11. The appliance will notify you once the cleaning cycle is completed. The status message  will be shown on the display.
12. Open and place the lid.
13. Beware, the cooking vessel, stirrer and the inner surface of the lid are hot after the cleaning cycle.
14. After the device has cooled down, using a dry towel, remove the cooking vessel from the housing body and empty the content of the cooking vessel.
15. Remove the stirrer from the lid.
16. Rinse the cooking vessel and stirrer under clean running water to remove any residue.
17. Using a towel, wipe dry the cooking vessel and stirrer.

Multi Cooker Function (Only for Deluxe Model)

This tutorial will guide you through the Manual function of your Appetite Automatic Pap Maker. The Manual function will allow you to use your appliance to achieve normal stove top result.

1. First, switch on the appliance by pressing the On/Off button . The status message  will be shown on the display.
2. Open the lid.

Cooking with Appetite

3. On the control panel, select the Manual  function. The status message  will be shown on the display.
4. Use the +  / -  keys to select the level of heat from the heating element. The levels ranges from 100w (lowest), to 1100w(highest). Then press OK  to start cooking.
5. To change the power output during the cooking process, Use the +  / -  keys.
6. Press Cancel  to stop the manual cooking process or alternatively, press and hold the On/Off button  to switch off the appliance.

Power Output (w)	Function
100	Keep Warm
200	Slow Cooker Low Heat
300	Slow Cooker High Heat
400	Stove Top Heat Level 1
500	Stove Top Heat Level 2
600	Stove Top Heat Level 3
700	Stove Top Heat Level 4
800	Stove Top Heat Level 5
900	Stove Top Heat Level 6
1000	Stove Top Heat Level 7

Cooking with Appetite



To avoid scorching or scalding injury, when cooking food with a doughy or thick texture, or a high fat/oil content, contents may splatter when opening the lid. Do Not leave the appliance completely unattended while cooking.














Do Not use this appliance for deep frying with oil.

Cooking with Appetite

Cooking Timer Function (Only for Deluxe Model)

This tutorial will guide you through the Cooking Timer function of your Appetite Automatic Pap Maker. The Cooking Timer function can only be engaged when you are cooking in Manual Mode. The Cooking Timer function will allow you to set the cooking time.

1. While cooking in the Manual Function, select the Timer  function. The status message  will be shown on the display.
2. Countdown timer indicates cooking time in hour format: 02:20 is 2 hours, 20 minutes. The user will have to select first the hours and then the minutes desired.
3. Hours – Press the Timer  button, then use the +  / -  keys to select the cooking time. First to select the number of hours required.
After selecting the desired cooking time in hours, press the Timer  key to confirm the number of hours.
4. Minutes - Use the +  / -  keys to select the cooking time in minutes. Press the Timer  key to confirm the number of minutes.
5. Cooking timer indicates cooking time in hour format: 02:20 is 2 hours, 20 minutes.
6. Press OK  to start the timer.
7. To cancel the during the timer, press Cancel  exit Timer mode.
8. When completed, the cooking function will switch off.

Cleaning and Care

Cleaning and Care

Clean your Appetite Automatic Pap Maker after each use. For cleaning after making Pap or Maize Porridge, please see the Automatic Cleaning Function.

Always unplug your Appetite Automatic Pap Maker and let it cool to room temperature before cleaning. Let all surfaces dry thoroughly before use, and before storage.

Part	Instruction	Cleaning Method
Accessories <ul style="list-style-type: none">• Steam Rack• Glass Lid	<ul style="list-style-type: none">• Wash after each use.• Never use harsh chemical detergents, powders or scouring pads on accessories.• For dishwasher, place on top rack.• Empty and rinse condensation collector after each use.	Dishwasher Safe* and Hand Washable
Parts <ul style="list-style-type: none">• Stirrer• Sealing Ring• Measuring Container	<ul style="list-style-type: none">• Wash after each use with hot water and mild dish soap and allow to air dry, or place in top rack of dishwasher.• With stirrer removed, clean the drive shaft to prevent clogging.• Remove the sealing ring and wash after each use.• Store sealing rings in a well-ventilated area to decrease residual odor of flavorful meals.	
Inner Pot	<ul style="list-style-type: none">• If there is tough or burned food residue at the bottom, soak in hot water for a few hours for easy cleaning.• Wash after each use.• Ensure all exterior surfaces are dry before placing in cooker body.• Only use a cloths or sponge to clean the surfaces of the inner pot. Using any abrasive cleaning materials to clean the inner pot will cause damage to the non-stick coating.	

**Some discoloration may occur after machine washing, but this will not affect the cooker's safety or performance.*

⚠ WARNING To avoid any damage to the appliance, DO NOT splash or submerge the lid and the cooker body in water. Clean the outside and the inside of the lid and cooker body with a dry or dampened cloth only.

⚠ WARNING To avoid any damage to the appliance, DO NOT splash or submerge the lid and the cooker body in water. Clean the outside and the inside of the lid and cooker body with a dry or dampened cloth only.


Cleaning and Care

Part	Instruction	Cleaning Method
Detachable Power Cord (3 and 6 Quart Only)	<ul style="list-style-type: none"> Use a barely-damp cloth to wipe any particles off power cord. 	Damp Cloth Only
Cooker body and Lid	<ul style="list-style-type: none"> Wipe the inside of the cooker body as well as the condensation rim with a barely-damp cloth and allow to air dry. Clean cooker body and control panel with a soft, barely-damp cloth or sponge. Wipe the inside of the lid with a barely-damp cloth and allow to air dry. Remove the sealing ring and wash after each use. In the case of oil residue at the inside of the lid, first wipe the inside use a damped cloth infuse with mild dish soap, thereafter, wipe again with a damped cloth to remove any soap residue. Dry the cooker body and lid after cleaning. 	

⚠ WARNING			
Ensure heating element remains dry at all times.	Do not immerse cooker body in water or attempt to cycle through dishwasher.	Do not submerge power cord at any time.	Do not wet prongs of power cord.

Trouble Shooting

Trouble Shooting

Problem	Possible Reason	Solution
Difficulty closing lid	Sealing ring not properly installed	Do Not force the lid close when there is difficulty closing the lid. Reposition sealing ring, ensure it is snug behind sealing ring rack.
	Lid and cooker body not aligned properly.	Do Not force the lid close when there is difficulty closing the lid. Return the lid to the fully open position and align the lid to the cooker body.
	Stirrer not attached properly	Do Not force the lid close when there is difficulty closing the lid. Detach the stirrer and re-attach again.
Difficulty opening lid	Pap is left unattended after cooking is completed for a considerable amount of time. The Pap has hardened and are now stuck to the stirrer.	Open the lid gently, the it will be heavier than usual. Remove the stirrer while the lid is vertically above the cooker body to release the stirrer/pap. Soak the stirrer and lid mixture with hot water for several hours until the stirrer can be removed from the pap.
	Obstruction at the guide rails.	Ensure the guide rails are free of any objects.
 WARNING Do Not force the lid open when there is difficulty opening the lid. Forcing the lid open can cause damage to the appliance.		
Inner pot is rotating during the cooking process	Sealing ring too old, damaged or not properly installed.	Replace sealing ring.
	No sealing ring in lid	Install sealing ring.
	Food debris attached to sealing ring	Remove sealing ring and clean thoroughly.
	Lid not closed properly	Open, then close lid.
	Sealing ring rack is warped or off-centre	Remove sealing ring from lid, check sealing ring rack for bends or warps. Contact Customer Care on www.appetitesa.com
	Inner pot rim may be misshapen	Replace inner pot. Check for deformation and contact Customer Care on www.appetitesa.com

Trouble Shooting

Steam leaks from side of lid	No sealing ring in lid	Install sealing ring.
	Sealing ring damaged or not properly installed	Replace sealing ring.
	Food debris attached to sealing ring	Remove sealing ring and clean thoroughly.
	Lid not closed properly	Open, then close lid.
	Sealing ring rack is warped or off-center	Remove sealing ring from lid, check sealing ring rack for bends or warps. Contact Customer Care on www.appetitesa.com
	Inner pot rim may be misshapen	Check for deformation and contact Customer Care on www.appetitesa.com
Steam/liquid gushes from steam vent when cooking	Too much content in the inner pot	Do not overfill the inner pot. Follow the portions guide as described in Cooking with Appetite
	Steam vent might be blocked	Clean the steam vent with a damp cloth from under the lid.
Display remains blank after connecting the power cord	Bad power connection or no power	Inspect power cord for damage. If damage is noticed, contact Customer Care on www.appetitesa.com Check outlet to ensure it is powered.
	Cooker's electrical fuse has blown	Contact Customer Care on www.appetitesa.com
Occasional clicking or light cracking sound	The sound of power switching on and off of the heating element.	This is normal; no action needed.
	Bottom of the inner pot is wet	Wipe exterior surfaces of inner pot. Ensure heating element is dry before inserting inner pot into cooker body.

Warranty

Warranty

Limited Warranty

This Limited Warranty is effective for one year from the date of original consumer purchase. Proof of original purchase date and, if requested by an authorized representative of Appetite South Africa (Pty) Ltd. ("Appetite South Africa"), return of your appliance, is required to obtain service under this Limited Warranty. Provided that this appliance is operated and maintained in accordance with written instructions attached to or furnished with the appliance, Appetite South Africa will, in its sole and exclusive discretion, either: (i) repair defects in materials or workmanship; or (ii) replace the appliance. In the event that your appliance is replaced, the Limited Warranty on the replacement appliance will expire 12 months from the date of original consumer purchase.

This Limited Warranty extends only to the original purchaser and use of the appliance in the Republic of South Africa. This warranty does not cover units that are used outside of the Republic of South Africa.

Any modification or attempted modification to your appliance may interfere with the safe operation of the appliance and will void this Limited Warranty. This Limited Warranty does not apply in respect of any appliance or any part thereof that has been altered or modified unless such alterations or modifications were expressly authorized by an Appetite South Africa representative.

Limitation and Exclusions

The liability of Appetite South Africa, if any, for any allegedly defective appliance or part shall in no circumstances exceed the purchase price of a comparable replacement appliance.

This Limited Warranty does not cover:

1. Damage resulting from accident, alteration, misuse, abuse, neglect, unreasonable use, use contrary to the operating instructions, normal wear and tear, commercial use, improper assembly, disassembly, failure to provide reasonable and necessary maintenance, fire, flood, acts of God or repair by anyone unless directed by an Appetite South Africa Representative;
2. Repairs where your appliance is used for other than normal, personal use or when it is used in a manner that is contrary to published user or operator instructions; or
3. Use of unauthorized parts and accessories, or repairs to parts and systems resulting from unauthorized repairs or modifications made to this appliance.

The cost of repair or replacement under these excluded circumstances shall be paid by you.

Warranty

Disclaimer of Implied Warranties

EXCEPT AS EXPRESSLY PROVIDED HEREIN AND TO THE EXTENT PERMITTED BY LAW, APPETITE SOUTH AFRICA MAKES NO WARRANTIES, CONDITIONS OR REPRESENTATIONS, EXPRESS OR IMPLIED, BY STATUTE, USAGE, CUSTOM OF TRADE OR OTHERWISE WITH RESPECT TO THE APPLIANCES OR PARTS COVERED BY THIS WARRANTY, INCLUDING BUT NOT LIMITED TO, WARRANTIES, CONDITIONS, OR REPRESENTATIONS OF WORKMANSHIP, MERCHANTABILITY, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR DURABILITY.

Some states or provinces do not allow for the exclusion of implied warranties of merchantability or fitness, so this limitation may not apply to you. In these states and provinces, you have only the implied warranties that are expressly required to be provided in accordance with applicable law.

Limitation of Remedies; Exclusion of Incidental and Consequential Damage

YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE APPLIANCE REPAIR OR REPLACEMENT AS PROVIDED HEREIN. APPETITE SOUTH AFRICA SHALL NOT BE LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE APPLIANCE OR DAMAGES WITH RESPECT TO ANY ECONOMIC LOSS, PERSONAL INJURY, LOSS OF PROPERTY, LOSS OF REVENUES OR PROFITS, LOSS OF ENJOYMENT OR USE, COSTS OF REMOVAL, INSTALLATION OR OTHER INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE OR KIND.

Warranty Registration

Please visit www.appetitesa.com to register your new Appetite appliance and validate your warranty within thirty (30) days of purchase. You will be asked to provide the store name, date of purchase, model number (found on the back of your appliance) and serial number (found on the bottom of your appliance) along with your name and email address. The registration will enable us to keep you up to date with product developments, recipes and contact you in the unlikely event of a product safety notification. By registering, you acknowledge that you have read and understand the instructions for use, and warnings set forth in the accompanying instructions.

Warranty Service

To obtain service under this warranty, please contact our Customer Service Department by email to info@appetitesa.com. If we are unable to resolve the problem, you may be asked to send your appliance to the Service Department for quality inspection. Appetite South Africa is not responsible for shipping costs related to warranty service, save and except for shipping costs associated with the return of your appliance from South Africa, as provided herein. When returning your appliance, please include your name, mailing address, email address, phone number, and the original purchase invoice as well as a description of the problem you are encountering with the appliance.

APPETITE

Appetite South Africa (Pty) Ltd
Warehouse 1, Sterling Industrial Park, CNR Sterling &
Samrand Road
Olievenhoutbosch
Centurion
0187
Republic of South Africa

Contact Information:

info@appetitesa.com

www.appetitesa.com