


# ANZZI™

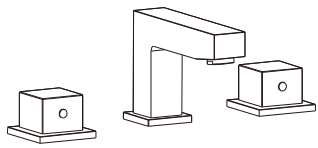

**L-AZ188BN**  
**L-AZ188ORB**


**THREE HOLES BATHROOM VESSEL FAUCET**  
**SOLID BRASS**  
**CERAMIC CARTRIDGE**  
**FLOW RATE:1.2GPM**  
**LIMITED LIFETIME WARRANTY:**



**NSF/ANSI 61**  
**NSF/ANSI 372**

**HAVE QUESTIONS?**

Call us at 1-844-44-ANZZI or visit [www.ANZZI.com](http://www.ANZZI.com)

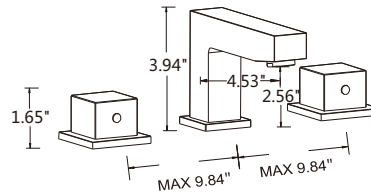

## PREPARATION

**MAKE SURE TO SHUT OFF THE WATER FLOW FROM YOUR HOT AND COLD SUPPLY LINES.**

**MAKE SURE YOUR MOUNTING HOLE IS CUT TO SIZE.**

Make sure your counter is no more than 1.18" thick.


The mounting holes should be 1.38" in diameter.

The center of each hole no more than spaced 9.84" apart.



## ITEMS YOU MAY NEED.


NEED HELP? Give us a call at 1-844-44-ANZZI or visit us online at [www.ANZZI.com](http://www.ANZZI.com).

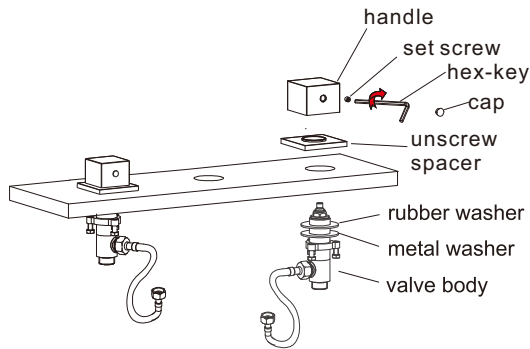

## STEP 1

### Handle installation


1. Use provided hex-key to loosen set screw.
2. Remove handle and unscrew spacer from valve body.
3. Place handle onto cartridge in desired position and tighten set screw with hex-key. Cover handle hole with hot/cold cap.

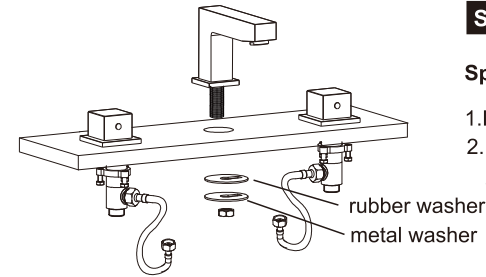

## STEP 2


### Spout installation

1. Disassemble the spout .
2. Place rubber washer, metal washer and nut in order and secure the nut.

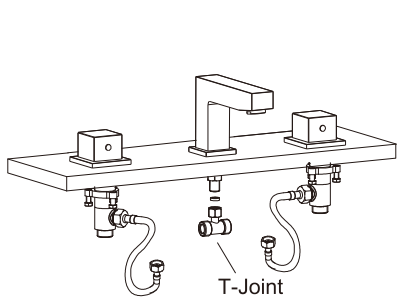


## STEP 3

Connect and tighten the T-Joint to the shank.

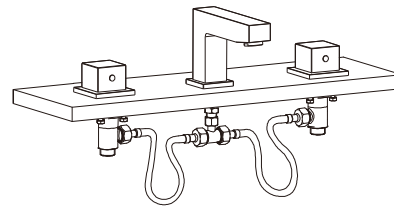

## STEP 4

Connect hoses from valve body to the T-Joint .

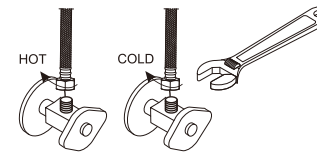

## STEP 5

1. Connect the flexible hose(not included) to water supply valve (not included),and tighten it with adjustable wrench.

### **DON'T OVER TIGHTEN!**

Caution: make sure to connect the hot and cold flexible hoses to supply valves correctly.

### **Warning:**

**Supply valves and flex hoses not included. Purchased separately.**