



bedienungsanleitung  
user manual

# Intensive cleaning womanizer W100 / W500 PRO

It is recommended to use this process to clean your device after every use.



- 1** Ensure the device is switched off and the charging cable is unattached.
- 2** Remove the silicone head to expose the pressure chamber.
- 3** Prepare a cup of boiled water and carefully dip the pressure chamber into the water as shown in picture 1.
- 4** With the pressure chamber submerged in the water, switch the device on and run at the highest intensity for 1 minute. Beware of water splashing.
- 5** Switch the device off and remove from the water.
- 6** Apply a high quality silicone-safe sex toy cleaner to the pressure chamber as shown in picture 2. Repeat steps 3-5.
- 7** Switch the device back on, and shake out any excess water in a sweeping motion.
- 8** Switch the device off and use a dry cloth to wipe away any excess water.
- 9** You may also spray a cotton bud with toy cleaner to gently wipe the inside of the pressure chamber.