


Item No.: HS01B-1

Operation Instruction

1. Product Outline

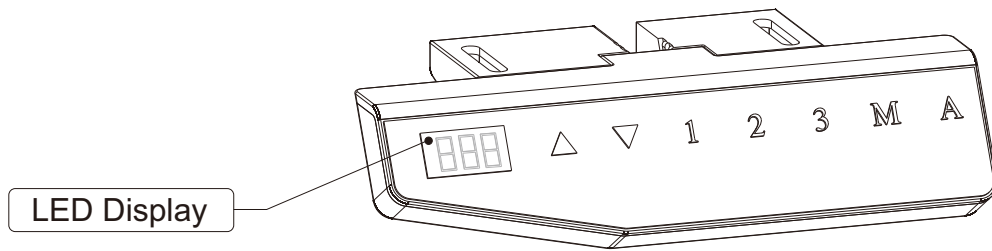

2. Product Specifications

Button introduction: There are seven buttons "▲", "▼", "1", "2", "3", "M", "A"

- (1) "▲" : Adjust the desk upwards
- (2) "▼" : Adjust the desk downwards
- (3) "1" : Position 1, first height position saved by user
- (4) "2" : Position 2, second height position saved by user
- (5) "3" : Position 3, third height position saved by user
- (6) "M" : Height memory function
- (7) "A" : Alert button to remind users changing posture

3. Operating Instructions

- Height Adjustable Function:
Press the "▲" or "▼" button to adjust the table. The LED display shows the current height.
- Height Memory Function:
 - a. Press "▲" or "▼" button and adjust the table to the desired height. Press "M" to save the height, and the screen will display "5-";
Press "1", "2", or "3" to save the height to the corresponding position 1 or 2 or 3, which will show in the display screen as "5-1", "5-2", or "5-3";
 - b. Press "1", "2" and "3" button directly to automatically adjust the height you saved.

● **Reminder Function:**

- Press button "A" to activate the function. The LED display shows "00" or "00".
- Two seconds later, press the "▲" or "▼" button to adjust the reminder time after display screen flashes. The default reminder time is 45 minutes, which is shown as "45". Then press any button to save the setup, or wait 5 seconds until automatically saved. During the countdown, any operation will lead to a repeat countdown. When the countdown finishes, display screen will show "00" and the buzzer will be active with a 10-second sound of "DiDi...DiDi...DiDi...".
- Within the 10-second buzz, press any button will reactivate the countdown. If no operation during the 10-second buzz, there will be another buzz after 5 minutes. No operation during the second buzz will turn off the reminder function.
- Press and hold the "A" button for three seconds to turn off the reminder function. The screen shows "0FF" or "0FF".

● **Anti-collision sensitivity adjustment - optional features:**

- Press and hold the "▲" "▼" button for 5 seconds at the same time to switch the sensitivity.
- "A-0", the anti-collision function is off; "A-1", low sensitivity; "A-2", medium sensitivity; "A-3", high sensitivity;
- During table movements, when tabletop comes in contact with another object, it instantly stops and reverses to avoid damage.
- Press and hold the "▲" "▼" button for 5 seconds at the same time. If the display does not display the above code, there is no anti-collision function.

● **Troubleshooting:**

- Reset: When the screen shows "R5f" or "r5t", press "▼" button until the desk reaches its lowest height and rebounds, it means the reset has been finished.
- When table doesn't work and the screen shows "E01" or "E02", please retry 18 minutes later.
- If screen shows other codes and "▼" button doesn't work, please check the cable connection and then cut off the power for at least 10 seconds. Reconnect to the power and press "▼" button until show "R5f" or "r5t". Long press "▼" button to start the reset process.
- If all these above methods are inefficient, please contact our customer service.

Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.