

Base Blind Corner Assembly Guide

Inspect the Product

A friendly reminder to unwrap and inspect your Kitch products before assembly and installation. You may find a blemish, but no sweat! Our KitchBOX parts are universal, so just rotate the blemish toward the back of your cabinet.

If a remake is required, please take photos of any damages along with the label on the piece and email them to hello@mykitch.ca. We'll review and advise what the next steps will be for you. You have 15 DAYS from receiving your products to report these to us.

Tools Required


- Rubber Deadblow hammer or mallet.
- Cordless drill with adjustable torque setting.
- Kitch Assembly Tool.
 - *Recommended drill settings:* low speed, with torque setting at 50% of capacity, maximum torque of 2.5Nm (1.8ft. lbs).
- #2 Robertson (square drive) screwdriver or screwdriver bit.
- Hardware needed:








Step 1

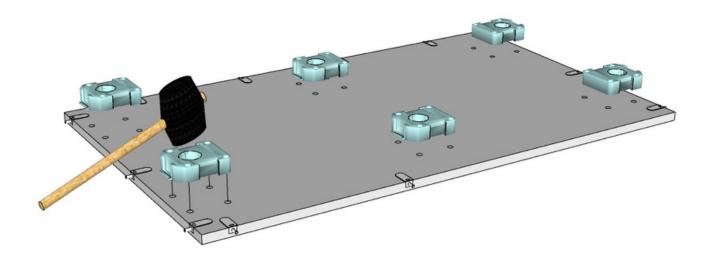

Attach the leg bases to the Bottom (KPBO).

NOTE: If you are NOT using the Kitch leg system, please ignore this step.


Step 2

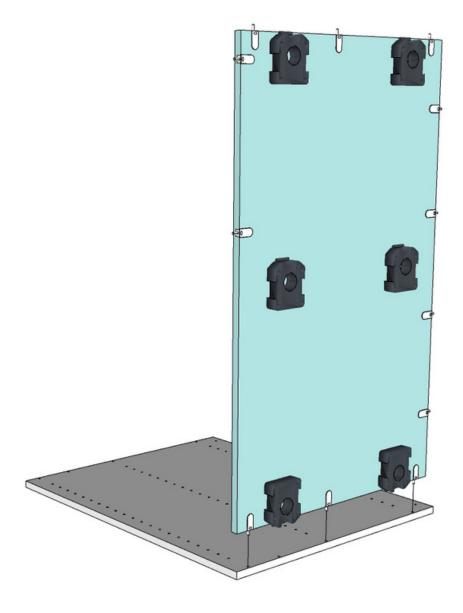

Attach the Bottom (KPBO) to the side Gable (KPGA) using the Kitch Assembly Tool.


Hardware needed:

Step 3

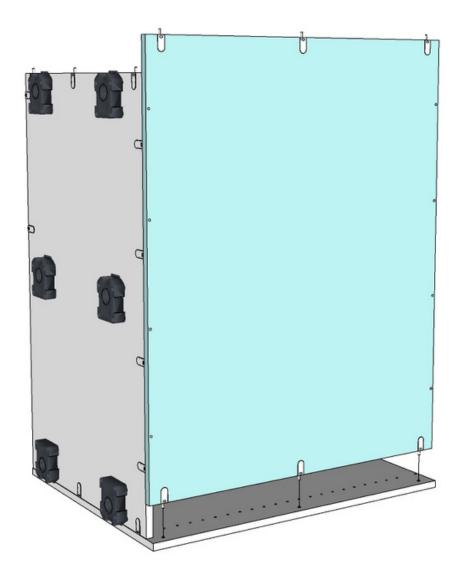

Attach the Back (KPBA) to the side Gable (KPGA), then, tighten the bottom fixings to the back.

Step 4

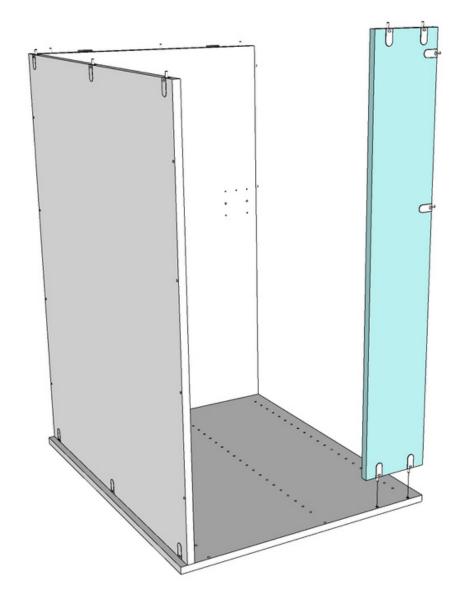

Attach the Top Stretcher (KPST) to the side Gable (KPGA).


Step 5



Attach the remaining side Gable (KPGA) to the box.

Kitch₁₀

Step 6

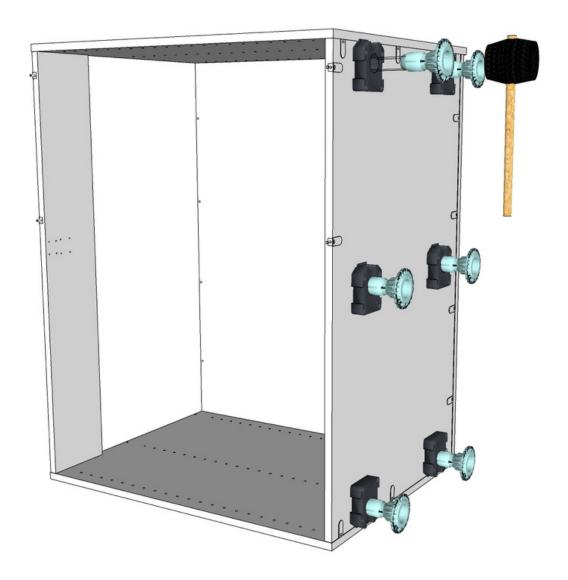


Attach the legs to the Base.

NOTE: If you are NOT using the Kitch leg system, please ignore this step.

Step 7

TWO-TIERED CAROUSEL

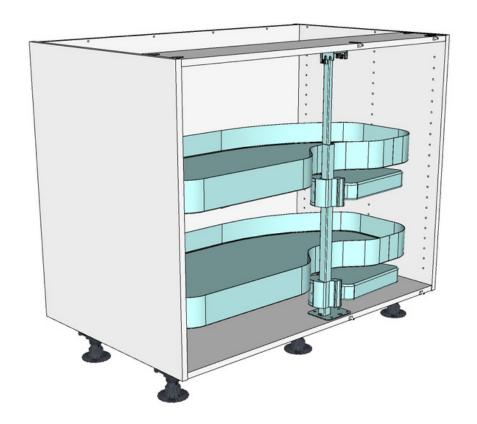


Follow the instructions supplied with the hardware or <u>click here</u> to install the pull-out unit.

Helpful hint: we've done all the drilling for you, so ignore any steps on the pull-out guide instructing the use of a drill.

Kitch₁₀

Step 7

ADJUSTABLE SHELF

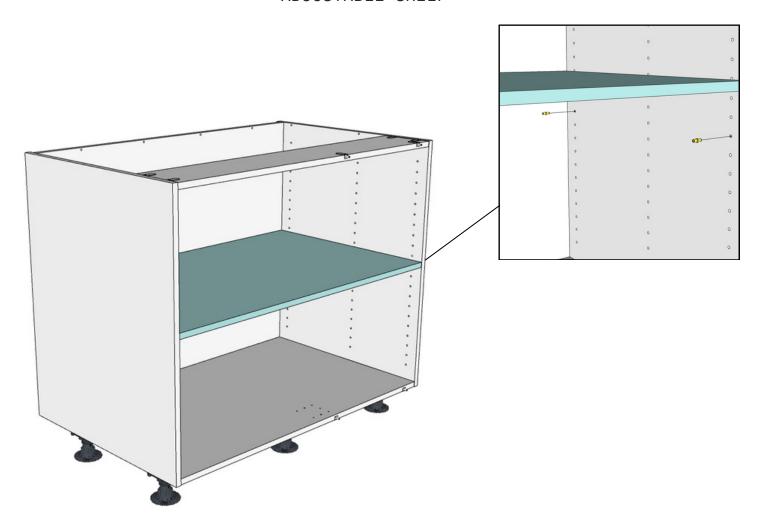


Insert the Adjustable Shelf Pins into the desired height location, then, place the Shelf (KPAS) on top of the pins.

Hardware needed:

Kitch₁₀


Step 8

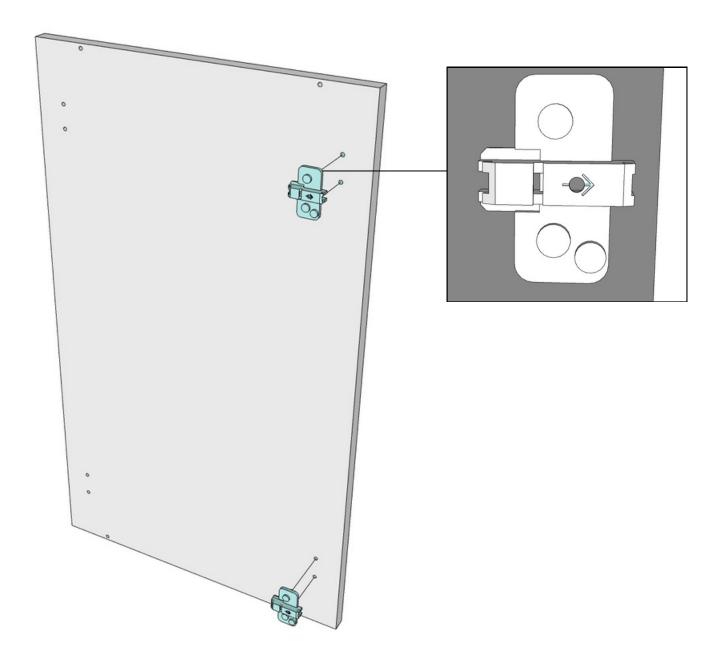

Attach the hinge plates to the Blind Panel (KPBP).


Helpful hint: the arrow on the hinge plate points in the direction that the hinge will attach to the door.

Step 9

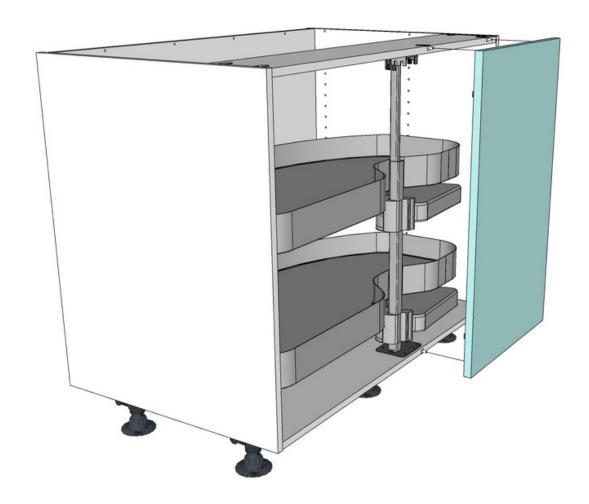

Attach the Blind Panel (KPBP) to the cabinet box.


Step 10

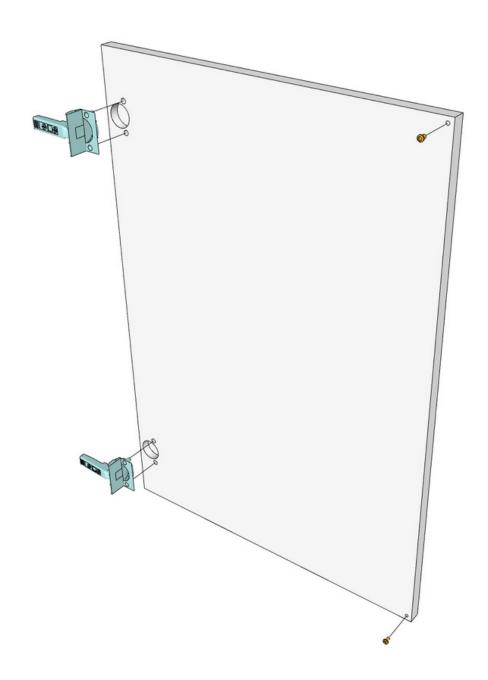

Attach the Blind Corner hinges to the Door (KPDO) and insert the bumpers.

Hardware needed:

Step 11

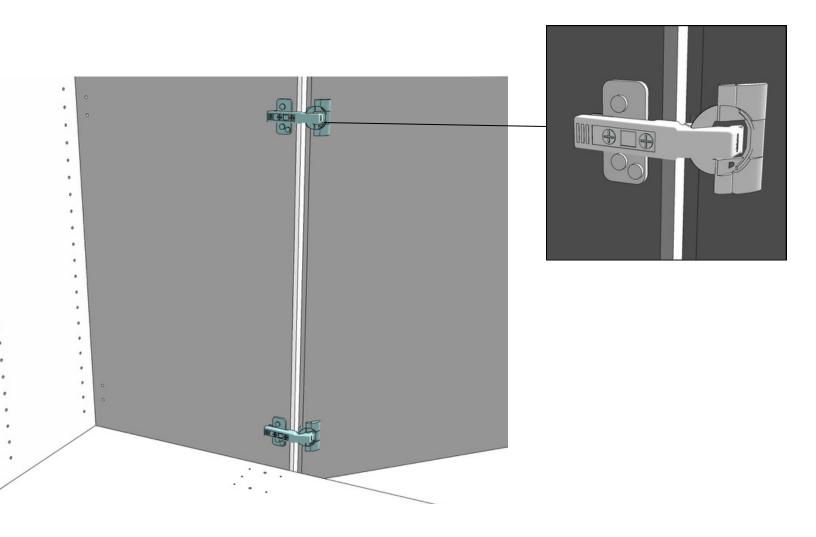

Attach the Door (KPDO) onto the hinge plate on the Blind Panel (KPBP) and click into place. Adjust the door as required.

Note: the pull-out unit has been removed for demonstrative purposes.

Step 12



Your Kitch Base Blind Corner Cabinet is now ready to be installed.