


morphyrichards

Hair dryer HD 041

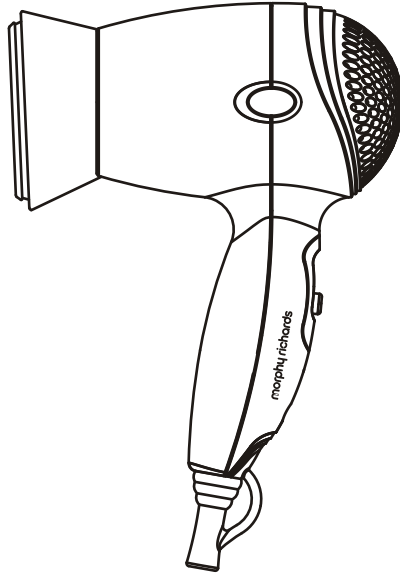

Please read and keep these instructions




getting the best from
your new hair dryer...



www.morphyrichards.co.uk
www.morphyrichardsindia.com

Key features

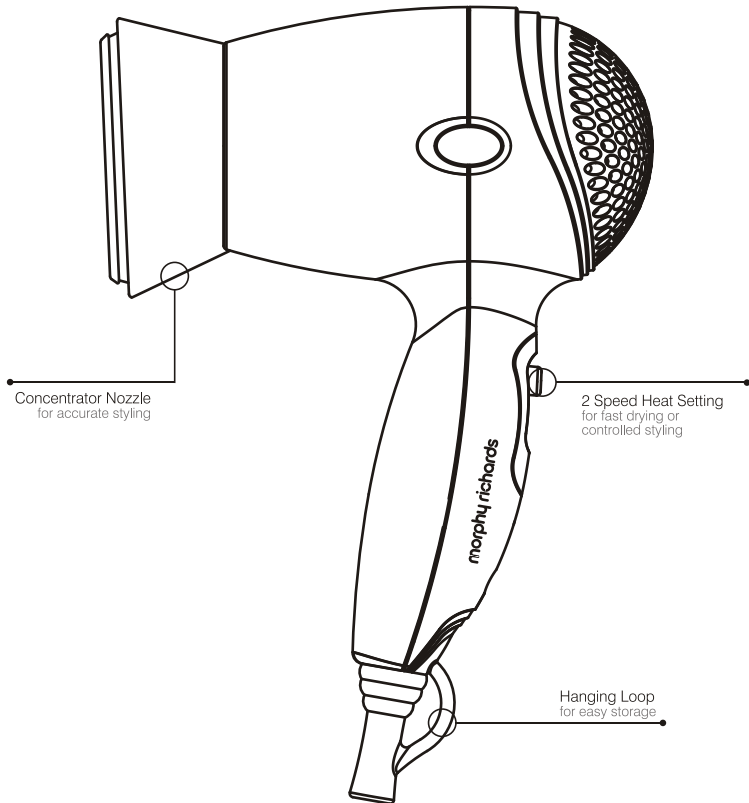

includes :

- I Rubberised grip to make styling more comfortable
-

Important Safety

Instructions

The use of any electrical appliance requires the following of basic common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

WARNING: Danger to the person!

IMPORTANT: Damage to the appliance!

When using your hair appliance, basic safety precautions should always be followed.

- Read all instructions carefully.
- Use the appliance for its intended use only.
- To protect against the risk of electric shock, do not immerse the appliance in water or in any other liquids.
- It is recommended that this appliance should not be used by children.
- Be sure that your household voltage corresponds to the voltage marked on the hair dryer.
- Always unplug your appliance when it is not in use.
- Do not leave the hair dryer switched on whilst unattended.
- Do not take this product into a bathroom or use near a water basin.
- In the event of cable damage do not attempt to replace the mains cable, return to Morphy Richards.
- After use do not store until the product has cooled down.
- Do not place on surfaces, that are likely to be damaged by heat.
- Ensure the filter is cleaned regularly.

Mains Lead

As a safety precaution and to prolong the life of your appliance, do not wrap the mains lead around the appliance as this will cause damage.

Your Safety

- The appliance may only be operated on an electricity supply which corresponds to the voltage and type of current specified on the housing (rating plate).
- *If this hair dryer featured with a voltage selector, please verify the voltage selector is set to the position that corresponds with the supply voltage of your region. Otherwise the appliance might suffer serious damages which will not be covered by the guarantee.*
- **WARNING :** *This hair dryer must not be taken into a bathroom and is not to be used near basins or other vessels containing water.*



- **THIS IS DANGEROUS :** *Do not use hair dryer with damp hands. There is a risk even when hair dryer is switched off. Unplug it after use. For additional protection, the installation of a residual current device (RCD) with rated residual operating current not exceeding 30 mA in the electrical circuit of the house is advisable. Please consult your local electrician.*
- If, however, the appliance should fall into water, pull the power plug out of the socket immediately.
 - Never place your hand in the water.
 - Have your appliance checked by a qualified electrician before using it again.
- Do not direct aerosols or water sprays into your appliance.
- Ensure that your appliance does not get wet (water splashing, etc.) and do not use it with wet hands. If you put your appliance down whilst drying your hair, always switch it off as a precaution.
- The air outlet grille will inevitably become hot during use.
- Do not allow the cable to come onto contact with the air outlet during use.
- When drying your hair in rollers, do not allow any clips, hairpins, etc. to project more than 10 mm (finger width) so as to ensure that they cannot come into contact with the live parts inside the appliance.

- The air inlet and outlet openings should never be obstructed.
- If, however, the airflow is inadvertently obstructed during use, the built-in thermal safety cutout will automatically switch off the appliance. The hair dryer will switch on again automatically after cooling down for a few minutes.
- Always unplug your appliance after the use and before cleaning it.
- This hair dryer is protected against overheating. If the air inlet grille or the air outlet is covered up, the safety cutout will automatically switch off the hair dryer. After cooled down sufficiently, the hair dryer will switch on again and continue to function as usual.
- When the hair dryer is used, high temperatures may occur which can lead to burns if touched. For this reason, you should use the handle provided and warn other users likewise.
- If the grille becomes clogged, it should be cleaned (e.g. with vacuum cleaner or brush), as otherwise the airflow will be obstructed to such an extent that the thermal cutout will operate.
- Keep your hair away from immediate vicinity of the air inlet opening.
- *Please check the cable for damage from time to time. In the event of any necessary repair, including replacement of the mains lead, your appliance should be taken to authorised Morphy Richards Service Centre.*
- *Do not attempt to repair the hair dryer or replace a damaged supply cord yourself. Improperly carried out repairs can expose the user to considerable hazard. Please take the hair dryer to a local service centre for repairs or replacement.*
- In the event of any failure of your hair dryer, do not attempt to repair it at home or allow any unauthorised person to do so. Ensure repairs are carried out only at an authorised Morphy Richards Service Centre.

Children

- Children do not realise the dangers arising from improper use of electrical appliance. Children should not therefore be allowed to use a hair dryer without supervision.

- Please read these operating instructions carefully and explain all necessary precautions to your children.

Other Safety Considerations

- To protect against fire, electric shock and personal injury do not immerse cord, plug or body in water or other liquid.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not use accessories not recommended by the manufacturer as there is the danger of fire, electric shock or personal injury.
- Do not place on or near a hot gas or electric burner or in a heated oven.

Electrical Requirements

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).
- If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

WARNING: The plug removed from the mains lead, if severed, must be destroyed as a plug with bared flexible cord is hazardous if engaged into a live socket outlet.

Styling Tips

Having shampooed your hair, ensure that it is rinsed properly as shampoo that is left in the hair will leave it looking dull.

To maximise shine, rinse your hair in cool water thoroughly.

Comb your hair through with a wide tooth comb to remove tangles before styling.

Styling

Detachable Air Concentrator

Concentrator airflow for spot drying or styling smaller section of hair.

If you are blow drying curly hair into a straight style, you need to concentrate the air down into the shaft of the hair.

CAUTION : The concentrator will inevitably become hot during use.

User instructions

The hair dryer has 2 heat / speed settings to enable quick and effective drying and styling

0 = OFF

1 = Moderated temperature and speed for more controlled drying and styling.

2 = High temperature and speed for quick drying all the excess moistures off your hairs.

2 = High temperature and speed for quick drying all the excess moistures off your hairs.

Cleaning and care

- Always disconnect the hair dryer before cleaning.
- Never immerse the hair dryer in water.
- It is sufficient to wipe the exterior over with a damp cloth and then wipe dry.
- A soft dry brush may be used to remove dust and hairs from the air inlet grille, to ensure proper airflow at all times.

Technical Data

Power Supply	:	AC 230V~50Hz
Wattage	:	1200W

Morphy Richards products are intended for household use only

Morphy Richards has a policy of continuous improvement in product quality and design. The Company, therefore, reserves the right to change the specification of its models at any time.

morphy richards

Morphy Richards Ltd, Mexborough,
South Yorkshire, England, S64 8AJ